

# MACHINE GUIDE

## HOW TO ALIGN A GRACO LINELAZER FRONT WHEEL

### OVERVIEW:

Find out how to realign the front wheel of Graco LineLazer. To check the alignment of the steering wheel prior to starting, choose a smooth flat level surface and push machine forwards and let go. If alignment is correct the machine will track in a straight line. Veering slightly to left or right indicates alignment is not correct, and needs more adjustment. Then follow the below steps to correct alignment issues.

### 1. Find The Alignment Markers


To realign the steering, the two alignment points need to match up

### 2. Untighten the locking nut

Untighten the locking nut with with 19mm spanner.

### 3. Adjust the grub screws

Adjust the grub screws until the centre alignment marker is aligned.

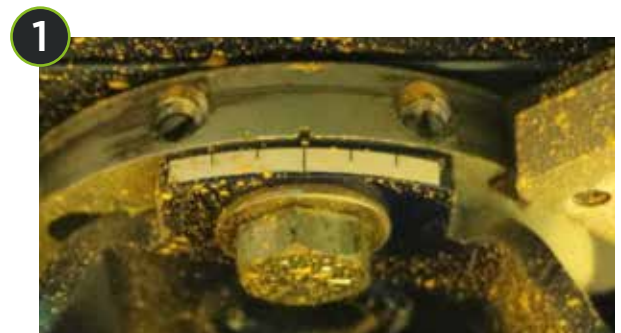

# MACHINE GUIDE

## HOW TO ALIGN A GRACO LINELAZER FRONT WHEEL



### 4. Tighten the locking nut

Tighten the locking nut with the spanner.

### 5. Finally, Tighten The Two Grub

Finally, tighten the two grub screws with screwdriver. To check you have corrected the alignment of the steering wheel correctly choose a smooth flat level surface and push machine forwards and let go. If alignment is correct the machine will track in a straight line. Veering slightly to left or right indicates alignment is not correct, and needs more adjustment.

#### REMEMBER!

Ensure the line marking machine is securely held in place when working on the machine.



#### MEON UK

+44 (0)23 9220 0606  
MAIL@MEONUK.COM  
MEONUK.COM

#### MEON IRELAND

+353 (0)1 840 7647  
INFO@MEONIRELAND.COM  
MEON.IE



# MEON

DELIVERING GREAT SURFACES