


GM (Navigation Style Radios)

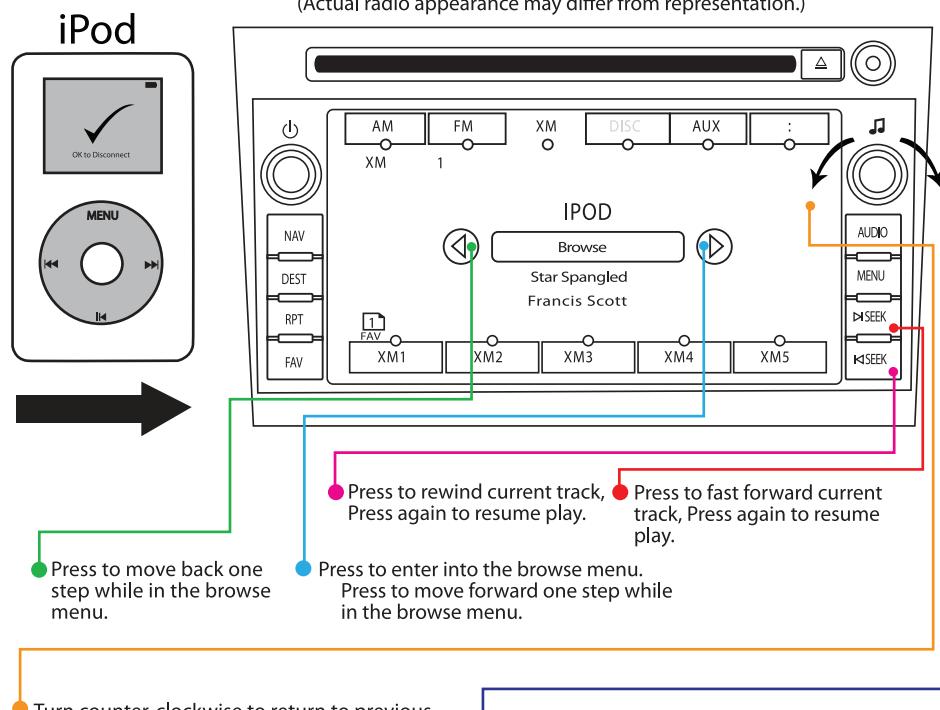


Browsing Example:
To select the song "Star-Spangled Banner" through the Artist category

- 1) Press "▶" to enter into the browse menu
The radio will display "PL>List"
- 2) Turn the rotary knob clockwise until the radio displays "AR:Artist"
Press "▶" to select
The radio will display "AR>All". All browsing menus are displayed in alphabetical order.
- 3) Turn the rotary knob clockwise until the radio displays "AR:Francis Scott Key"
Press "▶" to select
The radio will display "AL>All". All browsing menus are displayed in alphabetical order.
- 4) Turn the rotary knob clockwise until the radio displays "AL:Patriot Hits Vol.1"
Press "▶" to select
The radio will display "TR>All". All browsing menus are displayed in alphabetical order.
- 5) Turn the rotary knob clockwise until the radio displays "TR:Star-Spangled Banner"
Press "▶" to select
The song will begin to play and the display will show the song title.

GM (Navigation Style Radios)

(Actual radio appearance may differ from representation.)

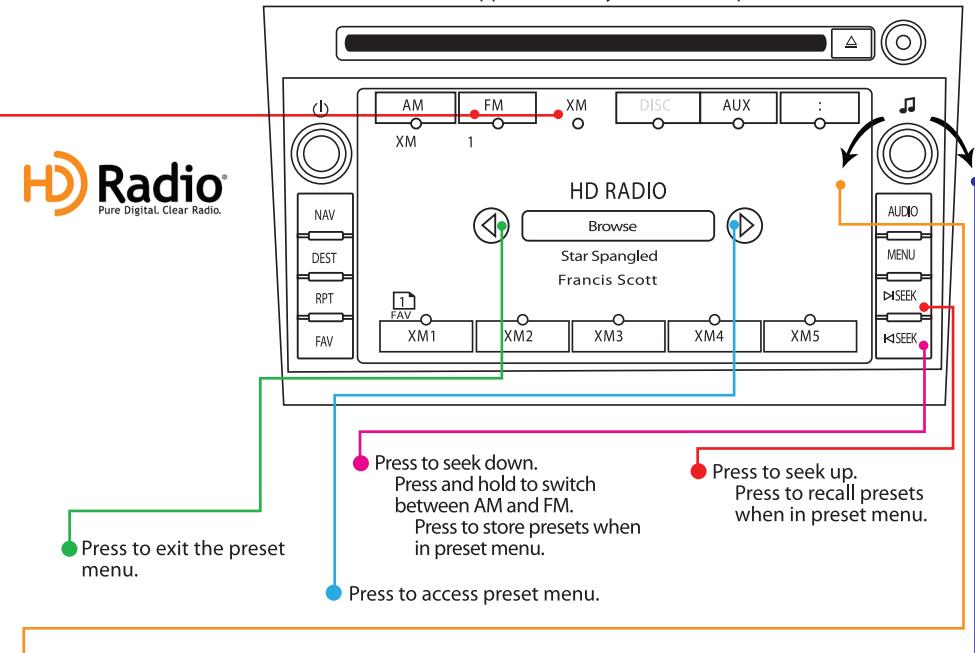

To select an HD radio station and store presets.

- ACCESSING HD STATIONS W/ NAV**
- 1) Press "▶SEEK" to get to the desired station.
Radio will auto lock onto an HD station if available
example: 92.5 HD1 MHZ
 - 2) When locked onto an HD station, press "▶SEEK" to access multi-cast HD stations (if available).
example: 92.5 HD2 MHZ
- STORING PRESET W/ NAV**
- 1) Tune to desired station using the "▶SEEK" button
 - 2) Press the "▶" button to enter the preset menu.
("PRE 1 -" or the last accessed preset will be displayed on the radio)
 - 3) Turn the rotary knob until the desired preset location is displayed on the screen.
example: PRE2 -, PRE3--, PRE4 --, ect....
 - 4) Press the "◀SEEK" button to save the preset.
"PRSAVED" will be displayed on the screen when preset has been successfully saved.
- RECALLING PRESETS W/ NAV**
- 1) Press the "▶" button to enter the preset menu.
Turn the rotary knob until the desired preset is displayed on the screen.
example: "92.5MHz"
 - 2) Press the "▶SEEK" button to select the preset.
- If steering wheel controls are available, press the ▲ button on the steering wheel until desired station is displayed on the screen. After 1 second it will auto select the displayed preset.

Changing Modes:

- 1) Leaving and re-entering the XM mode (press the "FM" icon, then the "XM" icon) will enter the mode select menu. The word "BUSY" may be displayed for a few seconds. In the mode select menu one of the following will be displayed; "SAT", "HD RADIO", "IPOD", "AUX1", or "AUX2". Turn the rotary knob until the desired source is displayed on the screen. Press "▶" to select the displayed mode.