







**VMH50IS** IP67 SPORT Waterproof WIRELESS SPEAKER Speaker Phone & FM Radio




### CONTROL BUTTON FUNCTIONS

-  1. Hold the power button for 3 seconds to switch speaker on and off.
-  2. Short press to switch multiple color LED light patterns:  
*Breathing light: Gradually change from one color to the others*  
*Dedicate only one light color*  
*No light*
-  Long press to play the previous song.  
Short press to turn down the volume.
-  Long press to play the next song.  
Short press to turn up the volume.
-  1. Press to play or pause the music. Press to answer or end the phone call.  
2. Press and hold to reject the incoming calls.  
3. Double click to redial the last phone.  
4. Press and hold to cut off the current wireless connection.  
5. In FM radio mode, long press the button to search and save the radio channel automatically.
-  Short press to switch the mode between wireless and FM radio.

### SPEAKER PHONE INSTRUCTIONS

When connected, you can make and receive phone calls. To make a phone call will connected to the VMH50IS, dial or use VR to place the phone call. Audio will be heard through the speaker.




Phone Controls:

-  Press to Answer or End call / Press and hold to reject an incoming call / Double press to redial last number dialed / Long press to increase Volume
-  Long press to increase Volume
-  Long press to decrease Volume

*Note: You may also use the volume control on your device to adjust volume.*

### FM RADIO INSTRUCTIONS

Press the M mode button to switch between Bluetooth and FM Radio. When using the FM Radio mode for the first time, or in a new geographic location, long press the Play/Pause Button to program available radio stations. This will take about a minute and the VMH50IS will stop "scanning" when complete.

-  Short press to Mute sound / Long press to scan available radio stations
-  Short press to Seek next radio station / Long press to increase Volume
-  Short press to Seek previous radio station / Long press to decrease Volume

---

### CHARGING INSTRUCTONS

*Please charge the speaker for 3 full hours prior to initial use.*

Open the USB Charging Port Cover and connect the micro-USB end of the supplied USB Charging Cable.

Connect the USB end of the charging cable to a 5V USB power source. While charging, the LED will glow red. When charging is complete, approximately 3 hours, the red LED will turn off.

Always ensure the Charging Port Cover is closed tightly after charging.

Playing time is approximately 6 hours per charge.

### PAIRING INSTRUCTONS

Confirm Bluetooth is turned ON in your device settings.

Press and hold the Power Button for 3 seconds until LED's illuminate and VMH50IS responds POWER ON.

Open the Bluetooth menu on your device, and scan for available Bluetooth devices. Select "iSimple Speaker" from the available device list.

Once connected, the VMH50IS will respond PAIRED. *You can now play music from your device play list or music apps.*

**If you have trouble pairing, turn off the VMH50IS and restart/reboot the device. Once the device is re-started, confirm that Bluetooth is ON. Try the pairing procedure again.**

Note: When in Radio Mode, Bluetooth will disconnect. When switching back to Bluetooth, the VMH50IS will auto-connect and respond PAIRED.

### HOW TO POWER ON/OFF & CONTROL LED LIGHTS

Press and hold the POWER button to switch speaker On and Off.


When power is On, short press the POWER button to cycle through the various light modes or turn off the LED lights.









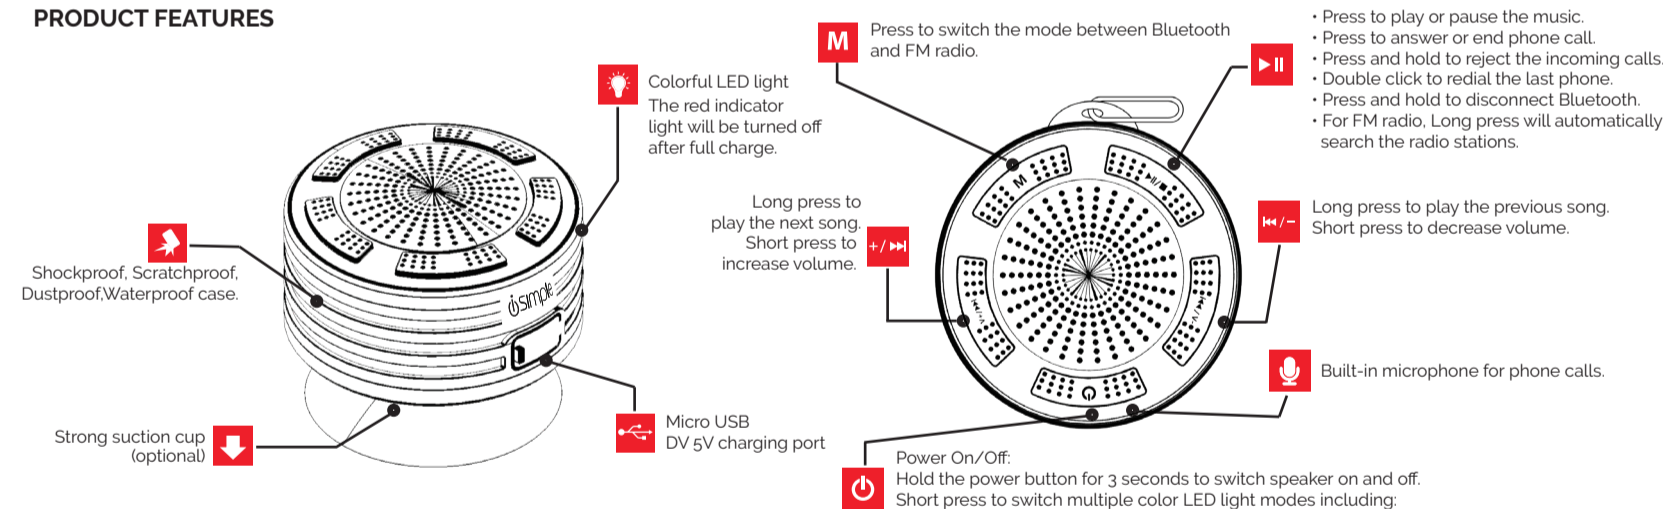

### ADDITIONAL DEVICE PAIRING INFORMATION

When powered on, the VMH50IS will Auto-Connect to the last device paired if the device is available. When the VMH50IS auto-connects to a device it will respond PAIRED.


You may pair up to 5 devices. To pair additional devices, turn off Bluetooth on any device that is already paired. Turn off the VMH50IS, and then follow the steps above "Pairing the VMH50IS to Your Device".

### PRODUCT FEATURES




-  Shockproof, Scratchproof, Dustproof, Waterproof case.
-  Strong suction cup (optional)
-  Colorful LED light  
The red indicator light will be turned off after full charge.
-  Micro USB DV 5V charging port
-  Press to switch the mode between Bluetooth and FM radio.
-  Press to play or pause the music.  
Press to answer or end phone call.  
Press and hold to reject the incoming calls.  
Double click to redial the last phone.  
Press and hold to disconnect Bluetooth.  
For FM radio, Long press will automatically search the radio stations.
-  Long press to play the next song.  
Short press to increase volume.
-  Long press to play the previous song.  
Short press to decrease volume.
-  Built-in microphone for phone calls.
-  Power On/Off:  
Hold the power button for 3 seconds to switch speaker on and off.  
Short press to switch multiple color LED light modes including:  
*Breathing light - Gradual color change from one color to the next - Solid light color - No light.*

### TROUBLE SHOOTING

Symptoms	Causes	Solutions
VMH50IS won't power on	Low battery level	Recharge the battery 
Not able to pair with the speaker	VMH50IS is already paired or not in pairing mode.	Refer to "Wireless pairing section" in the previous page.
Volume too low	Battery is not charged or volume is not set to the maximum on both VMH50IS & media player.	1. Increase the volume via pressing the volume up button. 2. Increase the volume on the media player.
FM Radio Signals	1. To receive optimal FM radio signal, make sure VMH50IS is in an open space, remove from a congested area, or move it away from other electronic devices to reduce the interference. 2. If applicable, plug with the charging cable to use as an external antenna to increase the signal strength.	

### SAFETY INSTRUCTONS


1. Please make sure the plug cover is tight before dropping into the water.
2. Keep the product away from extreme weather to protect the unit against electric shock, explosion or body injury.
3. Do not use the product in any excessive heat, such as direct sunlight, stoves or open flame.
4. Keep this product out of reach of children. Do not use the speaker at excessive levels as it may damage hearing.
5. Clean the product with soft cloth without using harsh corrosive chemicals. Always unplug from the power source before cleaning.
6. Do not puncture or disassemble the exterior surface of the product in any way.
7. Do not insert any metal object into the device to protect the unit against electric shock.



**Technical Support**

US  
AAMP Global  
Tel.: 866-788-4237  
support@iSimple.com  
www.iSimple.com

EU  
AAMP Global UK  
Tel.: +01-800-477-2267  
support@iSimple.com  
www.iSimple.com

CE FC RoHS  MADE IN CHINA