USER MANUAL



LP1530

Rechargeable Lantern & Bluetooth Speaker



🚯 Bluetooth



Features

Rechargeable battery built-in

Bluetooth speaker & controls

360° LEDs for continuous and even light

Power bank to charge portable devices

Variable mode dial

O-ring sealed weather-resistant

Rubberized metal handle

USB-C charging cable included

ANSI/PLATO FL1 STANDARD			
	31/2	J	
MODES	LUMENS	RUN TIME	BEAM DISTANCE
High	572 lm	3h 45m	25m
Low	37 lm	29h 45m	6m
Bluetooth Speaker Run Times on Lowest Volume			
With Lantern on High		3h 45m	
With Lantern on Low		21h 45m	
With Lantern Off		99h 45m	

Lantern Operation Instructions

Lantern On/Off: Turn the dial on the top of the lantern clockwise to turn the light on. Turn the dial counterclockwise to turn the light off.

Adjust Brightness: Turn the dial clockwise to increase the brightness, and counterclockwise to decrease the brightness.



Speaker Operation Instructions

Speaker On: Press the Bluetooth symbol to turn on the speaker. The buttons will illuminate, the speaker will play an audible "on" sound, and it will automatically enter pairing mode.

Bluetooth Pairing: Turn on your Bluetooth device that you would like to pair to the speaker and enter pairing mode. Select LUXPRO 1530. The speaker will play an audible sound indicating the speaker is paired to your device.

Play/Pause: Press the play/pause button to play and pause your music.

Volume: Press the " - " button to turn the volume down. Press the " + " button to turn the volume up. The speaker will beep when max volume is reached.

Next/Back: To skip to the next song, press and hold the " + " button. To start the current song over, press and hold the " - " button. To skip to the previous song, press and hold the " - " button. This will start the current song over, then press and hold the " - " button again to skip to the previous song.

Speaker Off: Press the Bluetooth symbol to turn off the speaker. The speaker will play an audible "off" sound.



The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Luxpro[®] is under license. Other trademarks and trade names are those of their respective owners.

USER MANUAL

🧶 LUX PRO

Charging Instructions

Charging Lantern: To charge the lantern, locate the USB dust cover on the front of the light, near the bottom. Lift the cover to expose the two charging ports.

Plug the supplied USB cable into the smaller USB port on the right. Plug the opposite end of the cable into a USB power source.

A red LED light next to the smaller USB port will light up to indicate the lantern is charging. The lantern is fully charged once the LED turns green.

The lantern and speaker can be used during charging.

The lantern will fully charge in approximately 8 hours.

Charging Other Devices: The LP1530 can also be used as a power bank to charge other devices. To use as a power bank, plug the large end of your charging cable into the larger USB port on the left. Plug the oppostie end of the cable into your device.

The lantern and speaker can be used while the lantern is charging other devices.



Product Warranty

The LP1530 has a Limited 1-Year Warranty Against Manufacturer's Defects from time of purchase. For warranty claims please contact us by calling 801-553-8886 or sending an email to info@simpleproducts.com