



Standard Model	
Setting	Value
1	15
2	17 or 28*
3	3
4	8
5	3
6	5
7	20
8	0
9	1
10	3
11	1
12	0
13	1
14	0
15	0
16	0
17	2
18	0
19	15
20	1
21	0
22	15
23	25
b3.	ver

HD (Discontinued)	
Setting	Value
1	15
2	17 or 28*
3	3
4	8
5	3
6	5
7	20
8	0
9	1
10	3
11	1
12	1
13	1
14	1
15	0
16	0
17	2
18	0
19	15
20	1
21	0
22	15
23	25
b3.	ver

Deluxe DX8, SX8, WX8	
Setting	Value
1	15
2	17
3	3
4	6
5	3
6	5
7	20
8	0
9	1
10	3
11	1
12	1
13	1
14	1
15	0
16	0
17	2
18	0
19	15
20	1
21	0
22	15
23	25
b3.	ver

Deluxe DX10, SX10, WX10	
Setting	Value
1	15
2	17
3	3
4	6
5	3
6	5
7	20
8	0
9	1
10	3
11	1
12	1
13	1
14	1
15	0
16	0
17	2
18	0
19	15
20	1
21	0
22	15
23	25
b3.	ver

Deluxe DX12, SX12, WX12	
Setting	Value
1	15
2	17
3	3
4	6
5	3
6	5
7	20
8	0
9	1
10	3
11	1
12	0
13	1
14	0
15	0
16	0
17	2
18	0
19	15
20	1
21	0
22	15
23	25
b3.	ver

**EZ Lite Cruiser - Default Values for Each Setting - For Use with Joystick Programming Kit**  
 \* value can be 17 (out of 20) or 28 (out of 40) depending on software; \*\* 'ver' identifies software version nun