



**DOG SHOCK TRAINING COLLAR**

**QUICK GUIDE**

Thank you for choosing our dog training collar. Our mission is to offer the best electronic training solutions. We want to ensure your pet's safety by providing you with the tools and techniques to successfully train your pet. You and your pet deserve a companion that includes memorable moments and a shared understanding together. We hope that you will have a good time with your pets. If you have any questions, please contact us for customer service.

Make sure you read the entire guide in order to take advantage of the full functionality of this training system.

◎Components.....	2
◎Features of the Training System.....	2
◎Introduction of Transmitter and Receiver.....	3
● Receiver Collar.....	3
● Transmitter.....	4
◎Operating Guide.....	4
Charge the Transmitter & Receiver.....	4
● Sync the Transmitter and Receiver.....	5
◎Introduction of Functions.....	6
● Intensity Regulation.....	6
● Four Training Functions.....	6
● Notes of Functions.....	9
◎Training Guide.....	9
● General Tips.....	10
● Teaching Your Pet the Positive Tone.....	10
● Find the Best Vibration /Shock Level for Your Pet.....	11
● Teaching Basic Obedience.....	12
● Elimination Unwanted Behavior.....	14
● Notes of Training.....	18
◎F & A.....	19
◎Troubleshooting.....	20
◎Common Size and Weight of Different Dog.....	21

## © Components



## © Features of the Training System

- ✓ Rechargeable Transmitter and Receiver Collar.
- ✓ The Receiver Collar is water-resistance, yet we advise against submerging it into water.


- ✓ 100 levels of vibration and shock by pressing UP/DOWN button
- ✓ Four modes of correction (shock/vibration/beep/light) at your disposal.
- ✓ Power saving design: **1.**The Transmitter, if left unused for 2 minutes, will enter into standby status; if unused for 5 minutes, it will enter into deep sleep status. To activate the Transmitter in separate cases, you can simple press any button (except the LED button) and the Mode button (for 1 second) separately. **2.**The Receiver Collar, if left unused for 5 minutes, will enter into deep sleep status, yet it can be activated by and movement.
- ✓ Up to 2 Receiver Collars can be added to the training system.
- ✓ 2 different sets of contact probes are attached for dogs with different fur thickness.

## ◎ Introduction of Transmitter and Receiver

### ● Receiver Collar



## ● Transmitter

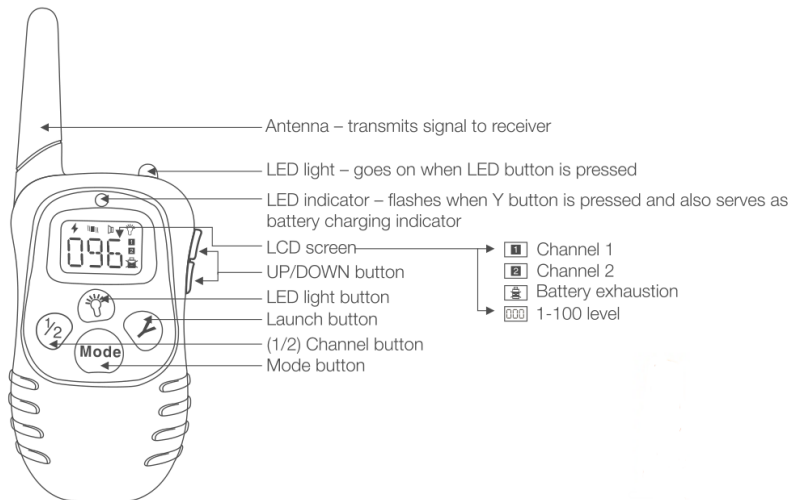


## © Operating Guide


### Charge the Transmitter & Receiver

Please note that, before initial use, you will have to charge both the Transmitter and Receiver Collar for at least six hours. But never overcharge them!

**Note:** Charging plug needs to insert into the charging port vertically. Don't insert it in skew angle. Otherwise it will cause damage or poor contact of charging interface.

Status	Transmitter	Receiver Collar
Running low on battery	 appears on the screen	Receiver beeps for 20s
Charging is in progress	LED indicator remains lit in red	Red LED light remains on
Charging is complete	LED indicator goes off	Red LED light goes off

## ● Sync the Transmitter and Receiver

1. Please turn on the Transmitter by press the Mode button for 5-10s. Select Channel 1 by press channel button (the small icon  can be seen at the upper right of the LED screen).

2. Use the needle to poke through the Reset hole of the Receiver Collar and press the inner button gently for 5s. Red light will begin to flash and you will hear the first beep.



3. Press the Y button of Transmitter immediately and you will hear the second beep, indicating that syncing has been finished.. If not, please follow step 2 and try again. (You're allowed up to 20s to press the Y button when the

first beep is heard.)



4. To sync the Transmitter and the second Receiver Collar, select Channel 2 and repeat the above steps.

**Note:** Channel 1 and Channel 2 are in no order, so you can set any Receiver Collar to any Channel according to you custom.

## © Introduction of Functions

The following methods will help you ascertain whether this training system functions properly. Please make sure that the Transmitter and Receiver Collar have been synced successfully.

### ● Intensity Regulation

The shock and vibration function can be set from 0 to 100 by pressing the UP/DOWN buttons on right hand side.

### ● Four Training Functions



Switch the four modes by press the Mode button.

### 1. Beep Function

Turn on the Transmitter and then switch to the Beep mode. Press the Y button and the Receiver will beep, signifying that the Beep function works.



### 2. Vibration Function

(1) Turn on the Transmitter, switch to Vibration mode and then press the UP/DOWN button to adjust the vibration level.



(2) Press Y button, Receiver Collar will vibrate, that means Vibration Function works. Please make sure the vibration level is well above 0 when testing the function.

### 3. Shock Function

Screw the wires of the test bulb around the contact probes of the receiver. Turn on the Transmitter by pressing the Mode button for 1s, switch to Shock mode and then press the UP/DOWN button to adjust the intensity level. Press the Y button and the test bulb will flash, signifying that the Shock function works. Please make sure that the Shock level is well above 0 when testing the function.



### 4. LED Light Function

Turn on the Transmitter and then switch to LED light mode. Press the Y button and then the receiver will flash, signifying that the LED light function works.



## ● Notes of Functions

1. The screen of the Transmitter does not display when:

(1) It is in Standby mode: To save power, the Transmitter will go into standby mode if there's no operation within 2 minutes; you can press any button except for the LED light button to activate it and then its screen will display.

(2) It is in deep sleep mode: To save power, the Transmitter will go into deep sleep mode if there's no operation in 5 minutes; you can hold and press the Mode button for 5s to activate it and then its screen will display.

2. The Receiver will go into deep sleep mode if there's no operation within 5 minutes. Any movement will activate it. If the Receiver gives no response when you press the Y button and its indicator is not on either, then you can shake it or let your dog move to activate it. (If you shake the Receiver, you will hear a rattling noise caused by the built-in vibration sensor which indicates that it is in working status.)

## © Training Guide

## ● **General Tips**

1. Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with training, your pet may become confused.
2. Be consistent. Correct your pet every time he misbehaves.
3. Unless you can supervise him, it is recommended that you restrict your pet from situations in which he has a history of misbehaving. However, setting up a situation as training session can dramatically improve your chances of success.
4. If your pet reacts to the tones by hiding or acting fearful, redirect his attention to a simple and appropriate behavior, such as the “sit” command.
5. Pets should be at least 6 months old before using the training collar.
6. Only let responsible family members use the training collar. It is not a toy!
7. Other pets in hearing range will be affected by the training tone. Therefore, training sessions should be conducted out of hearing range of other pets.

**WARNING:** Never use the training collar to correct or eliminate any form of aggressive behavior. We recommend you contact your local veterinarian or professional trainer to determine if your pet might be aggressive.

## ● **Teaching Your Pet the Positive Tone**

Before using the training collar to correct your pet, spend 10 to 15 minutes per day for 2 or 3 days helping him create the association of the tone with reward and praise. To accomplish this:

1. Change to the tone mode, press the Y button and hold for 2 consecutive seconds.
2. Release the button and immediately reward your pet with verbal praise, petting, or a small food reward. Spend 3 to 5 seconds on your rewarding.
3. Wait a few minutes and repeat tone mode for 2 seconds following with praise. Vary the reward to prevent your pet from anticipating a specific type. This stage of training is complete when your pet obviously

anticipates a reward when he hears the positive tone.

## ● **Find the Best Vibration /Shock Level for Your Pet**

**Important:** Always start at the lowest level and work your way up.

The training collar has 100 vibration/shock levels. This allows you to choose the vibration/shock that is best for your pet.

Once you have placed the collar on your pet, it's time to find the vibration/shock level that is best for him. This is called the Recognition Level.

A slight change in your pet's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for him.

Follow the steps below to find your pet's Recognition Level:

1. Starting at level 1 on the digital display, change to vibration mode or shock mode and press the Y button continuously for 1 to 2 seconds. Note: when the Y button is held down for 10 consecutive seconds, the transmitter will "time-out", and you must release and press the button again before additional vibration/shock can be delivered.
2. If your pet shows no reaction, repeat the vibration/shock level several times before moving up to the next level.
3. Your pet should not vocalize or panic when receiving vibration/shock. If this happens, the vibration/shock level is too high and you need to go back to the previous level and repeat the process.
4. Move up through the vibration/shock levels until your pet reliably responds to the vibration/shock.
5. If your pet continues to show no response at level 100, check the fit of the receiver collar.

If, after completing all of these steps, your dog still does not indicate he is feeling the vibration/shock, please contact us for customer service.

## ● Teaching Basic Obedience

### 1. The “Sit” Command

(1) Put a separate, non-metallic collar on your pet’s neck above the receiver collar, and attach a 3-meter leash. Note: Be sure the extra collar does not put pressure on the Contact Points.

(2) Hold the leash and the transmitter in one hand. Keep your other hand free to guide your pet into a “Sit” position.

(3) Change to the vibration/shock mode, press and hold the Y button, starting at your pet’s recognition level.

(4) Immediately give the “Sit” command while continuing to hold the button.

(5) Release the button as soon as your pet is in position, and praise him.

(6) Release your pet from the “Sit” command and play.

(7) Repeat Step 2 through 6.



**Note:** If your pet breaks the “Sit” command, repeat Step 3 through 6. Keep your pet close to you while teaching the “Sit” command.

### 2. The “Come” Command

(1) Put a separate, non-metallic collar on your pet’s neck above the receiver collar, and attach a 3-meter leash. Note: Be sure the extra collar does not put pressure on the Contact Points.

(2) Hold your leash in one and the transmitter in the other.

(3) Wait for your pet to walk away from you. Using the recognition level for your pet, change to the vibration/shock mode, press and hold the Y button on your transmitter.

(4) Immediately give the command “Come” while continuing to hold the Y button.

(5) Using the leash, gently guide your pet toward you until begins to come in your direction.

(6) Immediately release the button as soon as your pet steps towards you, and praise him enthusiastically.



(7) Quickly move backwards as your pet begins to come back to you, praising him the entire time.

(8) Praise your pet when he returns to you.

(9) Repeat Step 3 through 8.

(10) Once your pet responds readily to the “Come” command several times, back away from him without giving a command. When your pet turns toward you, give the command “Come” (without vibration/shock) and praise him while you continue to back up. Praise your pet when he returns to you.

(11) Use your leash to prevent your pet from running past you. If your pet manages to run past you, repeat Step 3 through 8.

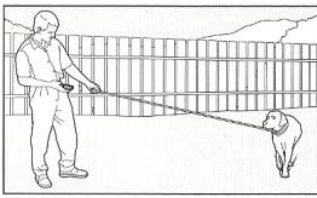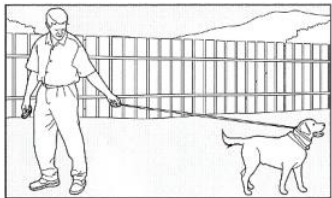

### **3. The “Stay” Command**

(1) Put a separate, non-metallic collar on your pet’s neck above the receiver collar, and attach a 3-meter leash. Note: Be sure the extra collar does

not put pressure on the contact points.

(2) Put your pet on his bed. Hold your leash in one hand and the transmitter in the other.



(3) Staying within one meter, walk the perimeter of the bed. Do not say anything to your pet.

(4) If your pet tries to leave the bed, change to the vibration/shock mode, press and hold the Y button and give the “Stay” command. Continue to hold the button until our pet is back on his bed. If necessary, use the leash to guide your pet onto his place.

(5) Praise your pet when he is back on his bed.

(6) Once your pet has settled for a few second, release him and play calmly.

(7) Repeat Step1 through 5.

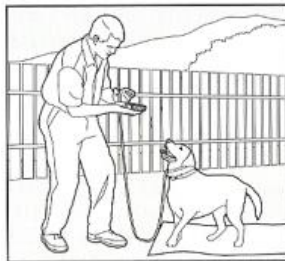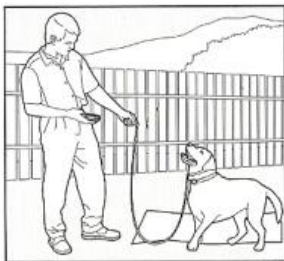

## ● Elimination Unwanted Behavior

### 1. Jumping Up

Pets typically jump up to get attention. If you do not want your pet to jump on you, then friends or members of the family should not encourage this behavior. That means every time your pet jumps on someone, he should be reprimanded or redirected to an alternate and acceptable behavior, for which he can receiver praise.



**Note:** It is best if your pet first understands the “Sit” command.

(1) Choose your pets’ Recognition Level.

(2) As soon as your pet lifts his paws off ground to jump on you, change to the vibration/shock mode, press the Y button and give the command “Sit”.

(3) Release the button immediately once your pet is sitting, and verbally praise him.

(4) If your pet ignores the vibration/shock, increase the intensity level by 1.

(5) Practice this exercise in several different areas and use different people for distractions.






## 2. Digging

It is important to first understand why your pet is digging. Many dogs, such as terriers, were bred to flush out prey, and digging is very innate to them. Other dogs may be digging to find a cool spot to lie down, or simply out of boredom. Your pet may no longer have the desire to dig if he is provided with the following:

- ✓ A cool, shaded area in which to lie down, and plenty of water.
- ✓ An alternate activity, such as a favorite toy.
- ✓ Plenty of play, exercise, and attention.

- ✓ A yard free from rodents or prey that he may be trying to flush out.
- (1) Choose the intensity Level 1 higher than your pet's Recognition Level.
  - (2) Place the receiver collar on your pet and wait at least 10 minutes before placing him in the yard, as you do not want your pet to associate the vibration/shock with anything other than his digging. Your pet must be securely fenced in or contained during training.
  - (3) From a window or area where your pet cannot see you, wait until your pet begins to dig.
  - (4) While your pet digs, change to the vibration/shock mode, press the Y button and release it when he stops digging. Only press the button while your pet is in the act of digging, and do not say anything to him.
  - (5) If your pet ignores the vibration/shock, increase the intensity level by 1.
  - (6) Continue to watch your pet, as he may choose another area to dig.
  - (7) Do not allow your pet in the yard unsupervised until he has completely stopped digging.

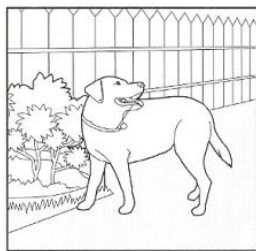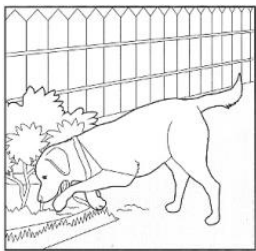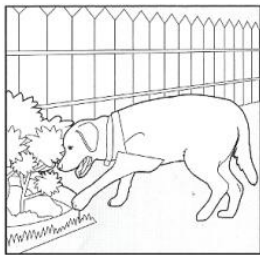

### 3. Chasing

Chasing is an instinctive behavior stimulated by moving objects. Some dogs have a particularly strong desire to chase that can put them in harm's way and leave you helpless. Never allow your dog off the leash or out of a contained area until he has learned the "Come" command, regardless of the

distraction. Be consistent and correct your dog every time he chases something.

**CAUTION:** It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

(1) If your dog has not learned the “Come” command, keep a leash on him so you can physically stop him before he reaches the object he is chasing.




(2) Choose the intensity level 1 higher than your dog’s Recognition Level.

(3) Set up a scenario where your dog is enticed to chase an object. Common items could be cars, motorcycles, bicycles, etc. (do not use toys)

(4) When the object passes in front of your dog, make sure to hold the leash with a firm grip. As soon as your dog begins to chase the object, change to the vibration/shock mode, press and hold the Y button until he stop.

(5) When your dog stops chasing the object, immediately release the button, walk backwards and give the command “Come”. Praise your dog as he comes to you.

(6) Repeat the process until your dog stops chasing object.

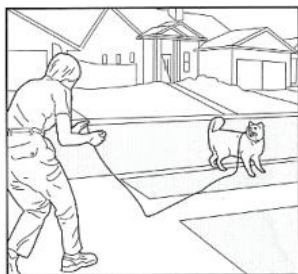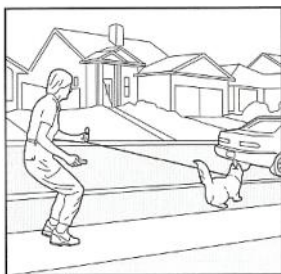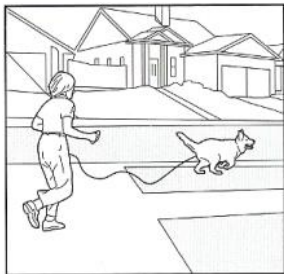

#### **4.Trash Raiding**

The easiest way to prevent trash raiding is to remove garbage and tempting food from your pet's environment. You can use the training collar to teach your pet to stay away from these items; however, you must be prepared to correct your pet every time he approaches them.

(1) Choose the intensity level 1 higher than your pet's Recognition Level.



(2) Pick a temptation for your pet and position yourself where he cannot see you.

(3) While your pet's mouth is touching the temptation, change to the vibration/shock mode and press the Y button. Immediately, release the button when your pet leaves the temptation.

(4) Do not say anything, as you want your pet to associate the vibration/shock with his behavior, not you.

(5) If your pet does not respond to the stimulation, increase the intensity level by 1 and repeat the process.

(6) Repeat this process in several different locations with different temptations.

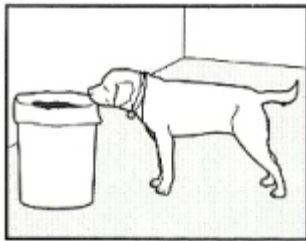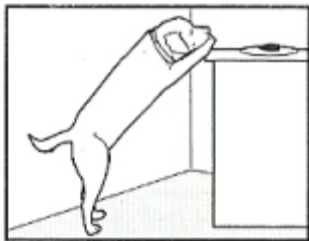

## ● Notes of Training

1. This system is designed for training dogs, so use the tone or vibration function first. If it doesn't work to the dog, then try to use shock as punishment.
2. Don't leave an electronic training collar on your dog for more than 12

- hours at a time because it may irritate the dog's neck.
3. This product is for pet training. Only by training, the pet can understand the intention of its owner. Good effect can only be achieved after a period of training.
  4. Training sessions should be kept positive and short, about 10-15 minutes long each time.

## © F & A

1. Is the vibration/shock safe for my pet?

**A:** While the vibration/shock is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results.

2. How old does my pet have to be before using the training system?

**A:** Your pet should be able to recognize basic obedience commands such as “Sit” or “Stay”. Pets should be at least 6 months old before using the training collar.

3. Is the Receiver Collar water resistant?

**A:** Yes. It is water resistant and rainproof design.

4. Will I get exactly 300 meters of range with the training collar?

**A:** The range of the training collar will vary according to terrain, weather, as well as transmission from other radio devices. It has a range up to 300 meters.

5. How long can I continuously deliver vibration/shock to my pet?

**A:** The maximum amount of time you can use the vibration or shock function and deliver single to your pet continuously is 10 seconds. After this, there's time-out and vibration/shock cannot be delivered for 5 seconds. After

the 5 second time-out period, it can be delivered again.

6. My Receiver Collar doesn't work consistently.

**A:** The Transmitter only sends corrections to the Receiver that has been synced with the Transmitter in a specific channel. After pressing the Channel button (1/2) on the Transmitter, it will shift its commands to the other channel so that the Receiver simply won't give any response. Please ensure that the Transmitter is in the channel corresponding with the Receiver.

7. The Receiver Collar can only vibrate or beep but cannot shock.

**A:** Adjust the shock level well above 1 and then test the shock function with the test bulb. If the Receiver is tested to malfunction under the shock mode, please apply for a replacement.

## ©Troubleshooting

1. My pet does not respond when I press a button.

**A: (1)** Make sure the Receiver Collar has been turned on. (2) If your range has reduced from the first time you used the training collar, the battery may be low in either the Transmitter or Receiver Collar. (3) Many factors can impact the amount of range you have with the training collar. (4) Test the Receiver Collar and see if it has reaction. (5) Increase the vibration/shock level. (6) Make sure the Receiver Collar's Contact Points are placed snugly against your pet's skin.

2. The Receiver Collar is not responding to the Transmitter.

**A: (1)** Verify the Receiver Collar is on. (2) If the indicator light does not come on when any button is pressed on the Transmitter, ensure that it is full of energy. (3) If the first two solutions did not resolve your problem, try to pair Transmitter and Receiver Collar again.

3. My Receiver Collar works great for some time, yet it does not work after charging.

**A:** First, check if the Receiver Collar has been charged correctly. Then check if the Receiver Collar has been turned on.

4. I want to test the Receiver on myself, but it does not work.

**A:** When testing the Receiver on your hands, please touch the 2 electrodes at the same time at touching one single electrode will not work.

### © Common Size and Weight of Different Dog

Size	Neck (inch)	Chest (inch)	Weight (LB)	Type
Medium	9-11	14-17	15-35	Maltese Dog, Shih Tzu
Large	11-12	16-19	35-55	Miniature Schnauzer, Pekingese
Large	12-13	18-21	35-55	Schnauzer, English Cocker Spaniel
Large	13-15	20-23	35-55	Beagle
Huge	17-19	30-33	55-70	Husky
Huge	19-20	35-38	55-70	Labrador Retriever
Huge	20-24	36-39	55-70	Golden Retriever, Old English Sheepdog

