


## CUT, FOIL AND EMBOSS DIES *general uses*

CAUTION:  
HEAT PRODUCED  
IS OVER 90°C / 194°F

### 3 EASY STEPS

1. HEAT THE CONVERSION PLATE AND DIE ON YOUR GOPRESS AND FOIL HEATING PLATFORM
2. ASSEMBLE YOUR SANDWICH ON THE GOPRESS AND FOIL HEATING PLATFORM
3. PUT YOUR SANDWICH THROUGH YOUR CUT AND EMBOSS MACHINE

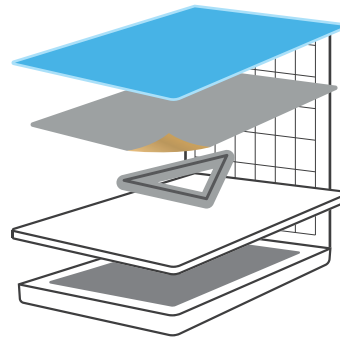


- MEDIUM
- HEAT ACTIVATED FOIL  
ALWAYS SHINY SIDE DOWN
- CUT, FOIL & EMBOSS DIE  
ALWAYS FACING UP
- METAL CONVERSION PLATE  
SOLD SEPARATELY (CO725818)
- GOPRESS & FOIL  
HEATING PLATFORM

## HOTFOIL STAMPS *general uses*

CAUTION:  
HEAT PRODUCED  
IS OVER 90°C / 194°F

### 3 EASY STEPS

1. HEAT THE HOTFOIL STAMP ON YOUR GOPRESS AND FOIL HEATING PLATFORM
2. ASSEMBLE YOUR SANDWICH ON THE GOPRESS AND FOIL HEATING PLATFORM
3. PUT YOUR SANDWICH THROUGH YOUR CUT AND EMBOSS MACHINE

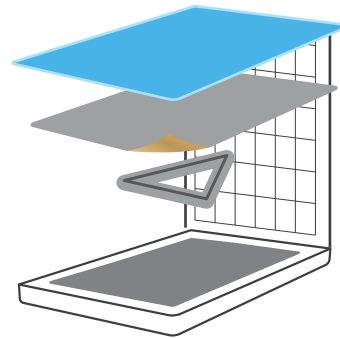


- MEDIUM
- HEAT ACTIVATED FOIL  
ALWAYS SHINY SIDE DOWN
- HOTFOIL STAMP  
ALWAYS FACING UP
- GOPRESS & FOIL  
HEATING PLATFORM

## HOTFOIL STAMPS *chipboard*

CAUTION:  
HEAT PRODUCED  
IS OVER 90°C / 194°F

### 3 EASY STEPS

1. HEAT THE METAL SHIM ON YOUR GOPRESS AND FOIL HEATING PLATFORM
2. ASSEMBLE YOUR SANDWICH ON THE GOPRESS AND FOIL HEATING PLATFORM
3. PUT YOUR SANDWICH THROUGH YOUR CUT AND EMBOSS MACHINE

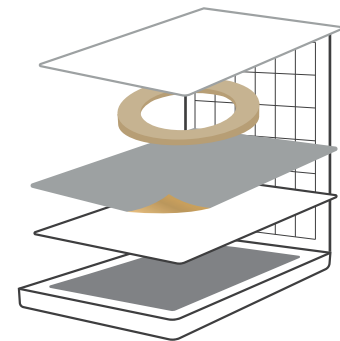


- PIECE OF COPY/SCRAP PAPER  
TO PREVENT FOILING YOUR COVER
- CHIPBOARD  
FOILING SIDE DOWN
- HEAT ACTIVATED FOIL  
ALWAYS SHINY SIDE DOWN
- METAL SHIM  
SOLD SEPARATELY (CO725578)
- GOPRESS & FOIL  
HEATING PLATFORM

## HOTFOIL STAMPS *plastic & organza bags*

CAUTION:  
HEAT PRODUCED  
IS OVER 90°C / 194°F

### 3 EASY STEPS

1. HEAT THE HOTFOIL STAMP ON YOUR GOPRESS AND FOIL HEATING PLATFORM
2. ASSEMBLE YOUR SANDWICH ON THE GOPRESS AND FOIL HEATING PLATFORM
3. PUT YOUR SANDWICH THROUGH YOUR CUT AND EMBOSS MACHINE

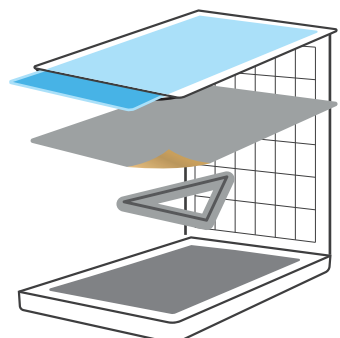

- PLASTIC OR ORGANZA BAG  
WITH SCRAP CARDSTOCK INSIDE
- HEAT ACTIVATED FOIL  
ALWAYS SHINY SIDE DOWN
- HOTFOIL STAMP  
ALWAYS FACING UP
- GOPRESS & FOIL  
HEATING PLATFORM