

HP Series Smart Solar Charge Controller

(HP2430N/HP2440N HP2430P/HP2440P)

User Manual



Dear users

Thank you for choosing our product. Before using the product, please read this manual carefully.


Version : V1.01

The above information is subject to change without prior notice.

Product Features

- Automatic system voltage identification
- Charging program options for sealed, GEL and flooded lead-acid batteries and lithium batteries are available.
- An upgraded 3-stage PWM charging algorithm is adopted. Application of an equalizing charge to the battery periodically or when over discharged can effectively prevent the battery from non-equalization and sulfuration, thus extending the battery's service life (with the exception of GEL and lithium batteries).
- With temperature compensation employed, charging parameters can be automatically adjusted (with the exception of lithium batteries).
- A wide range of load working modes facilitate the product's application to different types of street lights and monitoring devices.
- The product provides overcharge, over-discharge, overload protection, as well as short-circuit and reverse-connection protection.
- By virtue of an advanced load starting method, large-capacitance loads can be started smoothly.
- A range of parameter settings and power-down saving functions are available, thus requiring no repeated setting.
- The product provides a dot matrix graphic LCD screen and a human-machine interface with 2 keys.
- The user-friendly design of browser and dynamic interfaces ensures convenient and intuitive operations.
- (An optional communication function) provides a RJ12 data port (output of TTL232 level or bluetooth signals), with the data adopting the standard Modbus protocol, and can be used together with our upper computer monitoring software or mobile phone APP.
- Boasting an industrial grade design, the product can function well in various tough conditions.
- It features a backlit display, and the backlight will be turned on with a key pressed and turned off over a period of time.
- TVS lightning protection is adopted.

Panel Structure

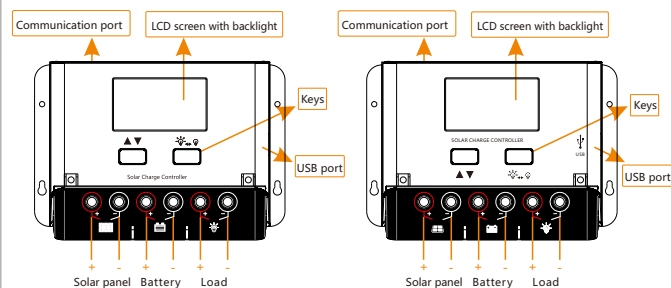

HP2430N/HP2440N

HP2430P/HP2440P

State Indicators

LCD Icon	Indicated Object	State	Meaning
	Day recognition	Steady on	Day time
	Night recognition	Steady on	Night time
	Solar panel	Steady on	Solar panel indication
BULK	Charging state	Steady on	Direct charging
BOOST		Steady on	Boost charging
FLOAT		Steady on	Floating charging
EQUATIZE		Steady on	Equalizing charging
	Battery	Quick flashing	Battery overvoltage
		Slow flashing	Battery over discharge
	Battery SOC	4 dashes	100%
		3 dashes	75%
		2 dashes	50%
		1 dash	25%
		0 dash	0%
	Load	Steady on	Load turned on
		Steady on	Load turned off
		Quick flashing	Overload or short-circuit protection

Five Load Working Modes

- Pure light control (0):** When sunlight disappears and the light intensity drops to the starting point (light control off), the controller initiates a 10-minute delay (settable) to confirm the starting signal, and then switches on the load for operation. When sunlight emerges and the light intensity reaches the starting point, the controller initiates a 1-minute (fixed) delay to confirm the shutting-down signal, and then shuts down the output to stop the load's operation.
- Light control + time control (1 to 14):** The starting process is the same as pure light control. After operating for a preset period of time (settable from 1 to 14 hours), the load stops operation automatically.
- Manual mode (15):** In this mode, the user can switch the load on or off by the keys, no matter whether it's day or night.
- Debugging mode (16):** When the solar panel voltage is higher than the "light control off" voltage, switch off the load immediately; when the solar panel voltage is lower than the "light control on" voltage, switch on the load immediately.
- Normal on (17):** The energized load keeps in output state.

LED Display	Mode	LED Display	Mode
0	Pure light control mode	9	Light control + time control (9 hours)
1	Light control + time control (1 hour)	10	Light control + time control (10 hours)
2	Light control + time control (2 hour)	11	Light control + time control (11 hours)
3	Light control + time control (3 hours)	12	Light control + time control (12 hours)
4	Light control + time control (4 hours)	13	Light control + time control (13 hours)
5	Light control + time control (5 hours)	14	Light control + time control (14 hours)
6	Light control + time control (6 hours)	15	Manual mode
7	Light control + time control (7 hours)	16	Debugging mode(default)
8	Light control + time control (8 hours)	17	Normal on mode

Load Working Mode Settings


In the load mode menu, long press for 2s, and the number (e.g. 15) will begin to flash. Press to adjust the mode (from 0 to 17), and then long press again for 2s to complete and save the setting.

- Note: 1. After parameter adjustment, if is not pressed and held long enough for exiting, the system exits to the main menu after 12s, and the parameter that was set is not saved.
2. When the system is saving data, the screen may shake slightly. This is normal and the user may ignore it.

Safety Advice


- When connected to a 24 V system, the solar panel terminal voltage may exceed the limit for human safety. If operation is to be performed, be sure to use insulation tools and keep your hands dry.
- If the battery is reversely connected, the controller itself won't be damaged, but the load end will have a negative voltage output, which may damage your load device. Take care not to let this happen.
- The battery contains a large amount of energy. Therefore, in no cases should the battery be short circuited. It's recommended that a fuse be serially connected to the battery.
- Keep the battery away from fire sparks, as the battery may produce flammable gas.
- Keep children away from the battery and controller.
- Follow the safety advice provided by the battery manufacturer.

LCD Screen Illustration

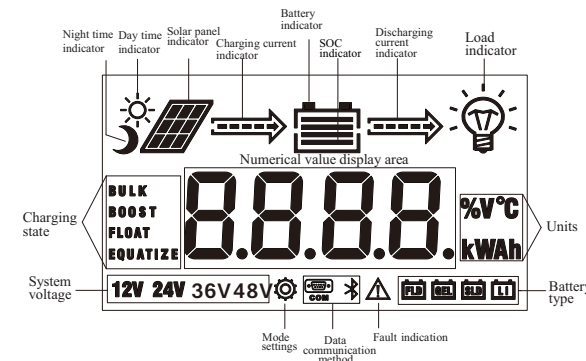


Browsing Menu on LCD Screen

1). Continuously press , the screen will display the following in order: "main menu"---"solar panel voltage"---" solar panel current"---"battery capacity"---"battery voltage"---"discharging current"---"charging amp-hrs"---" discharging amp-hrs"---" temperature inside controller"---" load mode"---" load mode settings"---"error code", and then back to "main menu". If the keys are not operated for 12s, the system will automatically return to display the "main menu".

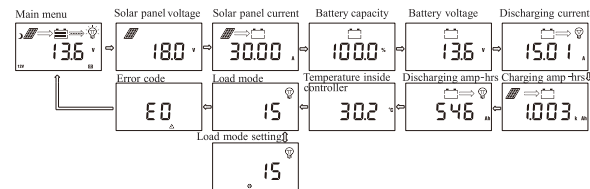

Setting Menu on LCD Screen

2) When "load mode" is displayed, long press **[V]** to enter into the load mode setting. Press **[←]** to adjust the mode, and long press **[V]** for 2s to save and exit; or else, the system will not save the setting that was just made and automatically exit the setting interface after 12s.

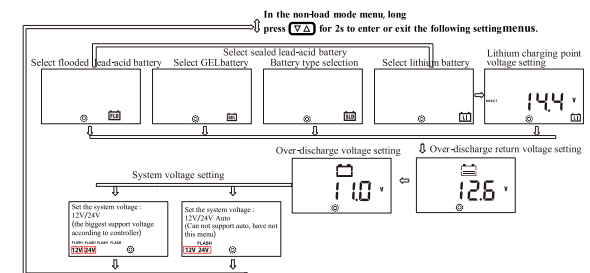

Battery Types, Charging Voltages (Lithium Battery) Over-Discharge Return and Over-Discharge Voltage Settings

In the non-load mode menu:

- When **[V]** is long pressed, the first interface entered is for battery type setting, and the flashing one is the battery type currently selected. Press **[←]** to select among FLD/GEL/SLD/LI.
- After selection, short press **[V]** to enter into over-discharge return and over-discharge voltage settings; or the first to enter charging voltage setting menu for lithium battery.
- After parameters have been set, long press **[V]** for 2 s to save and exit.

Parameters shall be set according to the following rule: over-discharge voltage < over-discharge return voltage ≤ under-voltage warning < floating charging voltage < boost charging return ≤ equalizing charging voltage < overcharge voltage; and two adjacent values shall have a difference greater than 0.5 V.

Charging and Discharging Overload Protection and Recovery Time

In the charging and discharging overload protection mechanism, the relation between overload current and protection time is as follows: An overload current 1.25 times of the rated current initiates a delay of 30s before starting protection; similarly, 1.5 times, 5s and 2 times, 1s.

Overload recovery: automatic recovery after 1 minute.


Load Short Circuit and Recovery

Short-circuit automatic recovery time: 1st time, 5 s; 2nd time, 10 s; 3rd time, 15 s; 4th time, 20 s; 5th time, 4 hours or automatic recovery the next day; or long press **[←]** to make the load resume output.

Communication Port Line Sequence (Only for Controllers with Communication Functions)

Controller communication port RJ12 (6-pin)

RS232

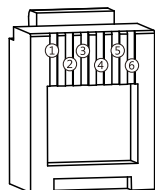

No.	Definition
①	Transmitting terminal TX
②	Receiving terminal RX
③	Power supply grounding /Signal grounding
④	Power supply grounding /Signal grounding
⑤	Power supply positive
⑥	Power supply positive

Installation Instructions and Precautions

1. The controller shall be installed securely, and its dimensions are as follows:


HP2430N/2440N External dimensions: 166.0×118.2×52.6(mm)

Installation dimensions: 156×57.5 (mm)

HP2430P/2440P External dimensions: 166.0×118.2×47.0(mm)

Installation dimensions: 156×57.5 (mm)

2. Installation hole diameter: 3.5 (mm)

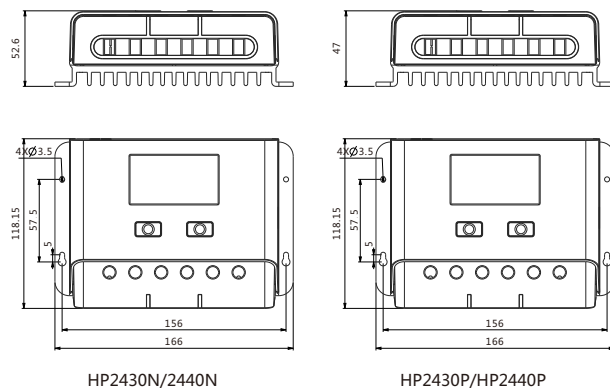

HP2430N/2440N

HP2430P/HP2440P

3. Precautions:

- If it is 12V system, the bottom left corner of LCD display will show '12V'; 24V system will show '24V'.
- The first step is to connect the battery. If the connection is made correctly, the controller screen will be lit up; otherwise, check whether the connection is correct.
- The second step is to connect the solar panel. If sunlight is present and strong enough (the solar panel voltage is greater than battery voltage), the sun icon on the LCD screen is on; otherwise, check whether the connection is correct (it's recommended that the operation be performed under the debugging mode).
- The third step is to connect the load. Connect the load leads to the controller's load output terminal, and the current shall not exceed the controller's rated current.
- As the controller will generate heat during operation, it's recommended that the controller be installed in an environment with good ventilation conditions.
- Choose cables with large enough capacity for connection, in case too much loss incurred on the lines causes the controller to misjudge.
- The HP2430N/HP2440N controller is internally designed with a common cathode. If you need to ground, ground the cathode.
- The HP2430P/HP2440P controller is internally designed with a common anode. If you need to ground, ground the anode.
- It's important to fully charge the battery regularly. At least once full charging every month is recommended, and failure to do that may cause permanent damage to the battery. Only when in-flow energy outpaces out-flow energy can the battery be charged fully. Users shall bear this in mind when configuring the system.
- Check whether the controller's each connection terminal is tightened securely; if not, it may suffer damage when large current passes.

Error Code List

Code on LCD screen	Corresponding error
E0	No error
E1	Battery over discharge
E2	Battery overvoltage
E3	Undervoltage warning
E4	Load short circuit
E5	Load overload
E6	Temperature too high inside controller
E8	Charging current too high
E10	Solar panel input voltage is too high

Common Problems and Solutions

Symptoms	Causes and Solutions
LCD screen does not light up	Check whether the battery is correctly connected.
Incomplete display or no renewal on LCD screen	Check whether the ambient temperature is too low and whether the display recovers when the temperature rises.
No charging with sunlight present	Check whether the solar panel is correctly connected and contact is good and reliable. Check whether the solar panel voltage falls below the battery voltage.
The sun icon does not light up, while the solar panel icon does. The battery voltage is normal, but there is no output.	The load will be switched on automatically after 10 minutes (set by the user).
The battery icon flashes quickly, and there is no output.	System overvoltage. Check whether the battery voltage is too high.
The battery icon flashes slowly, and there is no output.	The battery is over-discharged, and will recover when recharged adequately.
The load icon flashes quickly, and there is no output.	The load's power exceeds the rated value or it's short-circuited. After removing the problem, long press the key or wait until it recovers automatically.
The load and the encircling light ring stays lit, and there is no output.	Check whether the power-consuming device is connected correctly and reliably.
Other symptoms	Check whether wiring is sound and reliable, and system voltage is correctly recognized.
The charging and discharging amp-hrs displays: 9999.K Ah	The decimal point flashes indicating that the displayed value has reached its upper limit. Long press [←] to reset it.

Parameter Details

Model	HP2430N/2440N	HP2430P/2440P	Remarks	
Rated current	30A/40A	30A/40A		
System voltage	Automatic recognition of 12V/24V		Default: automatic identification	
Rated power	Manual setup			
	12V/450W 24V/900W	12V/600W 24V/1200W	12V/450W 24V/900W 24V/1200W	
No-load loss	< 22mA/12V ; < 16mA/24V	< 13mA/12V ; < 15mA/24V		
Max. Solar energy input voltage	< 55V			
Max. voltage at the battery end	< 34V			
Battery type	Parameters			
	Flooded FLD	Sealed SLD	GEL GEL Lithium LI	Default SLD
Overvoltage protection	16.0V			
Equalizing charging voltage	14.8	14.6	-	-
Boost charging voltage	14.6	14.4	14.2	14.4
Floating charging voltage	13.8	13.8	13.8	-
Charging recovery voltage	13.2V			
Over-discharge recovery voltage	12.6V (settable with the keys)			
Over-discharge voltage	11.0V (settable with the keys)			
Equalizing charging interval	30 days	-	-	
Equalizing charging time	1H	-	-	
Boost charging time	2H	-	-	
Temperature compensation	-3.0mV/°C/2V			
Light control voltage	Light control on 5V, light control off 6 V (light control on plus 1V)			
Light control judgment time	10 minutes			×1/12V ; ×2/24V ;
USB function	Yes			
Bluetooth function	optional			
232 Serial port communication function	optional			
Operating temperature	-25°Cto+55°C ;			
IP protection rating	IP30			
Net weight	700g	525g		
Protection functions	Battery plate reverse connection protection, a battery reverse connection protection, charging battery board short circuit protection, charging the battery open circuit protection, charging over current protection, overload protection, load short-circuit protection controller and over temperature protection.			
Dimensions	166.0×118.2×52.6(MM)	166.0×118.2×47.0(MM)		