

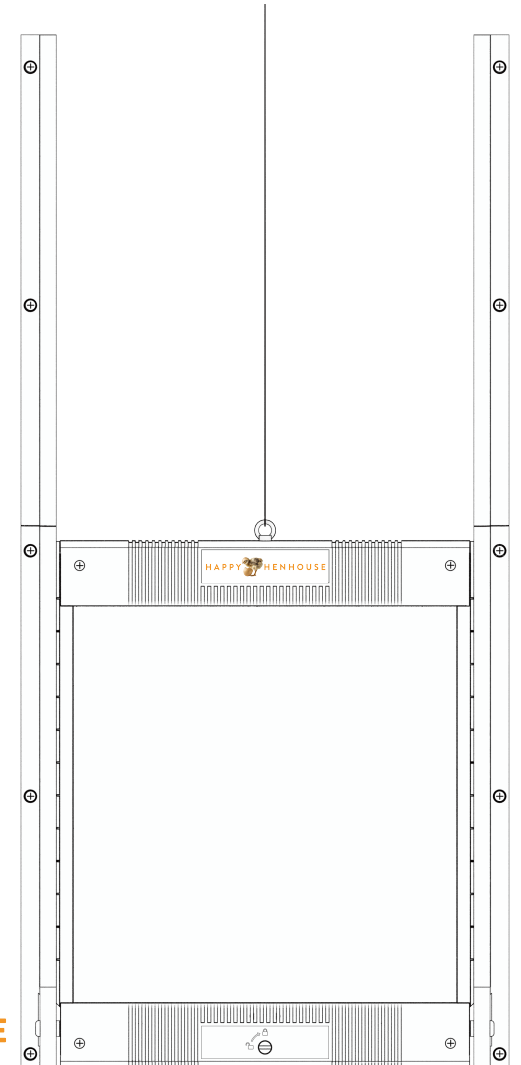
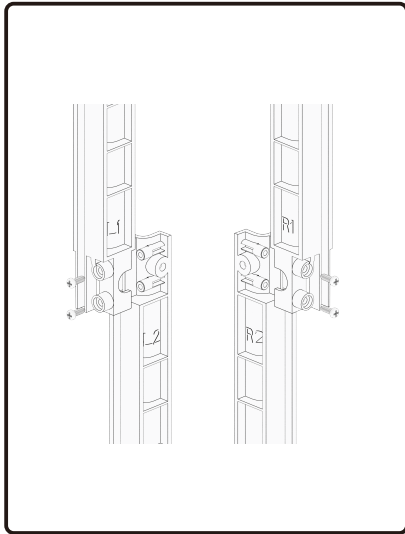


You can disengage the self-lock function by turning the lock to the lock position. To do this, ensure the door is fully open and using a screwdriver, rotate the lock clockwise. Useful to prevent the door from freezing shut in the winter.

SELF-LOCKING DOOR KIT

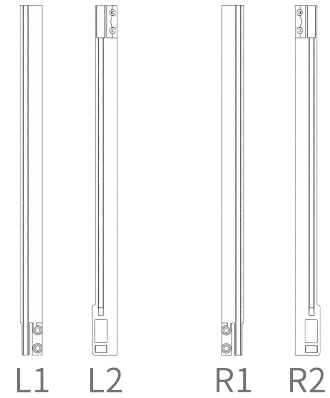


HAPPY  HENHOUSE

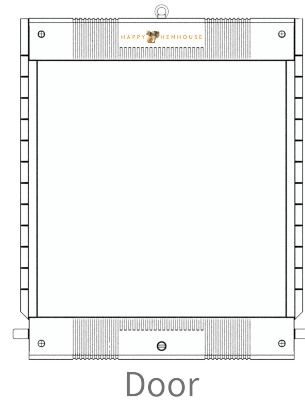


STEP 1

Align runner L to the left side of the coop using large screws. Align and screw together runners L1 and L2 using 2 small screws. (Runners L1 and L2 are assembled the same way)

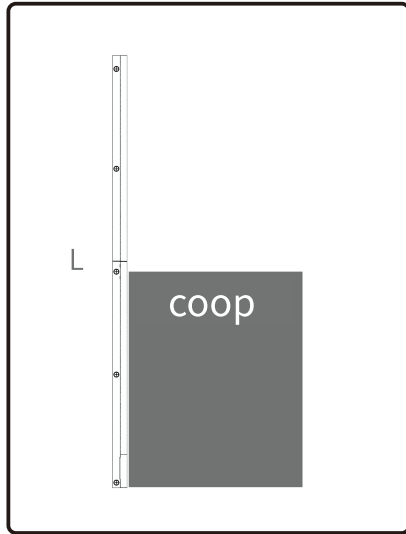


STEP 2

Attach runner L to the left side of the coop using large screws.

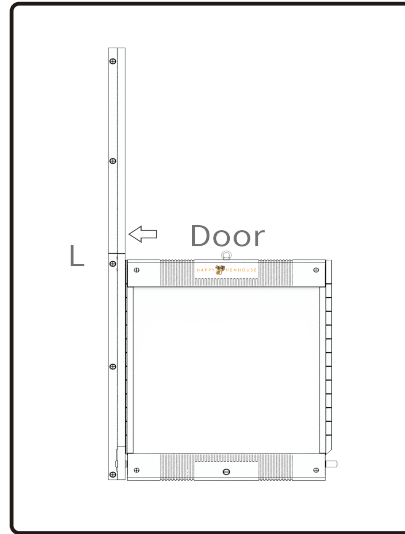


STEP 3

Insert the door into runner L and ensure the locking bolt extends fully and locks securely into place.

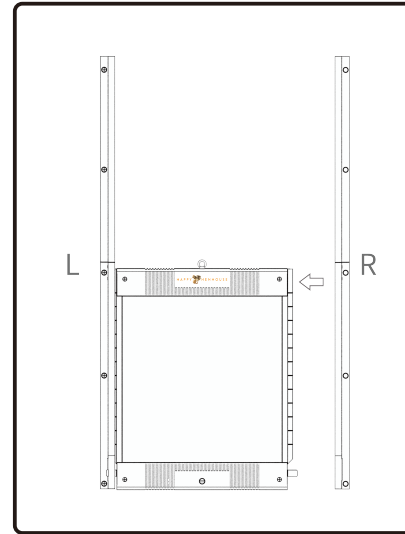

STEP 4

Align the second runner to the right side of the door leaving a small gap to allow the door to move up and down smoothly. Attach the runner using large screws.

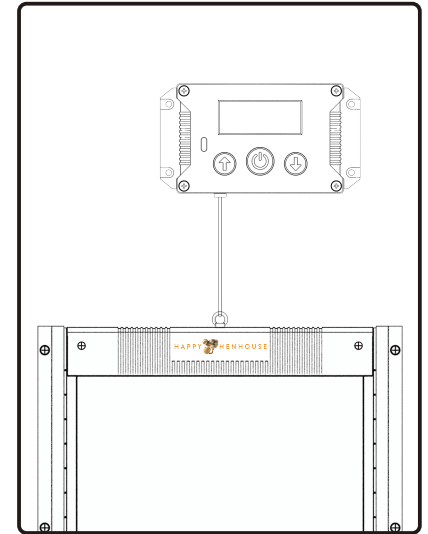

STEP 5

Attach the cord from the door opener to the top of the door.