

## Ice Cream Scoop, Bottle Opener & Pizza Cutter Care Instructions

Tips to lengthen the life of your heirloom for many years!

## **CLEANING**

All bottle openers and pizza cutter hardware are removeable. Many of the ice cream scoop hardware are also removeable but there are a few that are not. Hardware is easy to remove by turning counterclockwise.

For washing, please use mild dish soap on the stainless scoop only, warm water and no-abrasive sponge to clean the wood handle, do not put in dishwasher. Stand-up hardware on the counter to allow all the water to drain or dry immediately with clean cloth. **Do not put the handle in water**, it will cause the handle to absorb water and warp. Putting the wood or resin handle in the dish washer will ruin the handle.

Do not clean the handle or stainless steel with alcohol or fingernail polish remover (acetone), alcohol will fade, dull the glossy finish, and remove the finish if heavily used. Do not use a brush or scraper, especially anything metal to clean, this will leave markings on the finish. Do not leave near a hot stove top, the wood will burn, and if your handle is colored resin, it will melt.

## **DRYING**

Dry the surface wet wood immediately using a lint free cloth. Then, allow to air-dry completely on a dish rack. Be sure all water drains from the hole in the handle, otherwise the handle can warp.

## **STORING**

Keep your handle away from heat, such as stovetop. Do not let the wood stay in contact with damp surfaces.

Handmade in Greenville, South Carolina, USA

Website: www.MichaelsWoodcraft.com
Blog: http://michaelswoodcraft.wordpress.com

Instagram: https://www.instagram.com/michaelswoodcraft/



