

此页不印刷，共24页，骑马钉

SIZE:105X145mm


材质：封面200g铜版纸亚膜，内页80g双胶纸.

注意：请勿随意删减页，如有需要记得提前联系。

CamPark®

DC40

4K +1080P Dash Camera

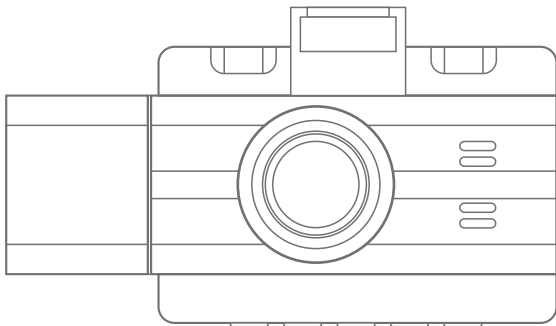

Not having a positive experience?

Please contact us by **support@campark.net**

We will offer prompt and authoritative reply within 24 hours and try our best to resolve your problem ASAP. More Safe Guarantee with Campark!


Contents

Important Notice.....	1
Product Diagram.....	2
Set up and Installation.....	4
Function Description.....	5
Setting.....	7
Specification.....	15

Important Notice

- 1.This product is intended for use in motor vehicle only.
DO NOT install the camera where it might block the driver's view of road (including the mirrors) or the deployment of the airbag.
- 2.Before using this camera, please format the micro SD card to FAT32/exFAT32(default) on the computer, then format it in camera menu.
- 3.This camera records video at high resolution, Be sure to use high speed Micro SD card, memory card with writing speed over Class 10 or above is recommended, 32GB or 64GB cards are recommended.
- 4.Be sure the camera lens is clean and there is nothing blocking the lens.
- 5.DO NOT leave the camera in direct sunlight for a long period of time or where the temperature could go above 170°F (75°C).



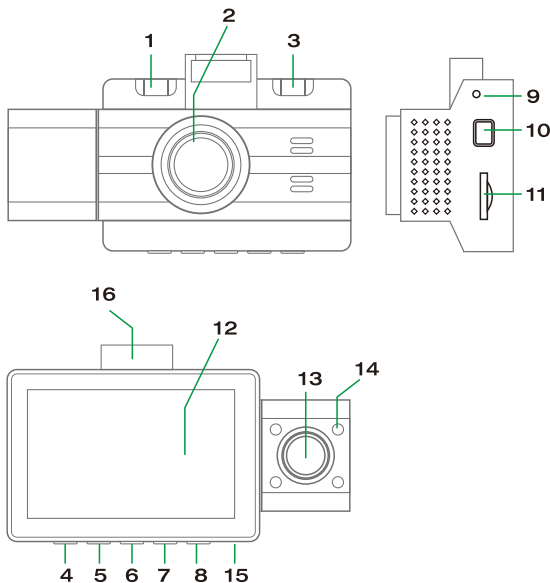


Product Diagram




- 1.Rear Cam Connector
- 2.Front Lens
- 3.Power Port
- 4.M Button
- 5.Left/Up Button
- 6.OK Button
- 7.Right/Down Button
- 8.Audio Button

- 9.Reset Button
- 10.Power Button
- 11.TF Card Slot
- 12.Display Screen
- 13.Inside Lens
- 14.IR light
- 15.Mic
- 16.Bracket Interface

Button Function Explanation

Name	Picture	Function Explanation
Power Button		<ol style="list-style-type: none"> 1.Power on (press this button for 3s), Power off(press this button for 3S) 2.Short press Power Button to turn On/ OFF the screen
OK Button		<ol style="list-style-type: none"> 1. Short press OK Button, confirm what you want to choose 2. Recording video and photo, stop recording video. It recording video automatically when you charging or power on. Press this button stop it, If you stop recording, it cannot recording video automatically, need to press this button again to start recording.
M Button		<ol style="list-style-type: none"> 1.Long press it to switch mode (cycling) 2. When it is playback mode, long press it to enter recording mode and it will record video immediately. 3. In any modes, short press it to enter into menu mode, and short press it again to exit. 4. When it is recording the video, short press this button for 1 second, It will lock the current video file.
Up Button		Short press it to choose file or menu option by rolling.
Down Button		Short press down button to choose file or menu option.

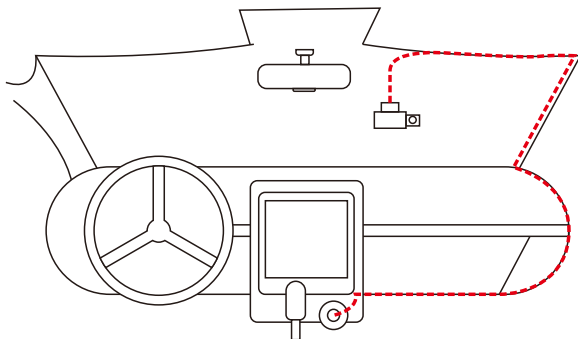

Set up and Installation



1. Use the 3M holder sticker mount or suction cup mount to install the DC40 dash camera on the windshield, recommended position is near the rearview mirror (with the display screen and inside lens towards the passenger seats.), adjust both lens angle for best coverage.
2. Plug the included power adapter into the car cigarette lighter socket, the indicator will light up when power is on.
3. Connect the power adapter and the dash cam, and route the excess cable alongside the interior trim for better looking.
4. Start your car, the camera will automatically power on, check the lens angle and coverage, make sure all functions works well before going on the road.

Function Description

Power on/off:

- 1.Power on: The device will automatically enter video recording mode when press the Power Button  or connect the device to car charger.
- 2.Power off: Press and hold the power button  until the screen it off.

After the car breaks down, the device will automatically turn off when the car charger stops supplying power.

Video Recording mode:

- 1.Power button: The device will automatically enter video recording mode when long press the Power Button or connect the device to car charger.

●While it is recording, the Blue indicator will keep blinking, and the red dot on the upper left corner of the screen will twinkle all the time.

●The Red Indicator on front of unit will lights up.

- 2.Press the OK button  will stop recording.

●The Blue Indicator on front of device will stop blinking.

●The red dot next to the recording icon will disappear, it means the device has stopped recording.

- 3.Press the OK button  again will start the device recording again.



Photo Mode:

1. When the device is in the standby state (when recording is stopped), long press the mode button, the photo icon appears on the top of the screen, it means the device is in the photo mode.



2. Press OK button to take a photo.

Playback Mode:

1. When the device is in the standby state (when recording is stopped), long press the menu button when it is in the photo mode, the icon appears on the top of the screen, it means the device is in the playback mode.




2. Press the up/down button  /  to select file. If you want to play a video file, please press the OK button to play video.

Recording adjustments:

● When recording video, long press M button to lock the  current file. The  will appear on the LCD Display. The locked file cannot be overwritten when the micro SD card is full.

Setting

Video:

1. Press the M button to enter the Video settings menu.
2. Using the  /  Buttons to select and highlight the function you would like to adjust. Press the OK button to enter the subsequent menus.
3. Short press M button twice to enter the System settings menu.
4. Press M button  again to exit the menu interface. Press the OK button to enter or confirm the settings.

Video Settings:

●Resolution (To set or reset the resolution of the video):

Without Rear Cam: UHD P25+FHD P25/ QHD P30+FHD P30/ FHD P30+FHD P30

With Rear Cam: QHD+FHD+FHD/ FHD+FHD+FHD

●Loop recording

Options: Off/1min/3mins/ 5mins

Save the video for the setting time. When the card is full, the oldest video will be automatically overwritten.

●WDR

Options: On/Off

If WDR is on, the highlights and shadows on the video can be displayed with richer details. The larger the dynamic range, the richer the levels.

●Exposure

To set or reset the exposure level as desire. This will cause the video become dark or bright.

●G-sensor

Options: Off/Low/Medium/High

If the G Sensor is activated, when braking/shocking/vibration occurring during recording, the existing recording video file will be automatically locked.

●Motion Detection

Options: On/Off

If Motion Detection is on, the device will record a 15 seconds video when the sensor detects any movement in front of the device.

●Record Audio

Options: On/Off

Set to On or Off as desire. If set to Off, no sound will be record.

●Date Stamp

Options: On/Off

Set to On or Off as desire. If On is selected, the date and time will imprint and record on video.

●IR

Options: On/Off

If Night Mode is on, the IR light will be turned on. It will have good video effect when you at night, even there isn't lamp. IR mode is only for the in-car, the recording video will be black and white.

System Settings:

●Date/Time

Set or reset the actual time and day.

●Auto Power Off

Options: Off/3min/5min/10min

●Screen Saver

Options: Off/1Minute/3Minutes/5Minutes

If you set the screen saver time, the screen will enter blank screen according to the setting time to protect screen.

●Beep Sound

Options: On/Off

To turn on/off beep sound when press the buttons.

●Language

Options: English/French/Spanish/Portuguese/German/Italian/Simplified Chinese/Traditional Chinese/Russian/Japanese.

To select the language you want. (On the screen display)

●Frequency

Options: 50Hz/60Hz

To set or reset the frequency of the AC power to reduce interference of fluorescent lights (In the USA and Canada, set it to 60Hz).

●Format

This function will format (erase all data) the Micro SD Card.

Warning: When formatting the card, all files will be erased. Upload all files you would like to save to your PC BEFORE you start to format the card.



●Default Setting

Reset all settings to factory preset. Please set it carefully, the original personalized setting parameters will not exist after setting.

●Version

To check the device version.

Photo Settings:

- Enter picture capture mode as instructed.
- Press the M Button to enter the Picture settings menu.
- Use the  /  buttons to select and highlight the function you would like to adjust. Press the OK Button to enter the subsequent menus.
- Press the M Button to enter the System settings menu.
- Press the M Button again to exit the menu interface.
- Press the OK Button to enter or confirm the settings.

● Capture Mode:

Options: Single/2S timer/5S timer/10S timer

To set which Capture mode do you want to choose.

● Resolution (To set or reset the resolution of the photo):

Options:

▶ 12M (4032 X 3024 pixels)

▶ 10M (3648 X 2736 pixels)

▶ 8M (3264 X 2448 pixels)

▶ 5M (2592 X 1944 pixels)

▶ 3M (2048 X 1536 pixels)

●Sequence:Off/On

To set On you can take three pictures at a time

●Quality

Options: Fine/ Normal/Economy

To set or reset the quality of picture to Fine; Normal or Economy as desire.

●Sharpness

Option:Strong/Normal/Soft

The higher the sharpness, the more detail

●White Balance

Options:Auto/Daylight/Cloudy/Tungsten/Fluorescent

In different lighting environments, use the corresponding photo mode

●Color

Options:Color/Black&White/Spesia

According to your preference, choose different colors to take photos.

●Exposure

Options: -2.0 ~ +2.0

Choose different exposure values to take photos according to different lighting levels. For example, in dim environment, we should choose higher exposure values to take photos

●Date Stamp

Options: Off/Date/Date&Time

To set or reset off, date, date time, if date&time is selected, the date and time will imprint on the picture.

Playback Mode:

- In the playback mode, press the mode button **M** to enter Playback menu mode.
- Use the up/down button **▲** / **▼** to select the function you would like to adjust. Press the OK button to enter the subsequent menus.
- Press the M Button to enter the System settings menu.
- Press the M Button again to exit the menu mode.
- Press the OK button to enter or confirm the settings.

●Delete

Options: Delete Current/ Delete All

Deletes the current files or all the files as per the on-screen instructions.

●Protect

Options: Lock Current/Unlock Current/Lock All/Unlock All

The Protect function protects a file from being erased accidentally or loop recording to cover. To delete a protected file, it must first be unlocked.

●Slide Show

Options: 2 Sec/5 Sec/8 Sec

To set or reset the time which you play the file via slide show.

Specification:

Video Resolution	UHD P25+FHD P25/FHD P30+FHD P30/ QHD P30+FHD P30/FHD+FHD+FHD/QHD+FHD+FHD
Photo Resolution	12M, 4032 x 3024 pixels 10M, 3648 x 2736 pixels 8M, 3264 x 2448 pixels 5M, 2592 x 1944 pixels 3M, 2048 x 1536 pixels
Display Screen	2.4" IPS
CPU	Nt96670
G-Sensor	DA380 upgrade
View Angle	170°(Front)+120°(Inside)+140°(Rear)
Memory Card	Support Max. 256GB
Car Charger	DC 5V 2A
Storage	Video: MP4 Photo: JPEG
Working temperature	-20°C~65°C
Storage temperature	-30°C~75°C
Battery/ Capacitance	Support

