


size: 150x100mm

封面200铜版纸覆亚膜，内页70g书纸.  
此页不印刷

# P200

## USER MANUAL

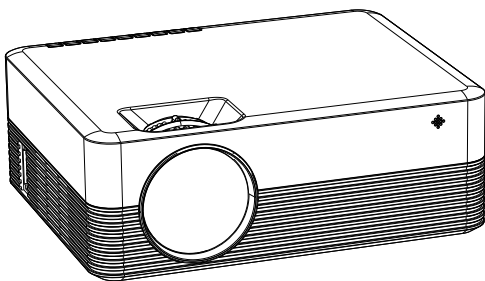

**JEE MAK**




### Important items


Before you use the projector, please read this user manual carefully and keep it in reserve.



# Important safety announcements

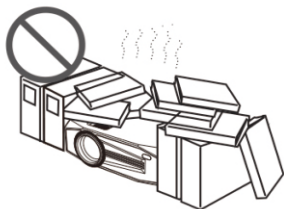


Don't install equipment in a poorly ventilated area

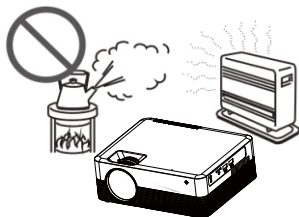

Don't install equipment in hot and humid areas





Don't block the vent (intake or exhaust)

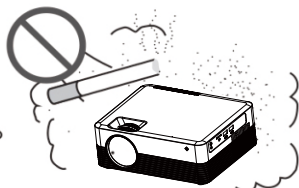


Don't install equipment in dusty or smoky areas

# The Names and Functions of the Components of The Projector

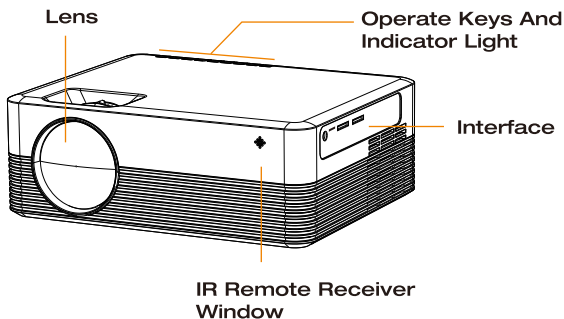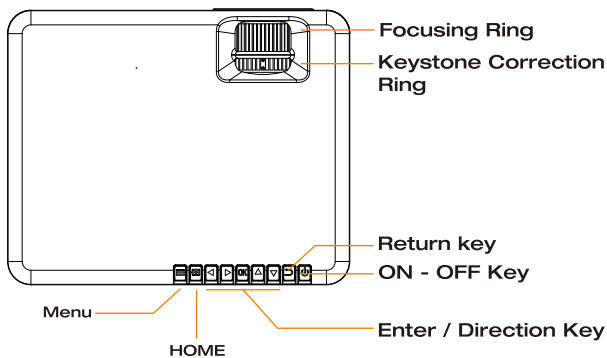


# The Names and Functions of the Components of the Projector

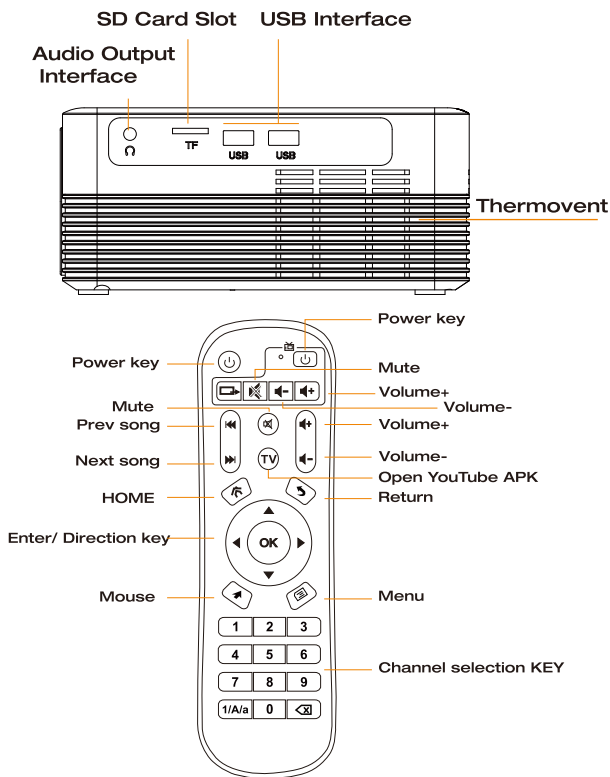

# Connect Equipment and Apparatus

 Direction of signal flow

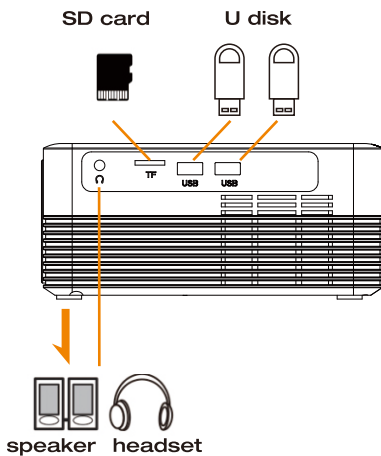


# Installation and Commissioning

## 1 Projector installation

The projector needs to be placed on a horizontal table, not high on one side and low on the other



 Horizontal placement




The hanger is not an accessory

## 2 Adjust focal length

### Focusing ring

### Keystone correction ring

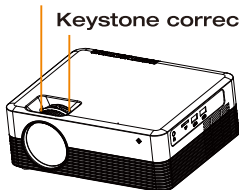

**Focus:** When the image is blurred (as shown in the right diagram), the focus ring on the fuselage can be adjusted to obtain satisfactory image effect. If satisfactory definition cannot be obtained through adjustment, please move the product forward or backward according to the actual situation.

**Keystone correction:** When the image appears keystone anamorphose (as shown in the right diagram), the user needs to use the "keystone correction function" to correct the image to ensure the image is a standard rectangle.

**Adjustment method:** By adjusting the keystone correction ring on the fuselage to adjust the physical position of the lens, the keystone correction can be achieved.

### Hanger installation



Keystone anamorphose




Schematic diagram of anamorphose

Image fuzzy

# Installation and commissioning

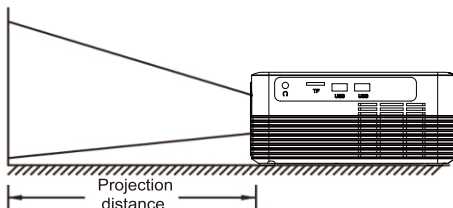

## 3 Projection distance reference




Screen size (inch)	Screen width X height width X height(m)	projection distance (m)
56 inches	height 0.75 m width 1.33 m	1.7 m
66 inches	height 0.87 m width 1.55 m	2.0 m
86 inches	height 1.05 m width 1.86 m	2.5 m
96 inches	height 1.2 m width 2.13 m	2.8 m

## 4 Safety shutdowns

You can turn off the projector and safely store the equipment by following these steps.

1. Press the  key on the projector operation panel or the  key on the remote control to turn off the equipment according to the system prompt.
2. Screw the focus ring into the equipment to ensure that the lens is fully incorporated into the equipment.
3. Store the equipment in a dry and cool place.

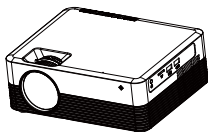

## Chapter 1 Internet Connection

### Wireless Network Connection

Before you use the product,you need to connect the product to the Internet:

Into the device Wi-Fi,wait for about one minute,then nearby Wi-Fi hot spots can be searched will appear in the interface.

Choose your own Wi-Fi access point.

Enter the Wi-Fi password.

## Chapter 2 Basic Setup

### Language Setup

You may choose the system language by following

these steps:

Home screen > Settings > language & input >language. The default language is English ,you may choose your current language and confirm.

Time zone setup.

You should adjust the time zones according to your current location by the following steps:

Home screen > Setting > date & time > select time zone > choose your time zone and confirm.

## Chapter 3 Precautions

1.Projector is mainly used to watch native video or online video,can not used as a phone or computer.

2.If the remote can't control the third - party APP when using,you need use USB mouse auxiliary operation.

3.Download the third - party video APP,please notice that you need download TV edition procedures ,can't download phone or other edition procedures.



- 1、 Image display T-shape adjustment, up and down flip function adjustment app Name: Console Center
- 2、 The machine does not support Dolby encoded audio and video files;
- 3、 If it is not used for a long time, it is necessary to cover the lens with a cover to prevent dust.





