Up **Down**

To raise the keyboard and monitor, pull the actuator handle (located under the work surface) upwards to release the lock. If additional force is required, apply a slight upward force to the opposite corner of the work surface or keyboard tray.


To lower the keyboard and monitor, pull the actuator handle (located under the work surface) upwards to release the lock. Provide the appropriate downward force on the work surface using the palms of your hands.

If you have difficulty lowering (i.e. it feels like the unit is stuck) provide additional downward force by gripping the actuator and apply additional downward force to the horizontal portion behind the column.

UPFITE TERMINER OF THE RESIDENT OF THE PROPERTY OF THE PROPERT



Sit2Stand Dual Monitor

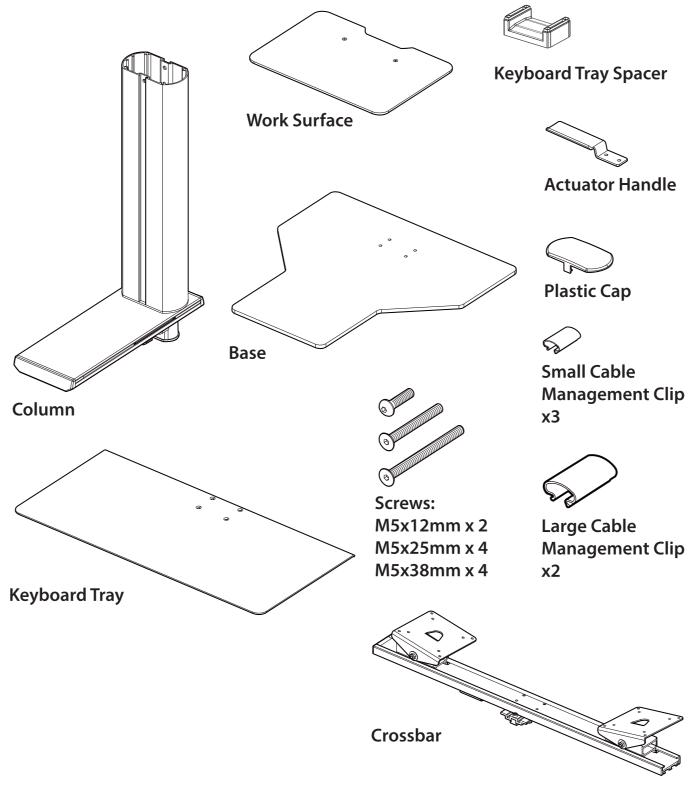


Monitor Mounting Parts:

 Parts:














Spacer x 8

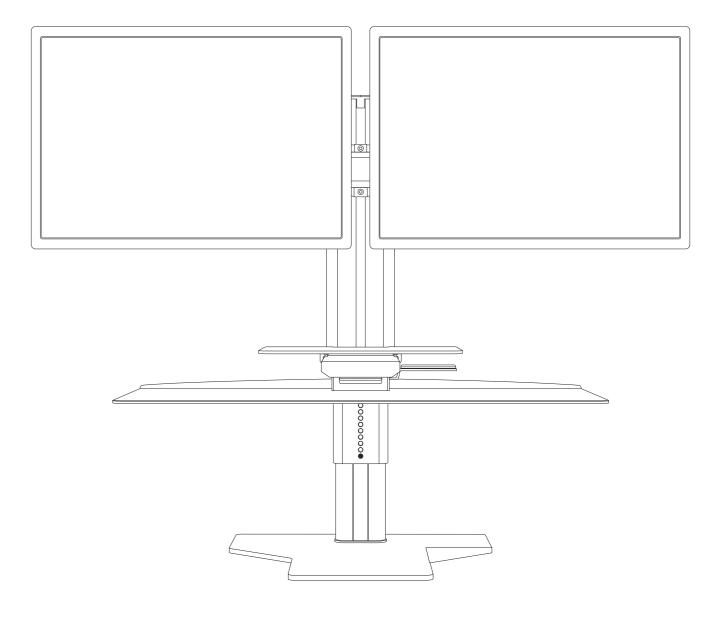


www.**UpriteErgo**.com

cs@**UpriteErgo**.com

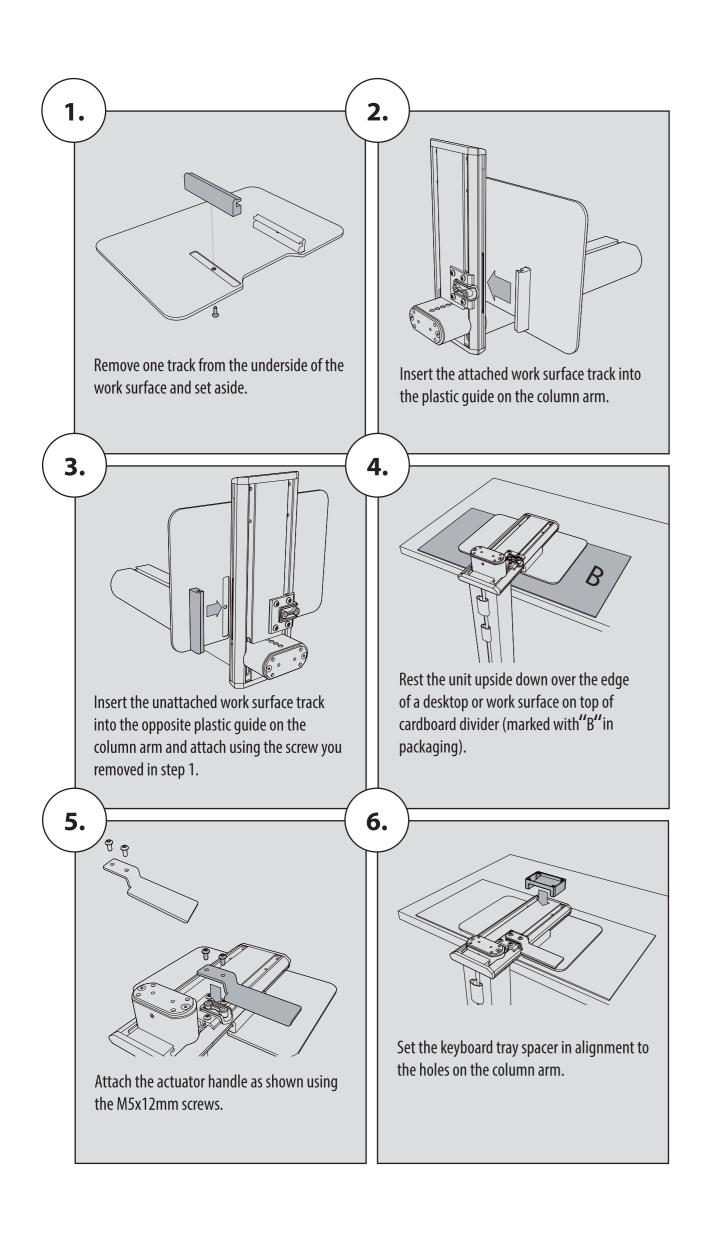

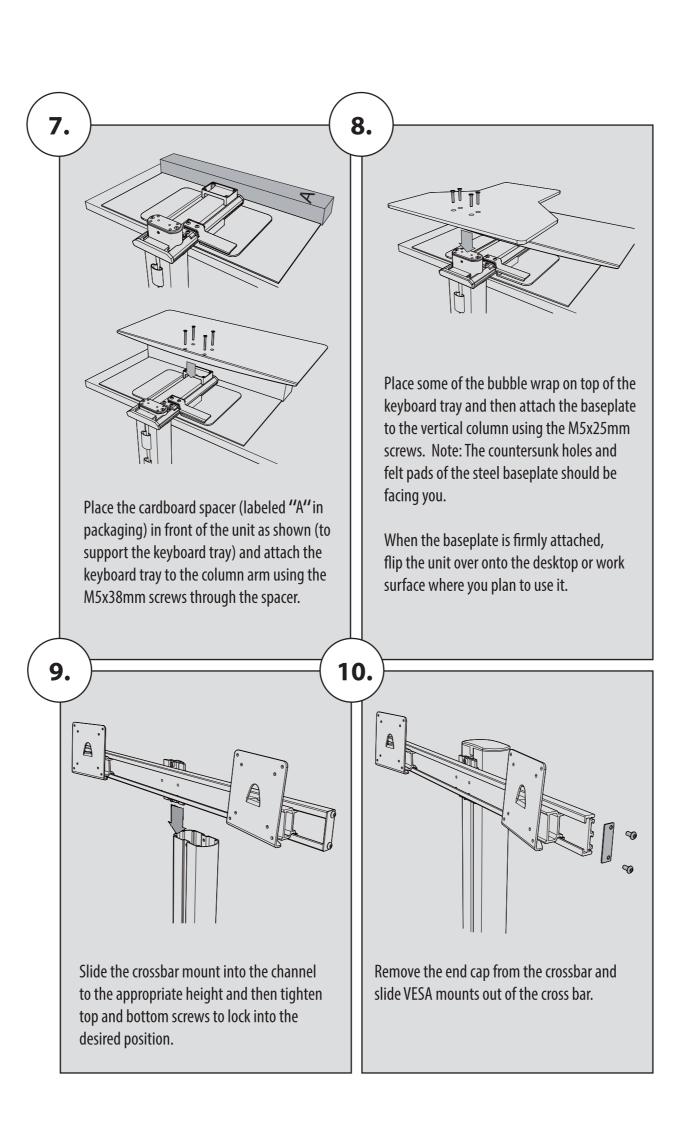

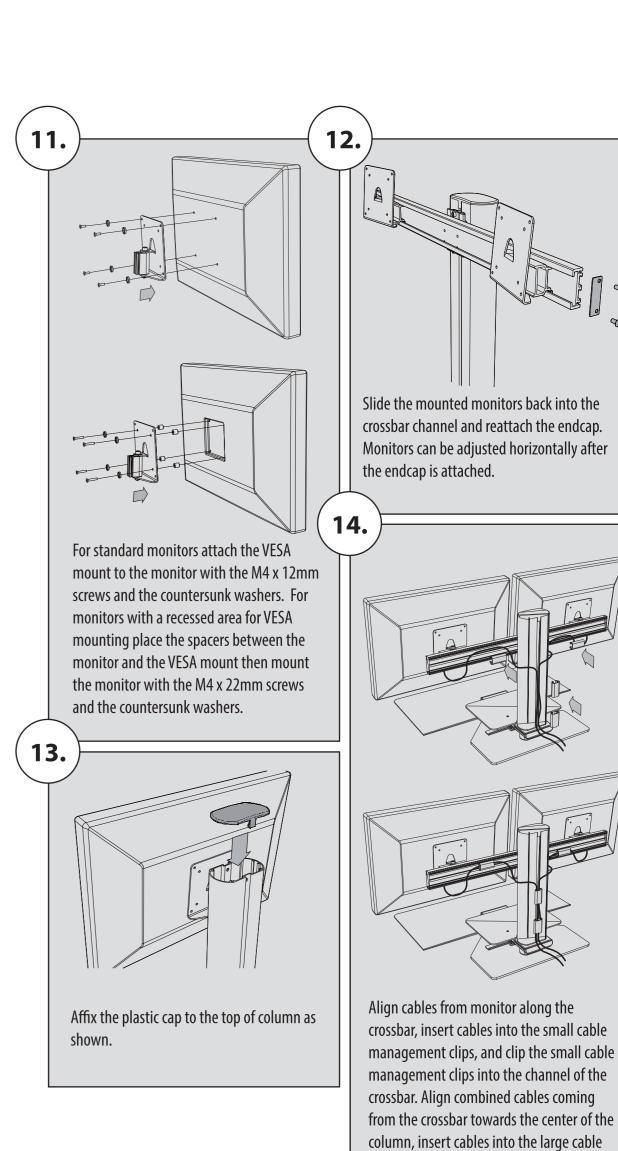

management clips, and clip the large cable management clips into the center channel

of the column.