
ERA Office Chairs Premium Seating Products Handcrafted in the USA

Mechanism Operation Instructions

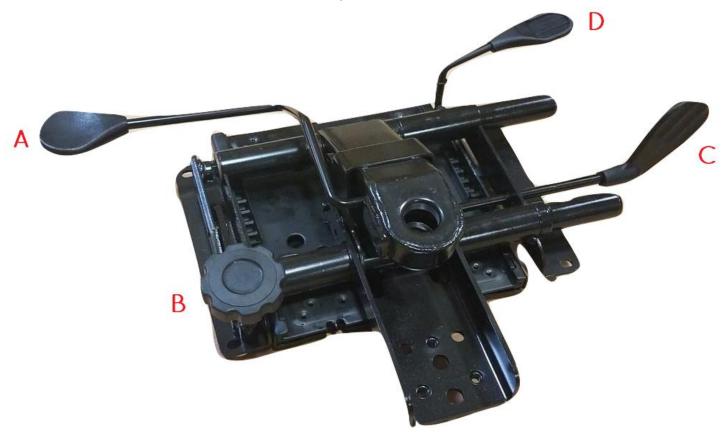

- A. Height Adjustment: To raise seat height, take weight off of seat and pull up on handle A. To lower seat height, sit down and pull up on handle A.
- B. Tilt Tension Adjustment: Turn knob clockwise to increase tilt tension. Turn knob counterclockwise to decrease tension.
- C. Tilt-Lock: To lock chair upright, push in on handle C and push down so the handle C is pointing toward the ground. To activate free floating recline (unlock), push in on handle C and pull handle C toward back of chair until handle is parallel with seat cushion.
- D. Seat Slider: Pull up on handle D and pull or push the seat cushion to desired seat depth. Works best while no weight is on chair.