



Heated Sweatshirt

User manual

Battery Installation

1. Unzip battery pocket inside apparel located just behind the left elbow.
2. Plug the DC power cord, located inside battery pocket, into battery in middle power port of battery marked "12v DC out".
3. Replace battery and cord into the battery pouch.
4. Before closing zipper, press the power button on the top of the battery to power on battery (Note: The battery has an auto off feature and will turn off again after 15 seconds). The battery button also can be pressed through apparel at any time.
5. Close zipper of battery pouch.

Operation

1. To turn on, press the power button located on left chest area of apparel for 3-5 seconds.
2. To change heating levels, simply press the power button. Each press will cycle the temperature setting by one setting. Red light indicates the high-level which temperature is around 125°F. Blue light indicates the medium level which is around 113°F. Green light indicates low level which is around 104°F.
3. To turn off heat, press the power button for 3-5 seconds.

Cleaning

1. Disconnect and remove the battery from the apparel.
2. Hand wash or machine wash in cold water only.
 - a. Recommended to use laundry bag or mesh bag when washing by machine.
3. Recommend hanging to dry.

Do not use bleach.

Do not iron.

Do not wring or twist.

Do not dry clean.