

**BACKYARD OR PROFESSIONAL  
THROWER NOT RELEASING THE  
THROWING ARM**

For Do All: Professional and Backyard manual throwers




# IS YOUR TRIGGER MOUNTED CORRECTLY?

The most common reason a  $\frac{3}{4}$  cock manual thrower does not release the arm is because the trigger is not mounted correctly. The trigger should look like the photo to the right. Make sure the trigger block is split into 2 sections (thinner section on top of the frame, thicker section under the frame).

Thinner part of the block  
on top of the frame.

Thicker part of the block  
under the frame.

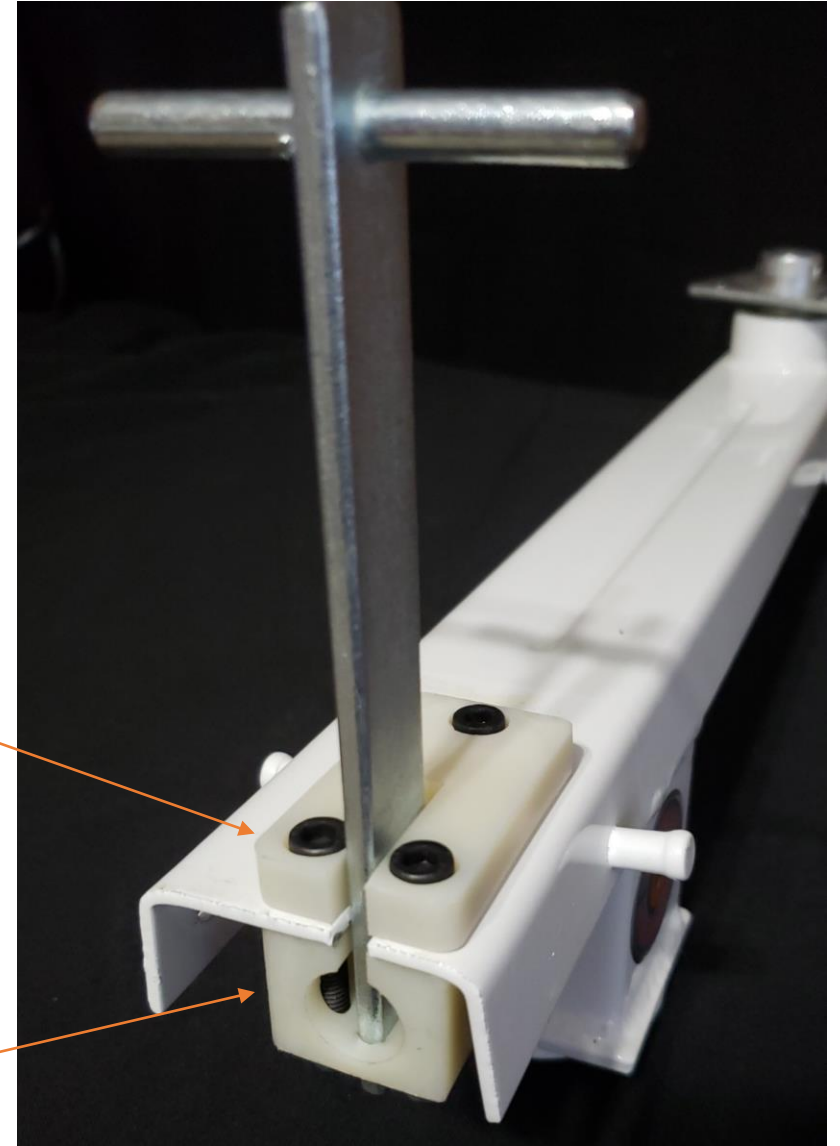

**IF YOU ARE STILL HAVING ISSUES,  
PLEASE CONTACT US AT:**

**CUSTOMERSERVICE@DOALLOUTDOORS.COM**

