

AUTOMATIC THROWER AUTO FIRING

For Do All: FireFly, Fowl Play and Raven



IS YOUR THROWER AUTO FIRING?



First unplug your foot pedal or transmitter for your wireless remote.

- If the machine stops firing you have an issue with the pedal or the remote. (You can purchase a new pedal or remote at: www.doalldoors.com)





CHECK CONNECTIONS

Make sure to check the red and blue wires coming off the limit switch, also the connector going into the circuit board.

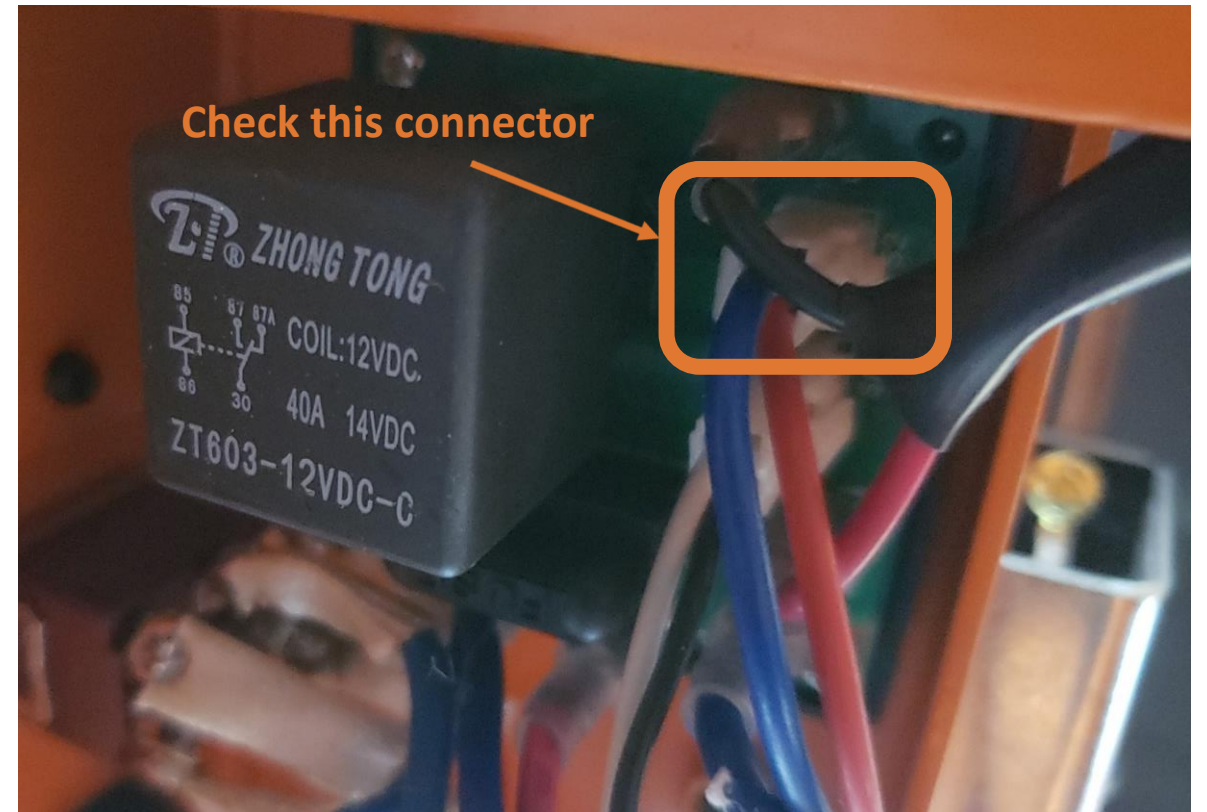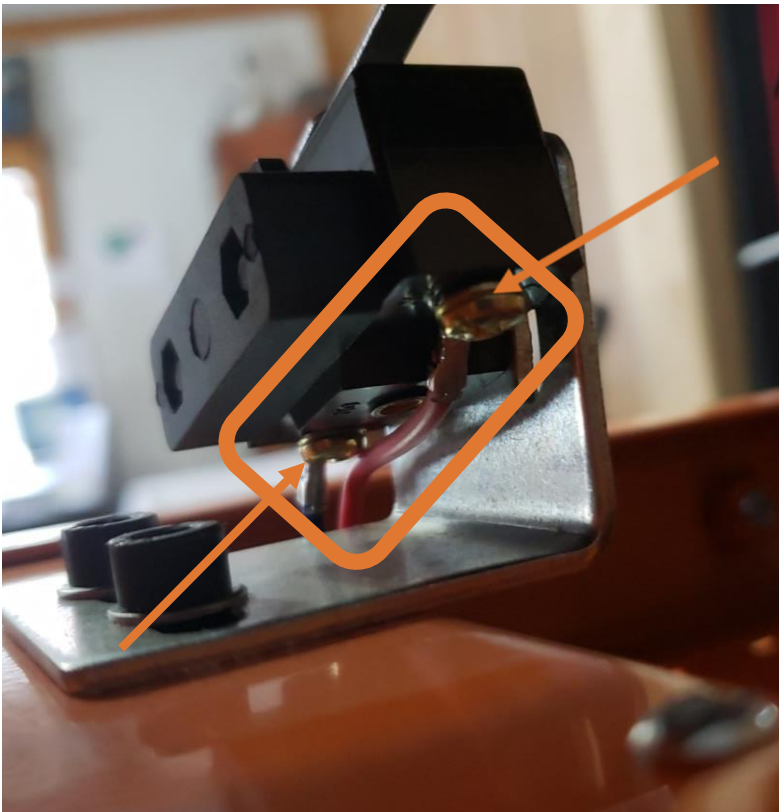

IS THE THROWER STILL AUTO FIRING AFTER CHECKING THE FOOT PEDAL AND CONNECTIONS?

If the thrower is still auto firing you will need to adjust the limit switch UP.
The limit switch is located under the feeder tray.

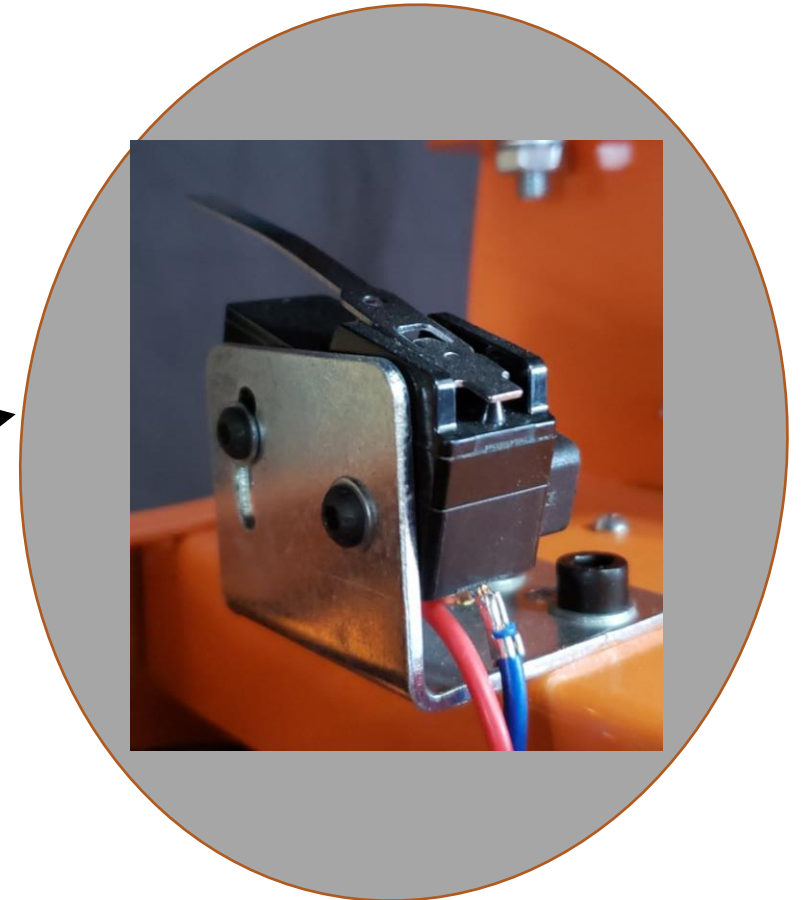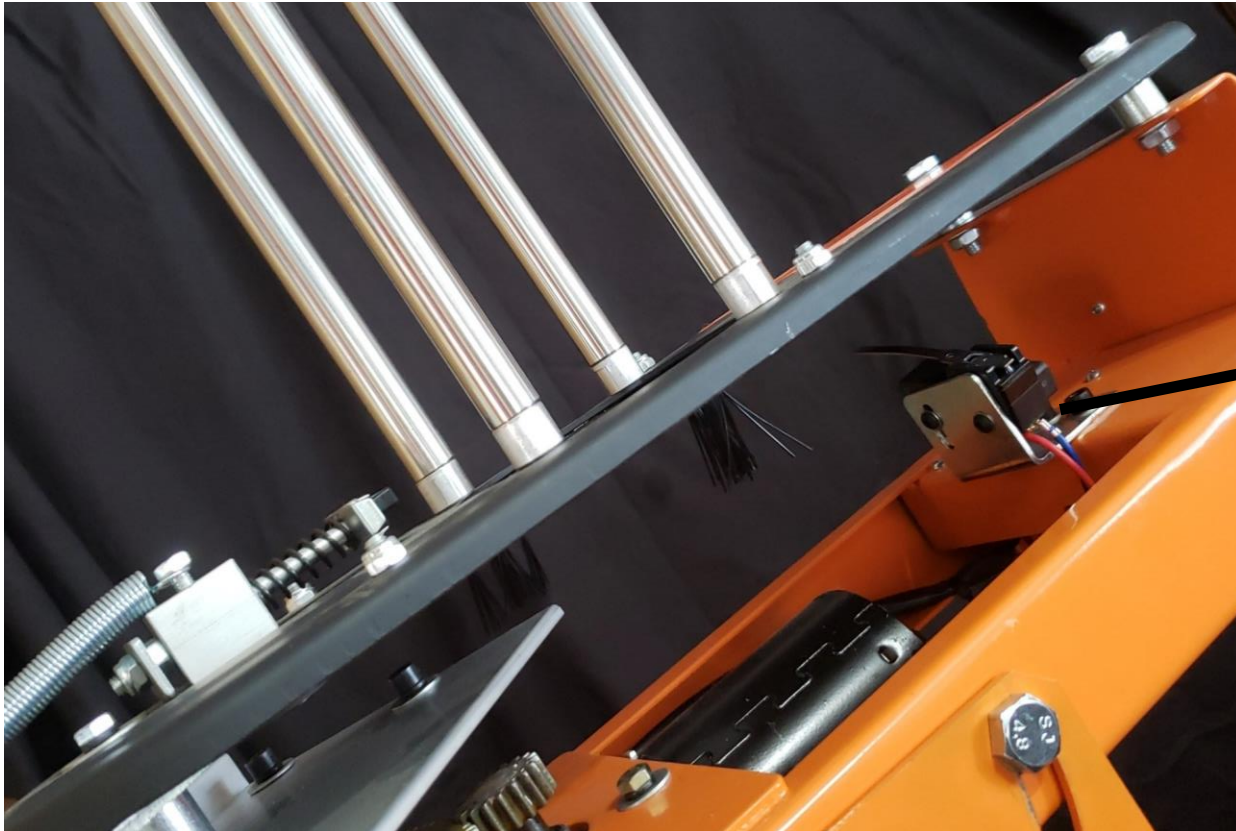

ADJUSTING THE LIMIT SWITCH UP.

There are 4 allen bolts that hold the limit switch to the metal L bracket and the L bracket to the frame. You need to adjust this allen bolt UP. You will need a M2 allen wrench.



**IF YOU ARE STILL HAVING ISSUES,
PLEASE CONTACT US AT:**

CUSTOMERSERVICE@DOALLOUTDOORS.COM

