



Wireless Remote Instructions

Insert the 3-prong male plug into the female side of the cord coming out of the trap & connect alligator clips to 12V battery. Never plug this into a wall outlet! Put side switch on receiver to desired channel "A" or "B". Press and hold the "Program" button for one second, the receiver light will stay on. Press & hold remote button "A" or "B", coinciding with the receiver channel.

Follow the same process to pair additional receivers (sold separately) to either "A" or "B". To unpair, simply press & hold "Program" on receiver for 8 seconds. Both units will flash, confirming they are unpaired.

FOLLOW ALL SAFETY RULES THOROUGHLY. FAILURE TO FOLLOW ALL SAFETY INSTRUCTIONS COULD RESULT IN INJURY OR DEATH.

Adult supervision is required. Always keep targets, firearms and ammunition from the reach of children.

Do All Outdoors, LLC. does not accept any responsibility for damages and/or injury sustained from the use or misuse of this product.

To ensure proper warranty claims, please register your product at www.doalldoors.com