


FULL COCK THROWER NOT RELEASING THE THROWING ARM

For Do All: Full Cock Manual Throwers



FULL COCK THROWER IS NOT RELEASING?

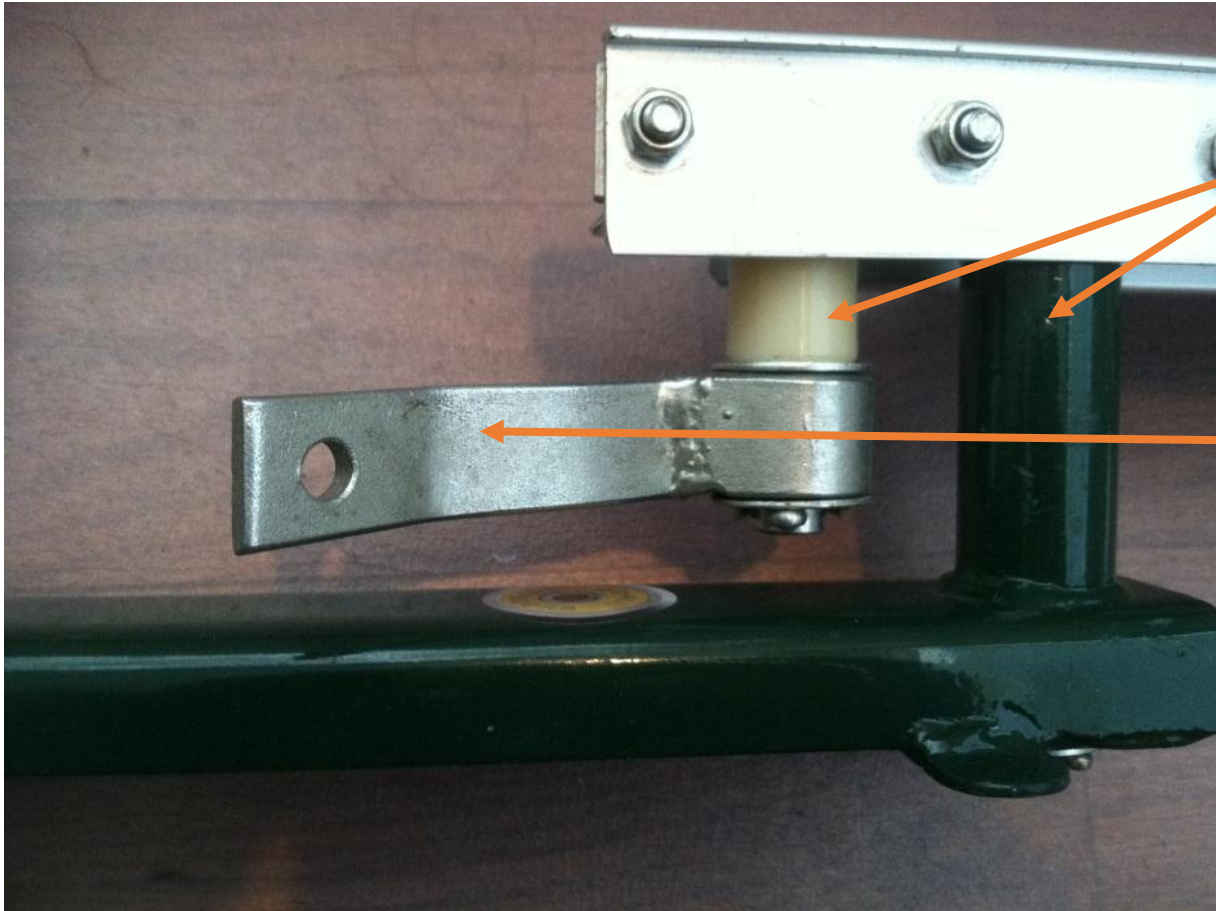

Lubricating both pivots very well, usually resolves the issue and allows the arm to release.

In some cases the Swivel Hook may need to be corrected by removing it from the Throwing Arm and flattening the angle of its bend slightly. This will correct the geometry that is causing it to hang-up under spring tension.

Avoid cocking the throwing arm counter-clockwise. This causes the swivel hook to bend against the pivot post which can result in the geometry issue of the throwing arm hanging under spring tension.

**IF YOU ARE STILL HAVING ISSUES,
PLEASE CONTACT US AT:**

CUSTOMERSERVICE@DOALLOUTDOORS.COM

