 


# SCHMÉCKÉ

CIGAR HUMIDOR COOLER

## USER GUIDE

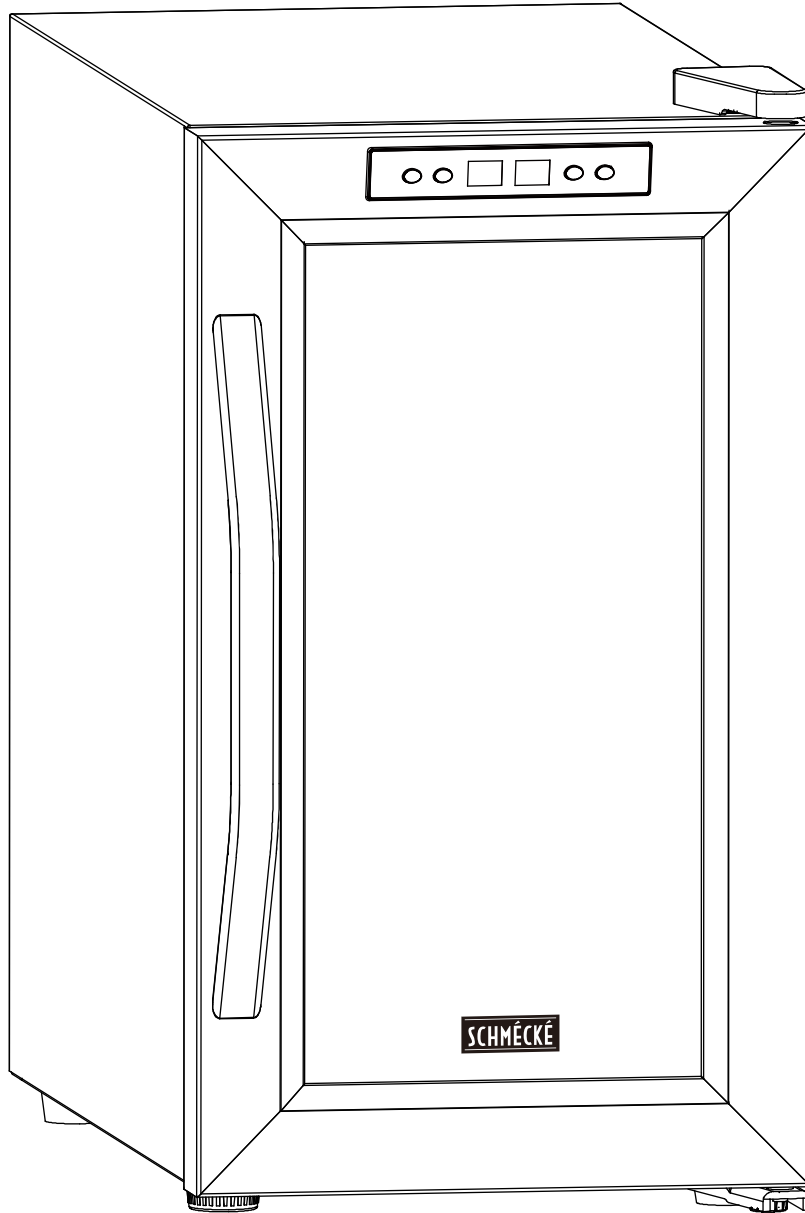

SHMCCH2500SS | SHMCCH3000SS | SHMCCH4000SS

Thank you for purchasing the Schmécké™ Cigar Cooler Humidor. This User Guide is intended to provide you with guidelines to ensure that the operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

## CONTENTS

SAFETY PRECAUTIONS	2	MAINTAINING CIGAR HUMIDITY	5
BOX CONTENTS	3	CONTROL PANEL	5
REQUIRED TOOLS	3	SPECIFICATIONS	5
PARTS	3	TROUBLESHOOTING	6
SETTING UP THE CIGAR COOLER	4	CUSTOMER SERVICE INFO	6
ATTACHING THE HANDLE	4	WARRANTY	7
BEFORE FIRST USE	4		

## SAFETY PRECAUTIONS

**WARNING: Choking Hazard – Small parts. This product contains small parts and is not suitable for children under 3 years old.**

 
- Remove all packaging before using this device. Please keep all packaging materials out of reach of children and pets.
- Properly dispose of all packing materials immediately after unpacking product as the bags used for packaging could present a suffocation or choking hazard.
- Read all instructions carefully before attempting to operate this device. Improper usage could result in injury or a reduction in efficacy.
- Never allow children to operate, play with, or crawl inside the appliance.
- Keep all flammable liquids or materials away from this unit. Failure to do so may result in a fire or explosion.
- Keep out of direct sunlight and away from heat sources.
- Always keep the cigar cooler in a dry, well-ventilated space with an ambient temperature between 50 °F – 80 °F (10 °C – 26 °C).
- Before connecting the unit to a power source for the first time, allow it stand upright for approximately two (2) hours. This will reduce the possibility of any system malfunctions which may have occurred from handling during shipping.
- When positioning the cigar cooler, be sure to leave at least six (6) inches of space at the back and 10 inches on both sides. This is to ensure that none of the ventilation openings are blocked.
- Do not attempt to repair or replace any parts or service this unit unless specifically recommended in this User Guide.
- Use only with a properly grounded, standard 115 V, 60 Hz electrical outlet to avoid the risk of electrical shock.
- Do not use with an extension cord.
- Do not use the unit if the power cord is damaged. Should the power cord become damaged, contact the manufacturer, its service agent, or a similarly qualified person to avoid a hazard.
- Keep all ventilation openings in the unit enclosure or built-in structure clear of obstruction.

## BOX CONTENTS

Cigar cooler  
Screws for handle assembly (x2)  
Stainless-steel handle  
Spanish cedar drawer and shelves  
Humidity absorption sponge  
Water reservoir  
User guide




## PARTS

1. Main body
2. Fan
3. Wooden shelves
4. Cigar drawer
5. Water reservoir
6. Adjustable feet
7. Upper door hinge with cover
8. Door gasket
9. Door handle
10. LED lights
11. Lower hinge

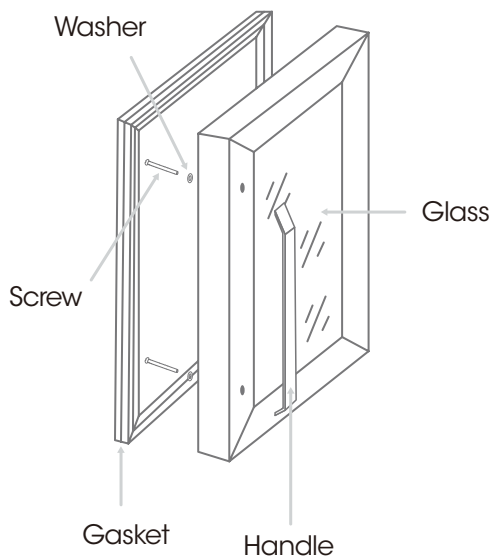

## REQUIRED TOOLS

   Philips-head screwdriver

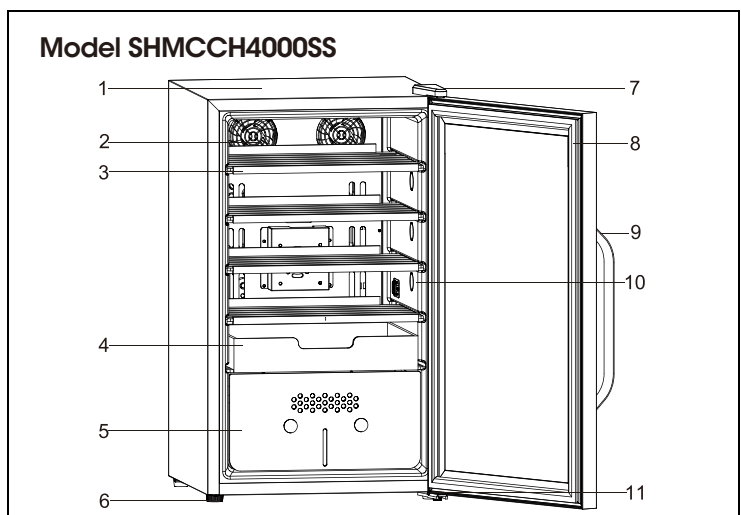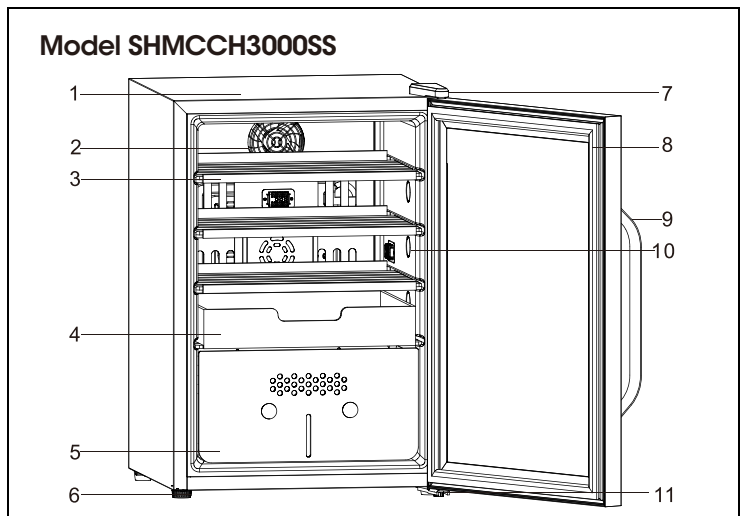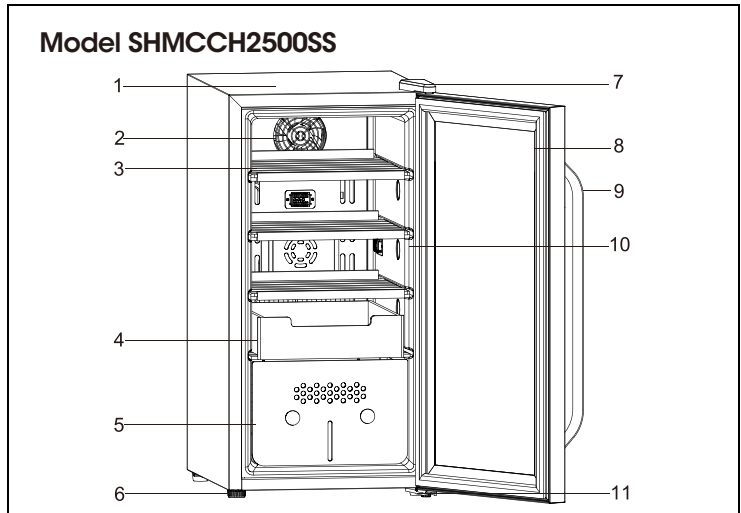

## SETTING UP THE CIGAR COOLER

When choosing a location to store the cigar cooler, consider the following:

- Place the unit on a sturdy, level surface that is strong enough to support the weight of the unit when full.
- Ensure that there is at least six (6) inches of space behind the cooler and at least 10 inches on each side of the cooler.
- It is not recommended to place the cooler on a carpet or rug.

 
Using a level, adjust the feet to ensure the unit is perfectly level.

## ATTACHING THE HANDLE

1. Carefully pull back the door gasket without removing it completely. No tools are required as the gasket is easily removed by hand.




2. Guide the two (2) included screws through the pre-drilled holes in the door until they are entirely through. Then, align the handle with the door.

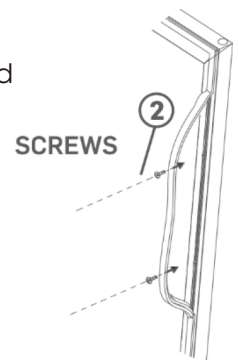


3. Tighten the screws using a Phillips-head screwdriver (not included) until the handle sits flush and is secured tightly against the door frame.

 *NOTE: DO NOT over-tighten as this will cause damage to the handle assembly.*

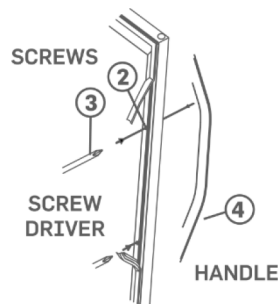

 4. Put the door gasket back to its original position.

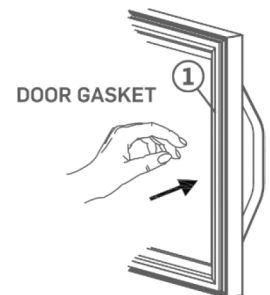

## BEFORE FIRST USE

When you first turn on the cigar cooler (or restart it after an extended period of non-use), there may be a few degrees of variance between the temperatures you select and the one indicated on the LCD readout. This is normal after periods of inactivity. Leave the cigar cooler on for a few hours before resuming normal use.

Place the cigar cooler in a dry, well-ventilated space with an ambient temperature between 50 °F – 80 °F (10 °C – 26 °C).

*NOTE: If the ambient temperature is above or below the recommended range, the unit's performance may be affected. Extreme heat or cold may cause the interior temperature to fluctuate.*

*Other factors may affect performance including the internal lights being on, the rack the cigars are on, and the temperature/humidity of the room. For best results, the humidity in the room should be between 50% to 75%.*

## MAINTAINING CIGAR HUMIDITY

Keeping your cigars at the proper humidity will help you achieve the perfect burn and flavor. To set the humidity in your cooler, follow the steps below:

1. Fill the water reservoir to about  $\frac{3}{4}$  full with 100% distilled water.
2. Place the filled reservoir into its place at the bottom of the cigar cooler (regularly check the water level and refill as necessary).
3. Select your desired humidity setting using the up and down buttons on the control panel.
4. After selecting your desired humidity, keep the door closed as often as possible. Once the desired level of humidity has been reached, the cooler will work to maintain that humidity level.

 
The humidity level of cigars is a matter of personal taste and varies depending on the kind of cigars you are storing. The generally recommended humidity level for cigars is between 65% and 75%. For best results, we recommend these humidity levels for the following applications:

65% – Ideal for Cuban cigars and those who enjoy dryer cigars with a stronger burn.

69% – Standard level recommended by cigar manufacturers.

72% – Best choice for humidor seasoning, not recommended to consistently keep cigars at this level.

## CONTROL PANEL

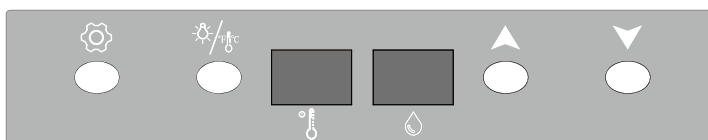

1. Set the temperature inside the cigar cooler by pressing the ▲ and ▼ buttons to adjust the temperature in one degree (1°) increments.

*NOTE: Should the ambient temperature fall below your selected temperature, integrated heaters will automatically turn on to maintain your selected temperature.*

2. To switch between Fahrenheit and Celsius, press and hold the  $\text{F}/\text{C}$  button for two (2) seconds.
3. To turn the interior lights on or off, press the  $\text{F}/\text{C}$  button.

*NOTE: The light will turn off automatically if it remains on for 10 minutes. Press the button again to turn it back on.*

## SPECIFICATIONS

	<b>SHMCCH2500SS</b>	<b>SHMCCH3000SS</b>	<b>SHMCCH4000SS</b>
Power Supply	115 V / 60 Hz	115 V / 60 Hz	115 V / 60 Hz
Rated Power	95 W	95 W	95 W
Temperature Range	61 °F - 71 °F (16 °C - 22 °C)	61 °F - 71 °F (16 °C - 22 °C)	61 °F - 71 °F (16 °C - 22 °C)
Humidity Range	65% - 75% RH	65% - 75% RH	65% - 75% RH
Unit Dimensions	13.5" x 17.7" x 27.1" (34.5 x 45 x 69 cm)	16.9" x 17.7" x 25.1" (43 x 45 x 64 cm)	16.9" x 17.7" x 29.1" (43 x 45 x 74 cm)
Storage Capacity	250 cigars	300 cigars	400 cigars
Net Weight	41.8 lbs. (19 kg)	39.6 lbs. (18 kg)	48 lbs. (21.8 kg)
Total Capacity	43 L / 1.5 ft <sup>3</sup>	58 L / 1.8 ft <sup>3</sup>	70 L / 2.4 ft <sup>3</sup>

## TROUBLESHOOTING

Issues	Possible Causes	Probable Solutions
The cigar cooler does not turn on.	The power source may not match the required power for the unit.	Plug the unit into an appropriate power source.
	The circuit breaker may have tripped, or a fuse has blown.	Check your fuse box or contact a qualified electrician.
The cigar cooler does not cool down to the desired temperature.	The external environment may be too hot.	Set up the unit in an appropriate environment.
	The door may be opened too frequently.	Keep the door closed until the unit reaches the desired temperature.
	The door is not completely closed.	Make sure the door closes and seals after each opening.
	The door seal does not seal properly.	Contact Schmécké customer support for assistance.
	The unit does not have sufficient clearance.	Ensure that there is at least six (6) inches behind the cooler and at least 10 inches are on all other sides.
The cigar cooler vibrates while in operation.	The unit is positioned on an unstable surface.	Make sure that the unit is placed on a level, stable surface.
The cigar cooler is noisy while in operation.	The unit is positioned on an unstable surface.	Make sure that the unit is placed on a level, stable surface.
	The fan may not be working properly.	Contact Schmécké customer support for assistance.
The cigar cooler will not close properly.	The unit is positioned on an unstable surface.	Make sure that the unit is placed on a level, stable surface.
	The door is reversed and not properly installed.	Review the instructions for installing the door gasket in this user guide.
	The seal has weakened.	Contact Schmécké customer support for assistance.
The LED display does not work.	The main control board may be damaged or is otherwise malfunctioning.	Contact Schmécké customer support for assistance.
	The plug may be damaged.	Contact Schmécké customer support for assistance.
There is an LED display error.	There is a PCB problem.	Contact Schmécké customer support for assistance.
The buttons do not function.	The temperature control panel may be damaged.	Contact Schmécké customer support for assistance.
Frost or ice developed inside the cigar cooler.	Ambient temperature is too low.	Restart the unit.

### Questions or Problems? Contact Us!

info@supportcbp.com | 833-876-2922

[www.schmecke.com](http://www.schmecke.com)

SCHMECKE is a trademark of C&A IP Holdings, LLC in the US. All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 | MADE IN CHINA | © 2020. C&A IP Holdings, LLC. All Rights Reserved.

## WARRANTY

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This Schmécké™ Cigar Cooler Humidor ("Product"), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the "Company") to the original consumer purchaser only, against certain defects in material and workmanship ("Warranty") as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

info@supportcbp.com

1-833-876-2922

Shipping expenses to the Company's Return Facility are not covered by this warranty, and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

**EXCLUSIONS AND LIMITATIONS** The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company's property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-Schécké™ Cigar Cooler Humidor product, hardware or software, even if packaged or sold with the Product;
- (b) Damage caused by use with non-Schécké™ Cigar Cooler Humidor products;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third party services;
- (f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses, and bulbs;
- (h) Cosmetic damage; or
- (i) If any Schmécké™ Cigar Cooler Humidor serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.