

# Retro Digital Watch



## How to set the time, and date:

This is a touchscreen LED watch. There are no buttons. Tap the center of the screen once to show the time, twice to show the date, and three times to show the seconds. The screen will automatically go off after four seconds

As a general rule, when setting the time and date, tap and hold the screen to confirm your setting, and tap once to change a setting

To set the time, touch the screen whilst it shows the time, and hold, until the display changes. Tap the screen to change the hour, then hold once the hour is correct. You will see an A, or a P on the right side of the screen whilst doing this, which means AM or PM. Then, tap the screen to change minutes, and hold once they are correct. After the time has been set, the screen will move to the year. Tap once to change the year, and then hold to confirm the setting. The screen will then finally move onto the month, and day. Tap once to change the month, then hold to confirm the setting, and then again tap once to change the day, and hold to confirm. Once the day has been confirmed, the watch will exit the setting mode and return to the default time display.

When looking at the time, if it is PM, a small P is displayed at the top left side of the screen