



Vibratory Power Screed Assembly & Troubleshooting Manual

TVSA-T




www.tomahawk-power.com



Vibratory Power Screed Handle Quick Assembly



1 Connect the handgrip bar bars over the screed frame.

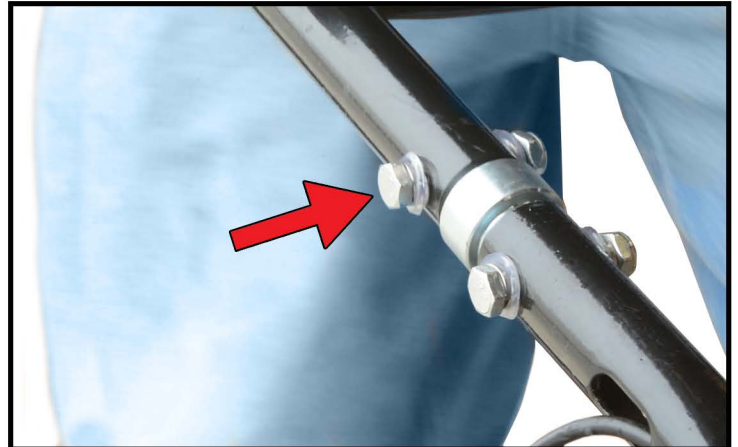

2 Feed each bolt through a washer and into the handgrip/screed frame.



3 Secure the bolt with a nut and washer tightly. Repeat Steps 2-3 on the other handle.



4 Secure the throttle control to the right handle. Feed a bolt through the back. Tighten with a nut.



5 Feed a bolt through the frame and into the kickstand bar and two washers. Tighten with a nut.



6 Using the kick stand, raise up your assembled power screed.

Vibratory Power Screed Assembly Manual



1 Remove all parts from the packaging.
(You may not need all pieces for assembly).




2 Remove the bolts and washers from the base
of the machine.



3 Tip the engine onto its front*, then flip the
screed blade on top, matching up the holes.



4 Feed the bolts through the base and blade.

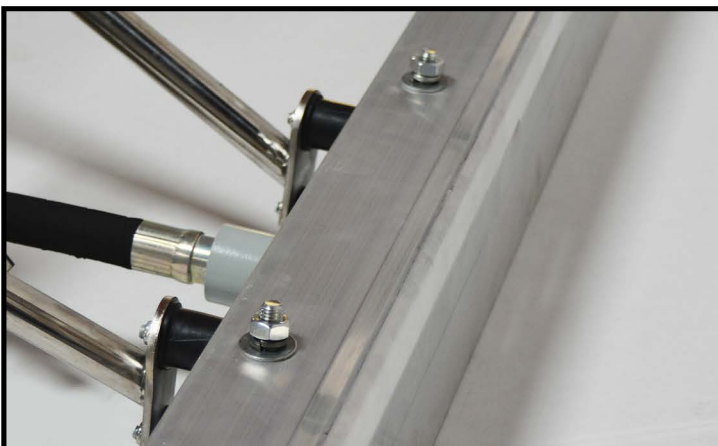

5 Fasten the bolts and washers tightly. (A 3/4"
socket is recommended for a secure fit).



6 Flip the screed back to the upright position
and add fuel for the best results.

* **DO NOT** leave fuel in the engine when tipping over the machine. This may cause issues starting the machine.

Vibratory Power Screenshot Troubleshooting Manual

For issues with Recoil Starter, Pressure Build Up, Flooded Engine, & Smoke



1 If your screed has difficulty starting or excess engine smoke, your engine may be flooded.




TIP - Always store screed engine in this position and drain fuel completely


2 Lean the screed back onto its handles, to drain the fuel back into the tank.




3 Remove the engine cover using a #4 Allen Wrench.

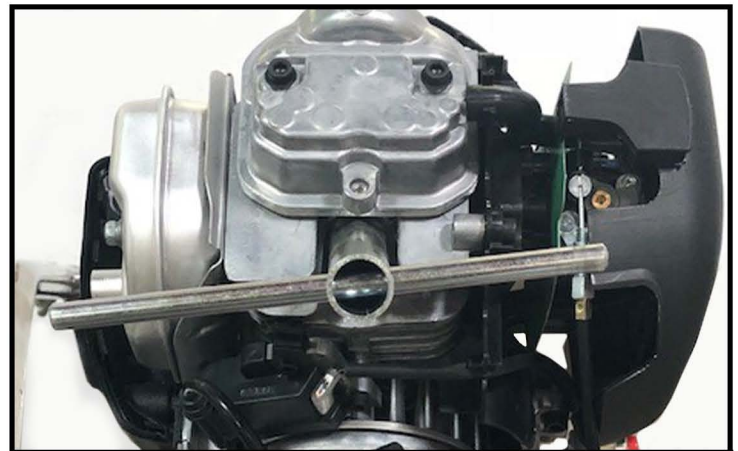

4 Remove the engine's spark plug with a spark plug wrench.

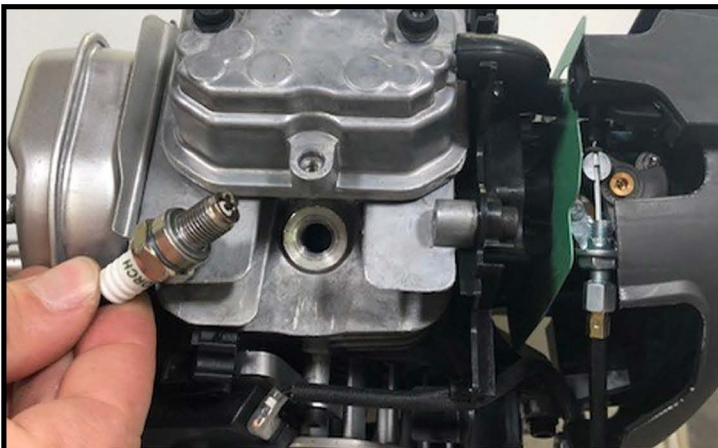

5 Test the plug by touching it to the metal cylinder & pull the recoil starter several times.

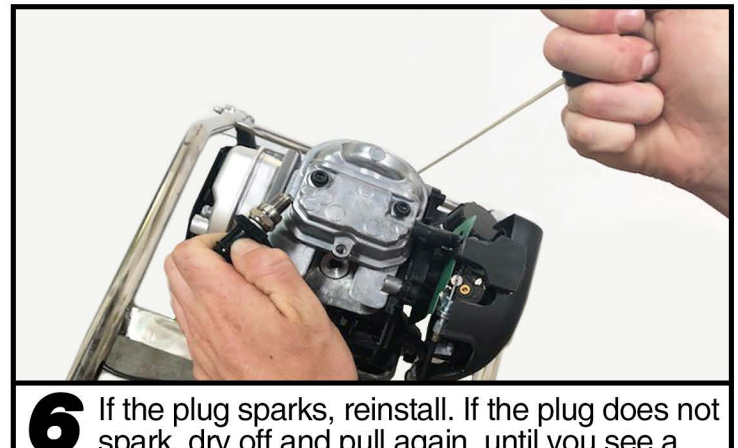

6 If the plug sparks, reinstall. If the plug does not spark, dry off and pull again, until you see a spark. If the spark plug will not spark, replace the spark plug.