



www.tomahawk-power.com

Concrete Scarifier Assembly Manual **TSCAR-8H**





www.tomahawk-power.com

Concrete Scarifier Assembly Manual **TSCAR-8H**

Table of Contents

Table of Contents	2
Suggest Tools	2
Handle Assembly	3-4
Drum Replacement Assembly	5

Suggested Tools for Assembly

TOOL

5/16 Allen Key

26mm Socket

26mm Wrench

USED ON

Handle Assembly

Drum Assembly

Drum Assembly

Concrete Scarifier Handle Assembly Pt. 1



1 Remove the scarifier's engine and handles from their packaging.



2 Using a 5/16 Allen Wrench, unscrew the bolts from the machine's housing.




3 Lean the engine forward and fasten the handle to the machine's housing.



4 Unwind the kill-switch wire from around the machine's handle.



5 Thread the kill-switch line between the bottom frame of the machine's housing.

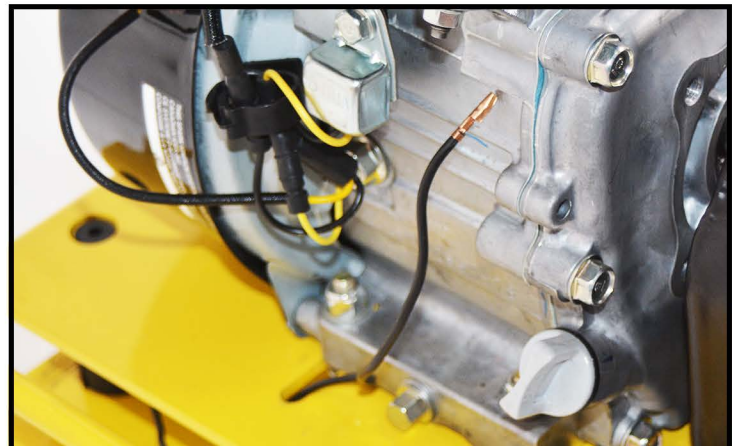

6 Bring the kill-switch wire to the On/Off Switch on the left of the engine.


Concrete Scarifier Handle Assembly Pt. 2




1 Pull back the black plastic clip to find the engine wire.



2 Unplug the upper black engine wire.

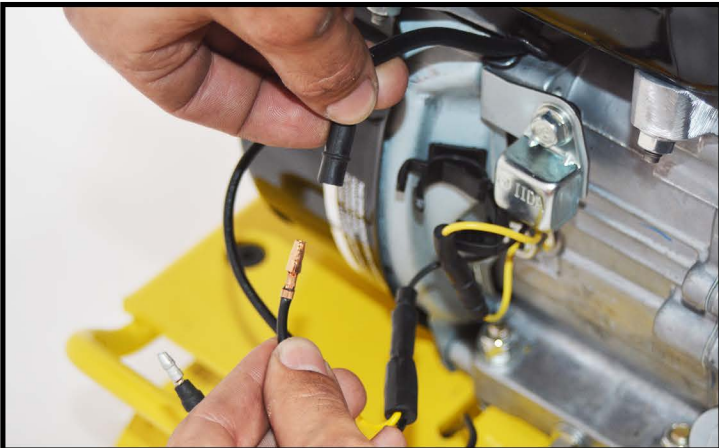

3 Plug in the kill switch wire to the black engine wire.

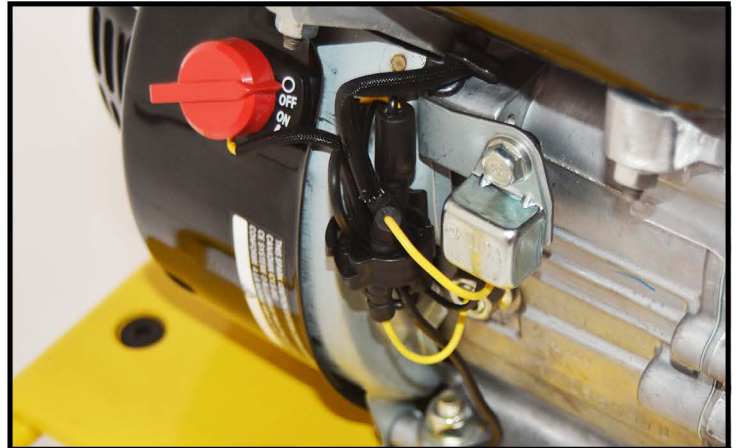

4 Bundle the wires and clip together with the black plastic clip.



5 Your concrete scarifier is now ready for use.


Concrete Scarifier Drum Install/Replacement




1 Tilt the machine forward.



2 Use a 26mm socket and a wrench to remove the drum bar under the housing.

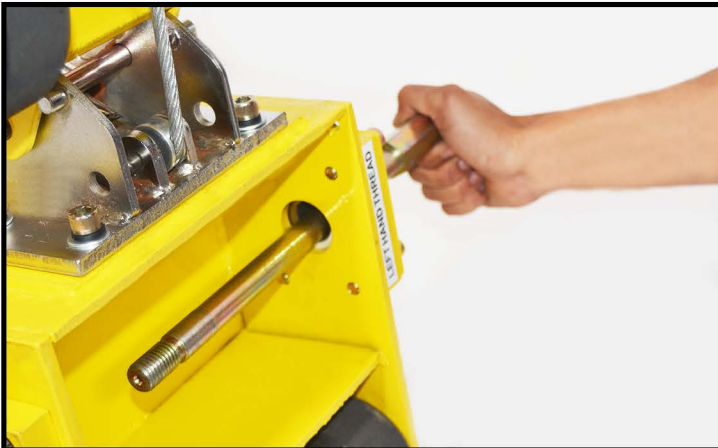

3 Twist bar in clockwise motion (reverse thread) to loosen. (Remove old drum if replacing).

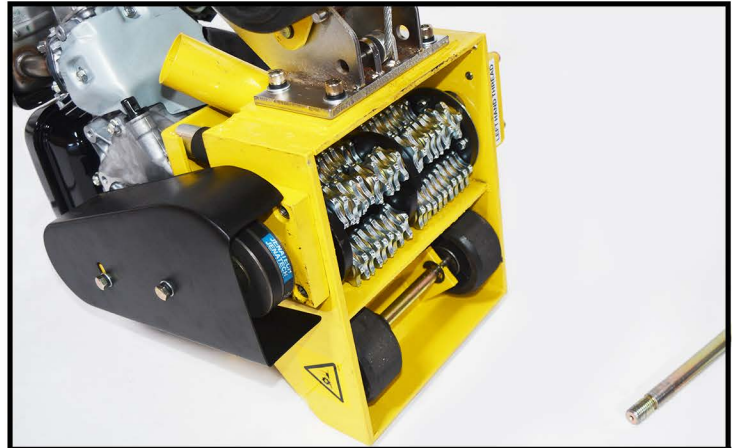

4 Place new drum inside the machine's housing.



5 Push the bar through the drum to the outside of the machine's housing.



6 Twist the bar in a counterclockwise direction to tighten (reverse thread).