

▲ The increased dimensions for <u>combustible enclosures</u> allow for a required air gap along all sides of the unit. <u>See the COMBUSTIBLE ENCLOSURE CUT-OUT section below</u> for details.

TOP VIEW

SIDE VIEW

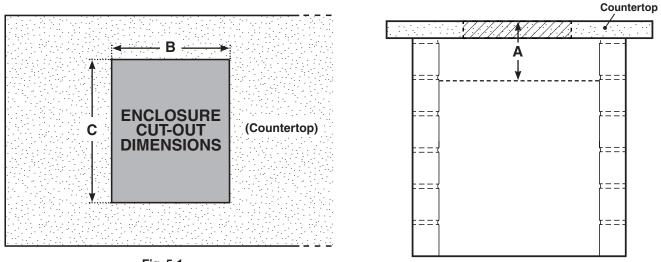


Fig. 5-1

Fig. 5-2

Important: FOR YOUR SAFETY, you must provide openings in the island enclosure for drainage, replacement air, and cross-ventilation of any storage area exposed to possible leakage from gas connections, the unit, or propane tanks. See the ENCLOSURE REQUIREMENTS section for details.

COMBUSTIBLE ENCLOSURE CUT-OUT

This unit may be installed into combustible framing (wood, for instance) provided there is a minimum of a 1/2" airspace between <u>ALL sides</u> of the unit and any combustible material.

