



LE Griddle GEE-40

Instructions Manual

Dear Customer,

Thank you for purchasing this SISTERIA product. It is very easy to use, but we strongly recommend that you carefully read these instructions which include advice on how to use and install your appliance in order to obtain optimum and safe results.

Reception and unpacking

Should you notice any damage when unpacking, please contact your retailer.

General rules applicable to electric equipment

WARNING:

- 1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.**

**When using electric appliances, safety measures must always be taken:
Please read all the instructions carefully.**

This appliance is not designed for use by people (including children) whose physical, sensorial or mental capacities are impaired or by people with no experience or knowledge, unless they have been supervised or given training in the use of the appliance beforehand by a person responsible for their safety.

Some parts can be hot, keep the children away from the Griddle
The appliance must never be left without supervision during use.

Do not move the device during operation.

Do not use the appliance for anything other than the purpose which is described.

There is a risk of accidents if accessories used are not recommended by the manufacturer of the appliance.

This appliance must be kept away from flammable materials.

Use protective gloves when handling particularly hot parts of the appliance.

Allow the appliance to cool down before handling or cleaning.

The underneath of the appliance must be kept well ventilated to ensure good air circulation.

Place the appliance on a stable, dry surface, slightly away from the edge and more than 20 cm away from any walls or heat-sensitive objects.

Recommended hot plate height: 85 to 95 cm from the ground for a comfortable working position.

Any modification of the appliance may be dangerous.

Do not obstruct the ventilation openings on the frame.

Warning: Do not use or store any flammable liquids or vapours in the vicinity of the Griddle.

Store the appliance in a dry place.

Place the appliance on a stable, dry surface, slightly away from the edge and more than 20 cm away from any walls or heat-sensitive objects (Plastic, Wood,)

We recommend you to keep the original packaging in order to store the appliance.

The appliance must be connected to a power outlet with an earth contact.

The appliance must be powered by means of a residual current device with a rated residual operating current of 30 mA or below.

We recommend that you inspect the power cable regularly for any sign of damage.

When using an extension cord, it must be unwound fully to prevent the cable from overheating. Always connect and disconnect the power lead when the temperature is set to the minimum and to stop.

To guard against electric shocks, do not immerse the lead, connector or body of the appliance in water or any other liquid. Do not handle with wet hands.

Do not leave the lead hanging from a table or counter.

Do not place the appliance and its lead on or near a surface which is likely to become hot (cooking plate, gas burner, oven, etc.).

Do not obstruct the ventilation holes in the bottom plate under the frame.

Do not obstruct the frame's ventilation inlets.

Do not clean the appliance with a high or low pressure water spray.

Do not connect or use an appliance with a damaged lead or plug. If the power supply cable is damaged it must be replaced by the distributor, its after-sales service or qualified persons to avoid any danger.

In the event of a failure, inspection and repairs must be performed by an approved technician. Any maintenance operations must be performed by an approved technician.

The appliance is not intended to be operated using an external timer or a separate remote control system.

KEEP THESE INSTRUCTIONS

SISTERIA cannot be held responsible for any damage incurred to objects or people resulting from incorrect installation of the appliance.

Technical description

Characteristics

- 304 Stainless steel frame
- 304 Stainless steel cooking plate certified for contact with food
- 1 Heating zone 1800W
- 1 adjustable thermostats 0 to 100% of temperature
- 1 safety thermal cut
- Removable tray for liquid and waste recovery
- Outdoor and indoor using

Référence	Size	weight	power	Cooking surface	Cooking material	Plug
GFE 40	17"1/2x18"3/4x12"1/2	74 lbs	1800 WATTS	16" x 15"3/4	304 Stainless Steel	3 Prong Grounded plug 120V 16A 60Hz

Operation

Installation

Install the Griddle on a flat surface coated with an inflammable material (tiles, fire brick, etc.). The distance between the Griddle and the adjacent walls must be at least 2 m.

IMPORTANT MUST BE USE WITH A GFCI EQUIPED OUTLET OR CIRCUIT, THE DEVICE IS DELIVERED WITH A THREE PRONG GROUNDED PLUG.

POWERING ON

Connect the device to the nearest power source (see technical specifications of the appliance).

Push power button On, turn the Power control knob.

EXTINCTION

Turn the power control knob to zero, push the power button OFF and disconnect the appliance.

Use

COOKING

Choose the power cooking temperature according to the food. Preheat the device for 10 to 20 minutes by setting the selected temperature.

If necessary, coat the plate evenly with oil using a pad or brush. Place the food on the plate and cook according to your taste.

With time, you will come to learn the most suitable temperatures for the items to be cooked according to their thickness, texture and your personal tastes.

Cleaning and maintenance

Before cleaning operation unplug the device

The frame

To avoid any risk of burns, you are advised to always allow the hot plate to cool down before cleaning the frame. Clean with a sponge soaked in warm water and detergent. Never use abrasives or steel wire brushes.

The hot plate

The plate is easier to clean when the Griddle is still slightly warm. Beware of the risk of burns.

The stainless steel plate on the Griddle is shiny before use. The surface is likely to become dull and scratched once utensils have been used. After a while, the scratches will fade and the plate will have a brushed, weathered look.

After the appliance has been used several times, grease residues may appear on the hot plate; this is perfectly normal.

To remove these, pour a glass of cold water or place ice cubes on the hot plate and scrape off residue with a spatula or scraper. You can also soak residues in water.

During use, these residues may become detached by themselves; this does not mean that the hot plate has been damaged.

With a rigid spatula, remove most of the sticky residue on the hot plate by pushing it towards the drip tray.

Then pour some water on the hot plate to soak the remaining residue (use a wet sponge or ice cubes).

Leave for a few minutes.

With a rigid spatula, remove the water and sticky residue and push it towards the **juice tank**

Clean with a scouring pad and then a soft sponge.

Pour some vinegar on the plate to remove smells and strong tastes.

Clean the plate promptly after preparing salty food to avoid any risk of corrosion. Do not use chlorine based cleaning products as they can also cause corrosion.


BUILT IN :

The underneath of the appliance must be kept well ventilated to ensure good air circulation under the hot plate.

Place the appliance on a stable, dry surface, slightly away from the edge and more than 20 cm away from any walls or heat-sensitive objects (Plastic, Wood,)

Recommended hot plate height: 85 to 95 cm from the ground for a comfortable working position

Do not use worktop combustible material

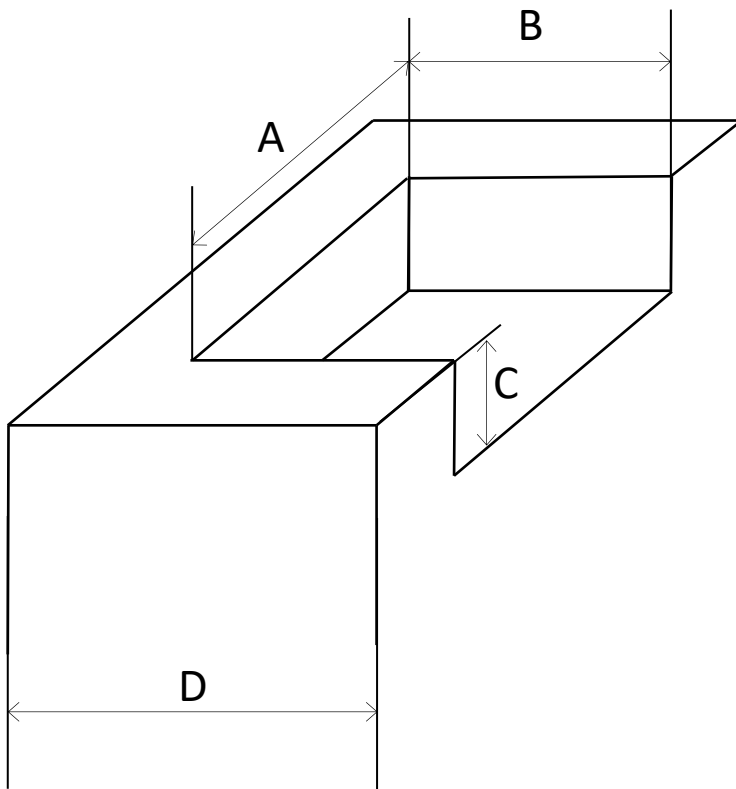

SERIE	GEE 40	
	Without Insulate Liner	With Insulate liner
A	14" 3/4	17" 1/2
B	16" 3/4	17" 1/2
C	5" 3/4	7" 1/4
D	24" Minimum	24" Minimum

Guarantee and after-sales service

This appliance is guaranteed for:

- Lifetime against perforation of stainless steel
- 1 years for all parts

The guarantee starts from the date of purchase, you will submit the bill to assert your right to guaranteed.

 
We take great care to ensure that each of our appliances reaches the user in perfect operating condition. If you do find a problem when unpacking your appliance, please report it to the shop within 48 hours.

If you notice that the appliance is not working properly during the guarantee period, please contact your retailer.

The following are not covered by the guarantee:

1. Normal wear of the product that does not affect operation of the appliance (scratches, impacts, change of color, etc.).
2. The presence of rust, cracks, or other deformation of cast iron radiators , not detrimental of Griddle utilisation.
3. Damage caused by abnormal events or use, modification of the product or not following the instructions for use (in particular, the use of chlorine-based cleaning products).
4. Damage resulting from professional, industrial or collective use.
5. Damage resulting from a fall or impact.

PLEASE PASTE THE STICKER SERIAL NUMBER FROM THE BOX IN THE FOLLOWING FRAME OR AT THE BACK OF THE GRIDDLE



Please do not hesitate to contact us should you have any suggestions at contact@legriddle.com.