

# Cook Like A “Pro”

## Use a Meat Thermometer.

- Eliminates Guesswork
- Prevent under or over cooking.
- Insures Food Safety

How to use a meat thermometer:

1. Insert thermometer in center of thickest part of steak or roast.  
Make sure thermometer is not touching bone or fat.
2. Wait 10 to 15 seconds before reading.
3. Remove meat from heat when thermometer reads:

	Degree of Doneness	Remove when Thermometer Reads	Final Cooked Temperature
<b>BEEF, VEAL OR LAMB</b> Roast, Steak or Chops	Rare	130°F - 135°F	140°F
	Medium Rare	135°F - 140°F	145°F
	Medium	150°F - 155°F	160°F
	Well Done	160°F - 165°F	170°F
<b>GROUND BEEF, PORK, LAMB AND VEAL</b> Patties, Meat Loaf or Meat Balls	Medium (Cook until light gray and no longer pink in center)	160°F	160°F
	<b>PORK</b>	Medium	150°F - 155°F
<b>HAM</b> Fully Cooked, Whole Fully Cooked, Sliced Fres, Raw (Leg)	To Reheat	140°F	145°F
	To Reheat	165°F	165°F
	Medium	150°F	160°F
<b>POULTRY</b> Whole Chicken/Turkey*	Well Done	165°F - 170°F in thigh/ 165°F in breast	180°F in thigh 170°F in breast
	Parts: Bone-In, Boneless	Well Done	165°F 170°
<b>GROUND POULTRY</b>	Well Done	165°F	165°F
<b>SEAFOOD/FISH</b>	Medium Rare	135°F - 140°F	145°F
	Medium	145°F	150°F - 155°F

\* If whole chicken or turkey is stuffed, stuffing must reach 165°F.  
Source: U.S. Dept. of Agriculture and Federal Food Code.



# Owners Manual

## Model 4400-EC-448 Electri-Chef® Grills

**RUBY SERIES - 32 INCH**  
HOUSEHOLD TYPE



Read this manual in its entirety before operating any controls on the grill. For safe operation, every person who uses this grill must understand and follow the correct operational procedures. Do not allow children to operate this grill.

**\*\* Save this manual for future reference \*\***

# Table of Contents

Table of Contents .....	Page 1
Information & Model Definitions.....	Page 2
Safety Details .....	Page 3
Safeguards .....	page 4 & 5
Unpacking Instructions for CB/PB .....	Page 6
Assembly Instructions for CB/PB.....	Page 7
Unpacking Instructions for TT.....	Page 8
Unpacking Instructions for I/IM.....	Page 9
Assembly Instructions for I/IM .....	Page 10 &11
Operating Instructions .....	Page 12
Cleaning & Service.....	Page 13 & 14
Warranty.....	Page 15
Grill Labels.....	Page 16
Notes .....	Page 17
Company Information .....	Page 18

If you have any questions about the assembly or operation of your Electri-Chef® Model 8800-EC-1056 Grill, please contact Electri-Chef® Customer Service at

**1-800-442-7207**

**Email: [info@electri-chef.com](mailto:info@electri-chef.com)**

**Fax: 254-938-7055**

**Electri-Chef® Grills**

P.O. Box 1026  
Temple, TX 76503



**No Open Flame**

## FLAMELESS ELECTRIC GRILLS

We hope you will take the time to read this manual. By taking the time to read this manual you will receive the maximum cooking benefits of your Electri-Chef® grill and also be informed about the safety and operation. To activate the warranty on your Electri-Chef® grill please take the time to fill out the enclosed registration card and mail it back to the manufacturer.

We know you will be completely satisfied with the Electri-Chef Model 4400-EC-448 Grill. If you have any questions regarding the assembly, operation or safety procedures of your new Electri-Chef® grill please contact us in one of the following ways.

**1-800-442-7207**

**Email: info@electrichef.com**

**Fax: 254-938-7055**

### **This manual contains the following information:**

- Unpacking Instructions
- Maintenance Instructions
- Shipment Inventory
- Operating instructions
- Assembly Instructions
- Warranty

### **This manual applies to models:**

4400-EC-448-I-S	4400-EC-448-TT-S	4400-EC-448-PB-D
4400-EC-448-IM-S	4400-EC-448-I-D	4400-EC-448-TT-D
4400-EC-448-CB-S	4400-EC-448-IM-D	4400-EC-448-JA/CT
4400-EC-448-PB-S	4400-EC-448-CB-D	

### **MODEL DEFINITIONS**

ex: **4400**    **EC**    **448**    \*    **S or D**

Model Series    *Electri-Chef*    Grilling Area (Sq. In.)    see below    S= Single Control  
D=Dual Control

I = Island

IM = Island Marine

CB = Closed Base

PB = Pedestal Base

TT = Table Top

JA/CT = JA Countertop

4400 = Model Series

EC = Electri-Chef®

	(	Amps	x	Volts	=	Watts	)
208-220 Volts - Single Phase - 30 Amp		24	x	220	=	5280	



**CAUTION**

Island enclosures must be built of fire resistant materials.

# 1.0 Safety Details



## WARNING

• THIS OWNERS MANUAL SHOULD BE READ COMPLETELY BEFORE ATTEMPTING TO USE OR SERVICE THE ELECTRI-CHEF® MODEL 4400-EC-448 GRILL. FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS MANUAL COULD RESULT IN PROPERTY DAMAGE, SEVERE PERSONAL INJURY, OR DEATH.

It is important to note that some vital statements throughout this manual and on the decals affixed to the Electri-Chef® Model 4400-EC-448 Grill are preceded by bars containing the words DANGER, WARNING, CAUTION, or NOTE. For your protection we recommend you take special notice of these safety procedures. Safety procedures are essential and must be followed.

If any of the labels on the grill become damaged, have been removed or cannot be easily read, they should be replaced immediately to avoid possible property damage, personal injury, or death. Contact your Electri-Chef® distributor, dealer or Electri-Chef® Service Center.



## DANGER

- A DANGER INDICATES AN IMMEDIATE HAZARD WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



## WARNING

- A WARNING INDICATES AN IMMEDIATE HAZARD WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



## CAUTION

- A CAUTION INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN PRODUCT OR PROPERTY DAMAGE OR MINOR PERSONAL INJURY.



## NOTE

- A NOTE PROVIDES KEY INFORMATION TO MAKE PROCEDURES MORE EASILY UNDERSTOOD.

The safety procedures listed must be followed whenever the Electri-Chef® 4400-EC-448 Grill is being operated, repaired, or serviced. Specific warnings appear throughout this manual and on the Electri-Chef® 4400-EC-448 Grill.

# Grill Labels

## CAUTION - FOR YOUR SAFETY

To ensure continued protection against risk of electric shock, connect to properly grounded outlets only. Disconnect from electric outlet before cleaning or any service work is done on unit

## OPERATING INSTRUCTIONS

- Clean drip trays before each use
- Read owners manual before
- Select grilling temperature
- When grilling is complete turn temperature control OFF

# 7.0 Warranty

## LIMITED LIFETIME, 5, 3 AND 1 YEAR WARRANTY

THE STAINLESS STEEL GRILL ASSEMBLIES OF THIS PRODUCT ARE WARRANTED FOR THE LIFETIME OF THE ORIGINAL CONSUMER PURCHASER FROM THE DATE OF PURCHASE, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

THE COOKING GRID IS WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR FIVE ( 5 ) YEARS FROM DATE OF PURCHASE AGAINST BURN-OUT OR DEFECTS IN MATERIALS AND WORKMANSHIP.

THE STAINLESS STEEL HEAT - FLAVOR PLATE IS WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR THREE ( 3 ) YEARS FROM DATE OF PURCHASE, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

ALL OTHER COMPONENTS, ELECTRICAL OR MECHANICAL ARE WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR A MINIMUM OF ONE ( 1 ) YEAR FROM THE DATE OF PURCHASE OR THE WARRANTY TIME OF THE MANUFACTURE OF THE COMPONENT, ELECTRICAL OR MECHANICAL, WHICH EVER WARRANTY TIME PERIOD IS LONGER, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

THIS WARRANTY DOES NOT COVER DAMAGE OR FAILURES CAUSED BY MISUSE, UNCONTROLLED FLARE-UPS, NEGLIGENCE OR COMMERCIAL USE. IF ANY WARRANTED PART FAILS DURING ITS WARRANTY PERIOD, SEND THE FAILED OR DEFECTIVE PART(S) TO ELECTRI-CHEF GRILLS FOR REPAIR OR REPLACEMENT AT THE MANUFACTURER'S OPTION WITHOUT CHARGE. THE TRANSPORTATION COST FOR RETURNING FAILED OR DEFECTIVE COMPONENTS ARE THE RESPONSIBILITY OF THE CONSUMER.

REPAIR OR REPLACEMENT OF A DEFECTIVE COMPONENT(S) IS THE SOLE REMEDY UNDER THIS LIMITED WARRANTY. IN NO EVENT WILL ELECTRI-CHEF BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. ANY IMPLIED WARRANTY OF THIS PRODUCT SHALL BE LIMITED IN DURATION TO ONE ( 1 ) YEAR DATE OF PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF IMPLIED WARRANTY, SO THIS LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

**Electri-Chef® Grills**  
P.O. Box 1026  
Temple, TX 76503

# 1.1 Important Safeguards

## **READ ALL INSTRUCTIONS**

Do not touch hot surfaces. Use handles or knobs.

To protect against electrical shock do not immerse cord or plugs in water or other liquids.

This appliance should not be used by children.

Unplug from outlet before cleaning. Allow to cool before servicing.

Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Do not use appliance for other than its intended use.

Fuel, such as charcoal briquettes, is not to be used with appliances.

Use only on properly grounded outlet.

Servicing of this appliance should be performed by an authorized service representative.

**Do Not Use** extension cord.

Clean Drip Tray before each use.

**SAVE THESE INSTRUCTIONS**

## 1.1 Medidas de Seguridad

### Lea y guarde estas instrucciones

No toque las superficies calientes. Utilice las manijas o las perillas.

Para proteger contra choque eléctrico no sumerja el cable o tapones en agua o líquidos.

Este aparato no debe ser utilizado por niños.

Desenchufe del tomacorriente antes de limpiarlo. Deje que se enfríe antes de darle servicio. No opere ningún artefacto con un cable o enchufe dañado, después de un mal funcionamiento o haya sido dañado de cualquier manera. Regréselo a un centro de servicio autorizado para su revisión, reparación o ajuste. El uso de accesorios no recomendado por el fabricante de aparato puede causar lesiones graves.

Debe tener precaución extrema al mover el aparato que contenga aceite o líquidos calientes.

No utilice el aparato para otro uso que no sea indicado por el fabricante.

Briquetas de carbón no debe ser utilizado con este aparato. Use sólo un enchufe de corriente debidamente conectado a la tierra.

Servicio de este aparato deberá ser realizado por personal autorizado solamente.

No Utilice ningún cable de extensión eléctrico.

## 6.0 Caring for the Exterior of Your Stainless Electri-Chef® Grill Continued



### DANGER

NEVER ATTEMPT TO SERVICE OR REPAIR YOUR GRILL WHILE PLUGGED INTO THE ELECTRIC OUTLET.



### WARNING

Disconnect from electric outlet before cleaning or any service work is performed on this grill unit.

### Cleaning Exterior

#### Regular Cleaning...

- Wash down the surface regularly using water containing soap or mild detergents.
- Always rinse the surface with fresh water after cleaning.
- Polishing the surface with a soft dry cloth can complete a thorough cleaning operation.
- When wiping or polishing stainless steel, always follow the direction of the original grain or “brush” finish.

#### Cleaning Aids...

- Never use abrasive materials such as scouring pads or wire wool.
- Use a brush or soft damp cloth to remove loose deposits.
- Use a cream cleanser and soft cloth for stubborn deposits.

All grades of stainless steel can stain and discolor as a result of long term surface deposits and can never be accepted as completely maintenance free. In order to achieve maximum corrosion resistance, the surface of the stainless steel must be kept clean. Surface contamination and the formation of deposits must be prevented. These deposits may be minute particles of iron or rust from other sources used on the building or new premises and not removed until after the stainless steel items have been fixed. Industrial and even naturally occurring atmospheric conditions can produce deposits which can be equally corrosive, e.g. salt deposits from marine conditions. Strong acid solutions are sometimes used to clean masonry and tiling of buildings but these should NEVER be permitted to come into contact with metals, including stainless steel.

**For additional information, please contact  
Electri-Chef® by calling (800) 442-7207  
or via e-mail at [info@electri-chef.com](mailto:info@electri-chef.com)**

# 6.0 Cleaning, Service & Maintenance of Your Electri-Chef® Model 4400-EC-448 Grill

## NOTE

Do not use high intense heat to clean grid. Using high intense heat for cleaning only bakes grease and food to grid and wastes electricity. This practice may result in a grease fire which may cause damage to the grill and its electronic components.

## WARNING

Disconnect from electric outlet before cleaning or any service work is performed on this grill unit.

## NOTE

It is recommended to use rubber or plastic gloves during cleaning of grill.

## CAUTION

NEVER USE any abrasive cleanser, wire brush, metal scouring pads or any other abrasives on the stainless steel surfaces of the grill.

### Cleaning Interior

- A. Disconnect grill from electric outlet.
- B. Remove Grease Drip Tray and dispose of drip tray liner if required.  
Replace with heavy duty aluminum foil if a disposable liner is not available.
- C. Use a spray oven-cleanser (“Easy-Off Fume Free Max” is recommended) and **FOLLOW THE DIRECTIONS ON THE CAN** for two hour cleaning. Disregard the “BBQ Grill Cleaning” warning statement about grill surfaces located on the can. Your all stainless steel interior and exterior surfaces of your grill WILL NOT be damaged from the use of the Easy-Off oven cleanser.
- D. After cleaning, wipe grill dry and reconnect to the electric outlet.
- F. Cleaning of Cooking Grid.
  1. Follow “BBQ Grill Cleaning” on back of Easy-Off can. After completion replace cooking grid.
- G. Cleaning of Stainless Steel Heat Plate.
  1. Remove cooking grid from grill. Remove stainless steel Heat Plate from grill and scrape excess burnt food and grease onto paper or into plastic bag for disposal. Replace Heat Plate and Cooking Grids.

### Service & Maintenance

There is very little service or maintenance required except for cleaning.

**If you encounter any operational problems with your Electri-Chef® Grill, unplug the grill from the electric outlet and call your dealer where you purchased the grill or call**

**Electri-Chef® Grills customer service department during normal business hours.**

**Call 1-800-442-7207 or Email: info@electri-chef.com**

# 2.0 Unpacking Instructions for CB & PB Models

This section describes how to unpack your Electri-Chef® Model 4400-EC-448-CB or Model 4400-EC-448-PB Grill

## Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner’s Manual.

## Step 2

- F. Remove grill from carton bottom.
- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

## Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

### A. Items in carton

1. Grill body, base with collapsable shelves
2. One (1) Owner’s Manual.
3. One (1) warming rack.
4. Four (4) swivel casters (or 4 adjustable legs if leg option ordered).
5. Four (4) cooking grids.

## 2.1 Assembly Instructions for CB & PB Continued

This section describes how to assemble your Electri-Chef® Model 4400-EC-448 Grill

### NOTE

No grill assembly is required for the  
Model 4400-EC-448-CB.  
The grill comes fully assembled  
and ready to use.

No grill assembly is required for the  
Model 4400-EC-448-PB.  
The grill comes fully assembled.  
Anchoring is required before use.

 
## 5.0 Operating Instructions

Your grill has now been unpacked and assembled. It is now time to plug your grill into a 220 Volts Single Phase 30 AMP outlet.

### WARNING

Plug this unit into a properly grounded 220 Volt - Single Phase - 30 AMPS outlet.

### 4400-EC-448

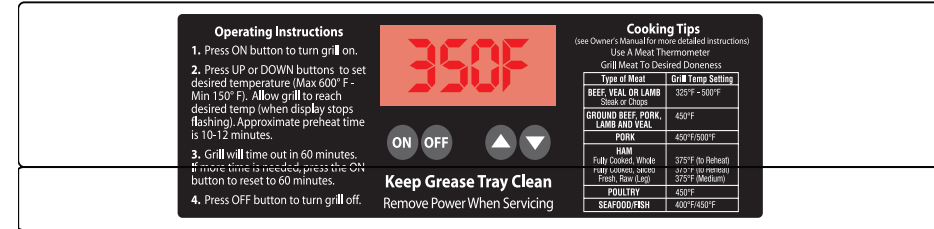

**Operating Instructions**

1. Press ON button to turn grill on.
2. Press UP or DOWN buttons to set desired temperature (Max 600° F - Min 150° F). Allow grill to reach desired temp (when display stops flashing). Approximate preheat time is 10-12 minutes.
3. Grill will time out in 60 minutes. If more time is needed, press the ON button to reset to 60 minutes.
4. Press OFF button to turn grill off.

**Keep Grease Tray Clean**  
Remove Power When Servicing

**Cooking Tips**  
(see Owner's Manual for more detailed instructions)  
Use A Meat Thermometer  
Grill Meat To Desired Doneness

Type of Meat	Grill Temp Setting
BEEF, VEAL OR LAMB Steaks, Chops	325° F - 500° F
GROUND BEEF, PORK, LAMB AND VEAL	450° F
PORK	450° F/500° F
CHICKEN Fully Cooked, Whole	375° F (to Reheat)
FRY (Lamb, Steaks, French, Paul-Lee)	215° F (to Reheat) 325° F (Medium)
POULTRY	450° F
SEAFOOD/FISH	400° F/450° F

### Digital Control Module System Panel

Follow the instructions on the Digital Control Grilling System panel of your grill and other suggestions in this section to operate your Electri-Chef® Model 4400-EC-448 Grill.

Your digital control grill illustration (above) may consist of one (1) or two (2) Digital Control Grilling System Panels, depending on your model.

Preheat grill 10-12 minutes at desired temperature control setting before grilling.

#### OPERATING INSTRUCTIONS

1. Read owners manual before operating this grill
2. Plug into 220 Volts  
@ 30 AMP outlet
3. Press ON button to power on grill
4. Grill will default to temperature of 350degrees and a time of 60 minutes
5. Press the up arrow to increase or down arrow to decrease temperature
6. The grill will automatically power off in 60 minutes. (If more grilling time is required, press the ON button before it times out and the grill will reset to 60 minutes and maintain your set temperature.)
7. When finished grilling, press the OFF button and the grill will shut down

#### General notes for above

1. Always check grease trays for excess grease or food particles before each use. If required, remove excess grease or food.
2. At the completion of any grilling, cooking or baking clean cooking grid with soft wire brush of any excess grease and food particles.
3. The cooking tips on the right side of the DCM System Panel are suggested cooking times.
4. DO NOT allow any corrosive or harsh chemical cleansers to get on the DCM System Panel.

For additional information, please contact  
Electri-Chef® by calling (800) 442-7207  
or via e-mail at [info@electri-chef.com](mailto:info@electri-chef.com)



## 4.2 Assembly Instructions for Island Model (continued)

### Step 3.2


Attaching the Lower Grill Flange to Island Grill

### Island Lower Grill Flange

#### Notes

1. The Lower Grill Flange is attached to the power cord. There is no way of removing the Lower Grill Flange without damaging it or the power cord.
2. Attach the Lower Grill Flange to the Island Grill as shown in diagram 1.a with a phillips screwdriver, using the screws in the enclosed bag labeled Lower Grill Flange Mounting Screws.

 Diagram 1.a

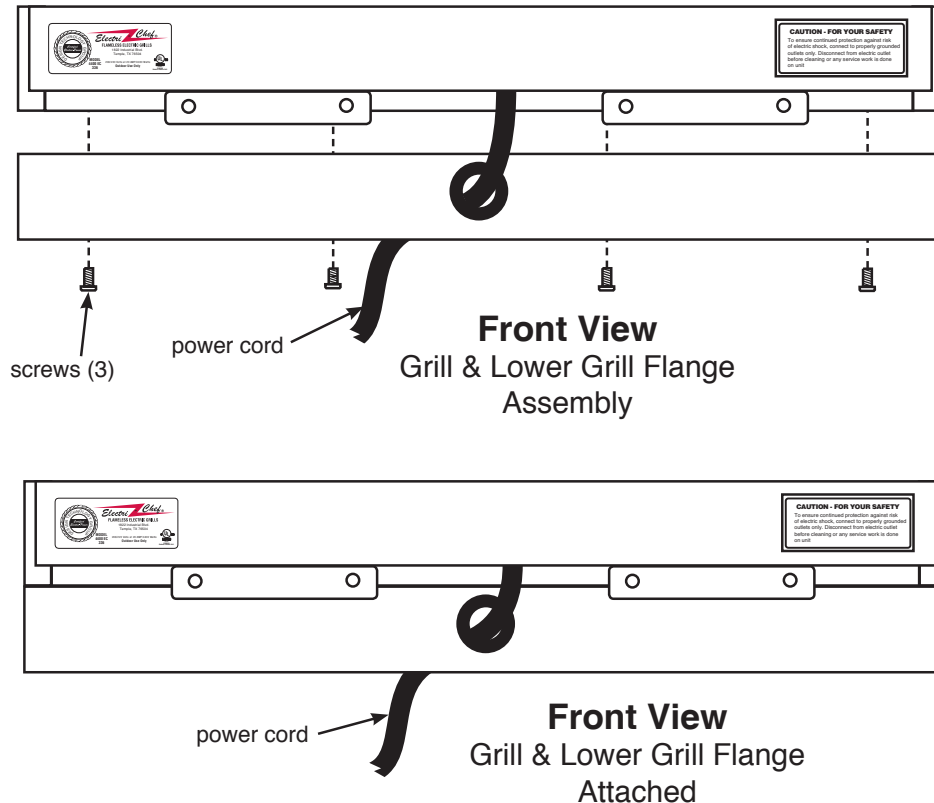

## 3.0 Unpacking & Assembly for TT Models

This section describes how to unpack your Electri-Chef® Model 4400-EC-336-TT Grill

### Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

### Step 2 - Assembly

- E. Remove grill from carton bottom.
- F. Attach legs (4) on each corner of the grill body.

### Step 3

- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

### Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

#### A. Items in carton

1. Grill body
2. One (1) Owner's Manual.
3. One (1) warming rack.
4. Four (4) legs.
5. Four (4) cooking grids.

# 4.0 Unpacking Instructions for 448-I & 448-IM

This section describes how to unpack your Electri-Chef® Model 4400-EC-448-I/IM Grill

## Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

## Step 2

- F. Remove grill from carton bottom.
- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

## Step 3.1 Assembly

- J. See Island Cut-Out Information Page (see page 10)

## Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

### A. Items in carton

- 1. Grill body
- 2. One (1) Owner's Manual.
- 3. One (1) warming rack.
- 4. Four (4) cooking grids.
- 5. Four (4) Lower Grill Flange Mounting Screws

# 4.1 Assembly Instructions for Island Model (continued)



 
## CAUTION

Island enclosures must be built of fire resistant materials.

## Step 3.1

Place grill in island cut-out

## Island Cut-Out

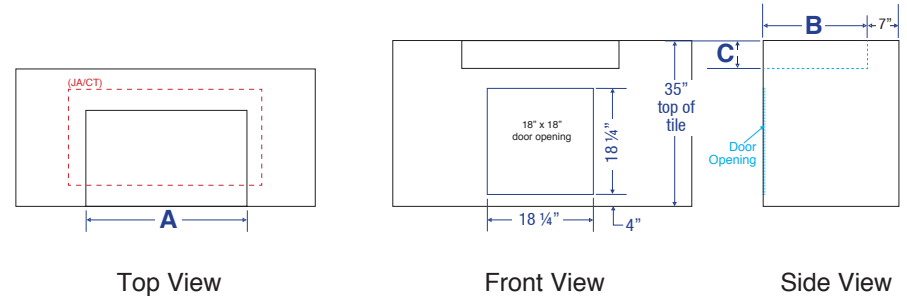

## Notes

1. No under grill support required on the island.
2. Grill has mounting flanges on sides & back which sit on top of island surface, tile, etc.
3. Grill cut-out should be (single & dual control use same cut-out dimensions):

### Island Model 448-I

- A. 32 1/4" left to right
- B. 16 1/4" front to back
- C. 7 3/4" from top of island surface

### Island Model 448-IM

- A. 33 5/8" left to right
- B. 16 3/4" front to back
- C. 7 3/4" from top of island surface

### Island Model 448-JA/CT

- A. 37" left to right
- B. 21" front to back

4. Be sure 220 Volt @30 amp outlet is located behind island.
5. Island should be constructed of fire resistant materials or grill cut-out should be lined with 1/2" thick fire resistant materials.