

Universal Air Mover Heater

Instruction Sheet



Place the Heater through the handle of the AF Elite fan

Secure to the spring to other side of the unit and make sure that it is tight



To turn on heater press the red switches to the on position. The thermometer should read the ambient temperature. The heater is set to 132 unless changed.

Setup is complete.

Make sure the fan is running before the heating elements are turned on.



*****Note that each heater cord is 8 amps and cannot be plugged into the fan*****