

# **Military** *Truck* **MILITARY TRAILER MODEL** **MULTI FUNCTION RC CAR SERIES**

## 1:16 6 X 6 Realistic RC Military Trailer

Please read the instruction manual before use & keep your manual safely.

### Package Content




Military Truck X1



Trailer X1




USB Charger X1

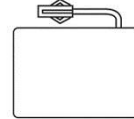

Battery X1




Radio X1

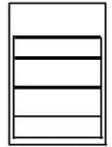


Manual X1

### Installation of Trailer and Battery & Charging

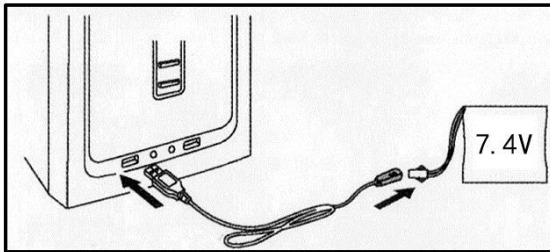


Connect the battery to the USB charger. To charge, plug your USB Charger into a PC, USB charger or USB power source and turn on the power. Input power for the USB is 5V~0.5V. Charging time about 120mins.

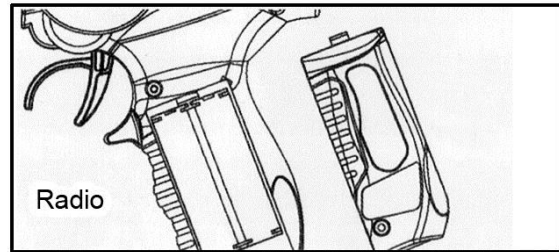


Radio

Installing batteries into the Radio/Remote


1. Remove the battery cover
2. Install 2x AA batteries following the correct polarity then reinstall the cover to the radio/remote.

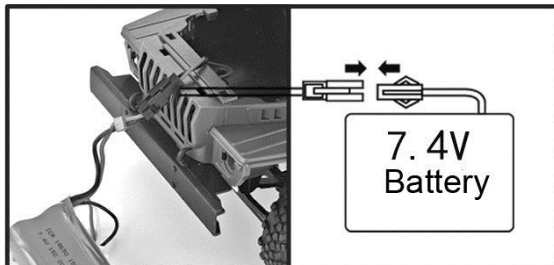


Once the battery is fully charged, open the hood, place the battery onto the battery bay, connect the battery and close the hood/bonnet.

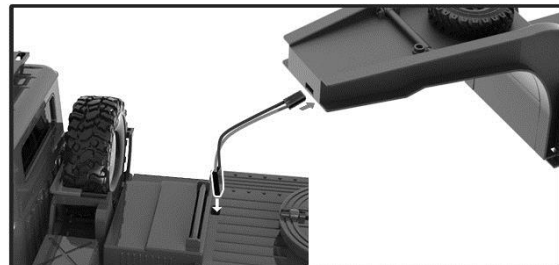


Connect the wires provided as shown to the truck and the trailer

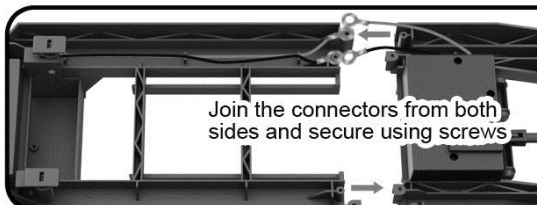

Join the connectors from both sides and secure using screws

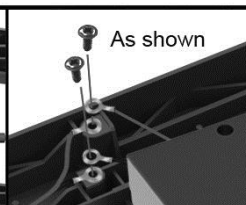

As shown

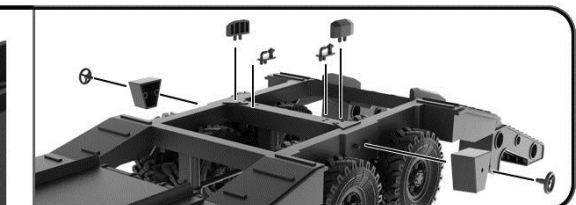


### Precaution

- Observe polarity when installing or changing battery.
- Do not charge non-rechargeable battery.
- Adult supervision is required during charging.
- Do not mix old and new batteries.
- During operation, be careful of radio interference as it may affect the control distance.
- When the vehicle becomes slow, it may be due to weak battery, please charge the battery as shown above.
- If the radio/remote battery is weak or the USB charger fail to charge the vehicle battery, change to a new battery.
- If not being used for a prolonged period, please remove the battery from the radio/remote and turn the switch on the vehicle to OFF position.

# Operating Procedure

1. Turn on your radio/remote by pushing the switch to ON position then place it on the flat surface.



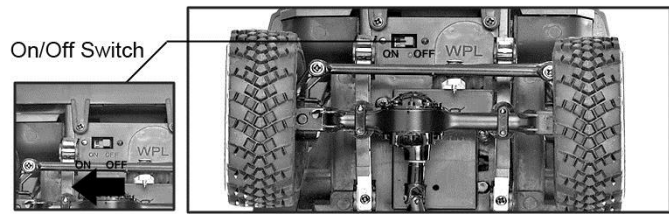


## 2. Radio features

### Binding Procedure

1. Turn on the remote
2. Turn on the car
3. Rotate steering to left or right to complete binding


Note : after turning on the remote, do not move throttle trigger before binding is completed

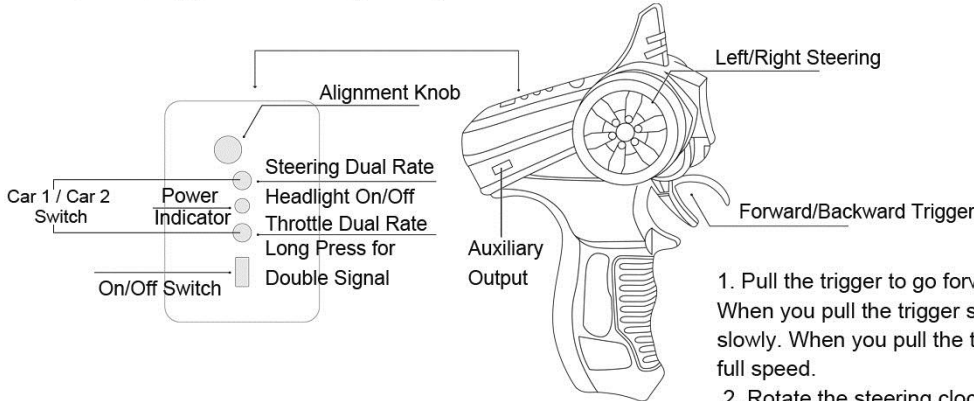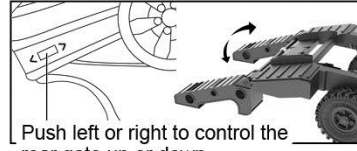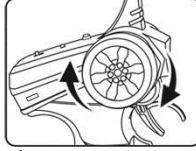

1. Pull the trigger to go forward, push the trigger to reverse. When you pull the trigger slowly, the vehicle goes forward slowly. When you pull the trigger fully, vehicle goes forward at full speed.
2. Rotate the steering clockwise to steer Right ; Rotate counter-clockwise to steer Left.

## 3. Steering alignment adjustment

If the vehicle veer to the left when going forward, rotate the alignment knob to the right and vice versa.

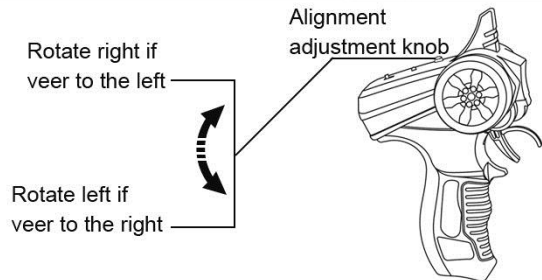

# Troubleshooting

Problem	Cause	Solution
Unable to control the vehicle	Battery is empty or weak	Change the battery and making sure it's turned OFF when not in use
	Battery installed incorrectly	Install the battery correctly. Observe the correct polarity
	On/Off switch is OFF	Ensure both radio/remote and vehicle have been turned ON
Vehicle is slow to move	Battery is empty or weak	Change the battery and making sure it's turned OFF when not in use
	Vehicle is out of control range	If the vehicle slowed down or stopped, Reduce the distance between radio/remote and the vehicle

### Warning

Choking hazard.  
Contain small parts.  
Not for children  
below 3 years old.

### Precaution

Always inspect the battery  
charger before use. Observe  
if there's any damage and stop  
using if there's any damage.  
Repair before use.



**MADE IN CHINA**

www.wpl-rc.com