

## **KYOWA SERVICE CENTER**

Rm. 1203 State Center Building  
#333 Juan Luna St., Binondo  
Manila, Philippines



## **ELECTRIC KETTLE**

**MODEL # KW-1347**

Voltage: 230V a.c. 60Hz      Power: 2000 WATTS



## **INSTRUCTION MANUAL**

## CONGRATULATIONS

You are now a proud new owner of a KYOWA Electric Kettle model no. KW-1347.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Electric Kettle to a third party, please hand over this instruction manual as well.

## PARTS DESCRIPTION



## IMPORTANT SAFEGUARDS

When using the Electric Kettle, basic safety precautions should always be followed:

- Always operate your KYOWA Electric Kettle from a power source of the same voltage and frequency rating as indicated on the rating label.
- Make sure that the kettle is unplugged when filling with (cold) water.
- Always ensure that the kettle cover is in place when boiling water.
- Connect the Electric Kettle unit only to properly wired wall outlets.
- Do not use Electric Kettle in damp or wet area. Keep dry the exterior and the base of the kettle.
- Do not place the Electric Kettle on uneven surfaces. Place upon a flat area surface.
- Do not operate or place any part of your KYOWA Electric Kettle on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not operate the Electric Kettle if any part of it including the supply cord has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not use the unit other than its intended function to avoid any untoward incident.
- Do not use or replace parts including the stand, and accessories other than the ones originally provided.
- Never leave the Electric Kettle unattended when in use.
- Do not move Electric Kettle when power is ON or when the water inside is still boiling. Turn power to OFF before moving.
- Avoid touching hot surfaces of the Electric Kettle during use. Use the cover or handle only.
- Electric kettle body and heater may be hot even after use; use caution when handling the unit.
- Turn OFF the Electric Kettle before removing from the base.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- Switch OFF and unplug the Electric Kettle from outlet before filling, emptying, when not in use or before cleaning.

- To reduce the risk of electric shock, do not immerse or expose the Electric Kettle to rain, moisture or any liquid; avoid spillage on the power cord, base, or any connectors of the unit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This KYOWA Electric Kettle is intended for normal domestic/household use only. This unit is not suitable for commercial use.

### **HOW TO USE**

- Remove all packaging materials from the Electric Kettle.
- Wash kettle with lukewarm water before using for the first time.
- Pull up top cover of the kettle to open the lid.
- Fill the Electric Kettle with cold water reaching the MIN mark but not exceeding the MAX marking to prevent overflowing when boiling.
- Pull back the lid of the Electric Kettle.
- Place the kettle on the base.
- Make sure the kettle is turned to OFF before connecting the plug to the power outlet.
- Plug power cord to outlet. Turn kettle ON by sliding down switch.
- After water starts boiling, the Electric Kettle will automatically switch OFF. Indicator Lamp turns OFF.
- Discard water when boiling for the first time.

### **CLEAN AND CARE**

- After every use, wipe the Electric Kettle unit with a soft and damp cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Do not use dishwasher to clean any part of the Electric Kettle.
- Wipe dry all parts using a soft and dry cloth.
- Store in a cool and dry place.
- Remove lime scaling when you observe an excess of steam or if boiling time takes too long. If the water in your area is alkaline rich, it is highly recommended to remove lime scaling every two months. To do so:
  1. Dilute 50ml vinegar in 1 liter of water and fill the kettle with the mixture. Bring to a boil then switch Electric Kettle to OFF. Allow mixture to stand overnight.
  2. Bring the mixture to boil again then discard mixture. Clean the electric Kettle with warm soapy water. To eliminate vinegar residues, operate the Electric Kettle with water for two cycles.

### **SERVICE**

- Do not operate your KYOWA Electric Kettle if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Electric Kettle by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.