

KYOWA SERVICE CENTER (MAIN)

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA
TEL: 242-1731 - 35

METRO MANILA

TRONIX QUEZON CITY (MAIN) #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE, Q.C.
TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489 CONTACT PERSON: MS. JENIELYN MANZANO

TRONIX MANILA #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN MIGUEL, MANILA (NEAR MALACANANG)
TEL: 743-4088 MOBILE: 0922-7909555 CONTACT PERSON: MS. ANALEN FIADACAN

TRONIX STA. CRUZ #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA. CRUZ, MANILA
TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971 CONTACT PERSON: MS. SHEILA PIRANTE

TRONIX SAN JUAN #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG BATO, SAN JUAN CITY
TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653 CONTACT PERSON: MS. MICHELLE CASAÑA

TRONIX ALABANG TOWN CENTER LA-7 SERVICE TOWN, ALABANG TOWN CENTER, MUNTINLUPA CITY
TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059 CONTACT PERSON: MR. FRANCIS ACOSTA

TRONIX PARAÑAQUE #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF HOME, PARAÑAQUE
TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806 CONTACT PERSON: MS. ELIZABETH PALIMA

TRONIX MAKATI #103 MJM BLDG, 650 JP RIZAL ST, BRGY. VALENZUELA MAKATI CITY
TEL: 710-1980 / 949-3684 MOBILE: 0932-1999085

TRONIX MARIKINA #572 J.P. RIZAL AVE, CONCEPCION 1, MARIKINA (IN FRONT OF KSERVICO)
TEL: 696-6411 MOBILE: 0942-0940088

TRONIX PASIG LOWER GROUND SERVICE LANE, SM CENTER, PASIG
TEL: 703-5599 / 234-9020 MOBILE: 0932-1999372 CONTACT PERSON: MS. NORA CRESENCIO

TRONIX SHAW - MANDALUYONG #412 SHAW BLVD, COR. TORRES & CALDERON ST, MANDALUYONG CITY
TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350 CONTACT PERSON: MS. SHERLY DELA CRUZ

TRONIX COMMONWEALTH LAGMANLAG COMMONWEALTH AVE, HOLY SPIRIT, DILIMAN, Q.C. (BESIDE SHELL)
TEL: 623-7266 MOBILE: 0933-6584465 / 09175810546 CONTACT PERSON: MR. MANNY SAGAYAP

CAVITE

TRONIX CAVITE KM 16, AGUINALDO HI-WAY, NIOG 1-A, PANAPAAN 1, BACOR, CAVITE
TEL: (046) 519-0755 / (046) 475-6362 MOBILE: 0932-1991811 CONTACT PERSON: MS. MEANN DIONISIO

CEBU

MARKWELL ENTERPRISES #85 SIKATUNA ST, CEBU CITY
TEL: (032) 253-0752 MOBILE: 0917-6256934 CONTACT PERSON: MR. BOY SOUICO

BIO PLUS ELEC. REPAIR CENTER C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY
TEL: (032) 262-1339 MOBILE: 0922-4744991 CONTACT PERSON: MS. ZYSELDA MABUTE

DAVAO

KOOL EXPRESS DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY
TEL: (082) 227-6369 MOBILE: 0908-420-6303 CONTACT PERSON: MS. DORIS ASIRIT

ILOILO

NACES APPLIANCE CORPORATION NACES BLDG, #10 DELGADO ST, ILOILO
TEL: (033) 337-7696 MOBILE: (033) 508-2205 CONTACT PERSON: MS. LORELIE LIM

TARLAC

TARLAC MAC ENTERPRISES INC. BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC
TEL: (045) 982-3178 MOBILE: 0922-8597136



FOOD STEAMER

MODEL NO.: KW-1905

Voltage: 230V a.c. 60Hz Power: 850 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Food Steamer model no. KW-1905.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Food Steamer to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

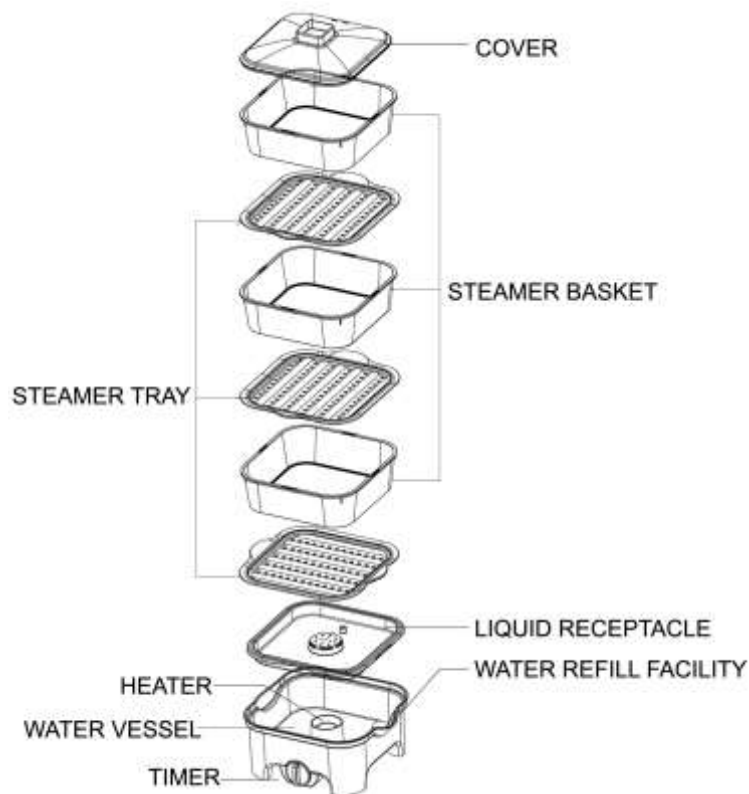


IMPORTANT SAFEGUARDS

When using the Food Steamer, basic safety precautions should always be followed:

- Always operate your KYOWA Food Steamer from a power source of the same voltage and frequency rating as indicated on the rating label.
- Connect the Food Steamer unit only to properly wired wall outlets.
- Do not use Food Steamer in damp or wet area. Keep dry the exterior and the base of the steamer.
- Do not place the Food Steamer on uneven surfaces. Place upon a flat area surface.
- Do not operate or place any part of your KYOWA Food Steamer on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not operate the Food Steamer if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Make sure that the steamer is unplugged when filling with (cold) water.
- Always ensure that the cover is in place when steaming.
- Do not use or replace accessories other than the ones originally provided.
- Never leave the Food Steamer unattended when in use.
- Do not move Food Steamer when power is ON or when the water inside is still boiling. Turn power to OFF before moving.
- Avoid touching hot surfaces of the Food Steamer during use. Use the cover or handle only.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- Switch OFF and unplug the Food Steamer from outlet before filling, emptying, when not in use or before cleaning.
- To reduce the risk of electric shock, do not immerse or expose the Food Steamer to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Food Steamer is intended for normal domestic/household use only. This unit is not suitable for commercial use.

HOW TO USE

- Remove all packaging materials from the Food Steamer.
- Put enough water on the water vessel reaching the MIN mark but not exceeding the MAX marking.
- Put clean water only for steaming; never put salt or other kinds of condiments into the water as it may damage the food steamer heater.
- Put liquid receptacle on top of the steamer base.
- Put steamer tray on top of the liquid receptacle followed by the steamer basket.
- Put food to be steamed on the steamer tray.
- If needed, use a second or third layer of food steamer; just put another tray and steamer basket on top of the steamer basket on the lower layer.
- To allow bigger food steamer container space, invert steamer basket then put on top of the lower steamer basket so that the lid of the two steamer baskets are fastened together; do not put steamer tray in between 2 steamer baskets.

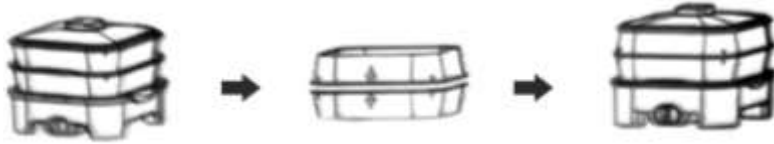

- Always make sure to put foods which take longer time to cook at the bottom layer of the food steamer.
- Cover topmost layer of the food steamer.
- Plug in food steamer into the power supply.
- Turn unit to ON by turning timer knob clockwise to desired cooking time.
- While steaming, check water level on the water vessel from time to time to see if more water should be added to it.
- Add water into the vessel by pouring through the side water refill facility of the food steamer.
- After set time has elapsed, food steamer will automatically switch to OFF.
- To cancel timer during operation, rotate timer knob to 0.
- Carefully remove the cover of the food steamer avoiding hot steam coming from the steamer.
- Transfer steamed food from steamer trays into serving dishes.

CLEAN AND CARE

- After every use, wash the movable accessories of the food steamer including the steamer trays, baskets, cover, and liquid receptacle with warm and soapy water.
- Rinse water vessel with water; never allow any liquid to seep into the motor of the food steamer.
- Do not use harsh cleaning agents or abrasive objects (e.g. scrubbing pads or metal brushes) for cleaning.
- Do not use dishwasher to clean any part of the steamer.
- Put back parts and accessories of the food steamer to their proper places before operating again.
- After washing, wipe dry all parts and store in a cool, dry place.

SERVICE

- Do not operate your KYOWA Food Steamer if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Food Steamer by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.