

KYOWA SERVICE CENTER (MAIN)

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines
242-1731 to 35

AFFILIATED TRONIX SERVICE CENTERS:

1. **TRONIX MAIN Q.C.**
777 N.S. AMORANTO ST., COR. STO. DOMINGO AVE, Q.C.
TEL NOS. 749-8477 / 743-9094 / 4132775 / 743-0354
CELLPHONE NO: 0922-6534797
CONTACT PERSON: MS. SHARENE TAN
2. **TRONIX SAN JUAN BRANCH**
135 N.DOMINGO ST., COR. PINAGLABANAN, SAN JUAN
TEL NO: 721-9147
CELLPHONE NO: 0922-9218653
CONTACT PERSON: MS. MAY BONZON
3. **TRONIX MANILA BRANCH**
1793 CONCEPCION AGUILA ST., NEAR J.P. LAUREL,
SAN MIGUEL MANILA
TEL NO: 734-4088
CELLPHONE NO: 0922-7909555
CONTACT PERSON: MS. ANGEL BARBASTRO
4. **TRONIX STA. CRUZ BRANCH**
#910 LUZON ST., (BET MASANGKAY & BENAVIDEZ ST)
STA. CRUZ MANILA
TEL NO: 310-3353
CELLPHONE NO: 0922-2389971
CONTACT PERSON: MS. SHIRLEY DELA CRUZ
5. **TRONIX ALABANG TOWN CENTER BRANCH**
LA-7 SERVICE TOWN, ALABANG TOWN CENTER,
MUNTINLUPA CITY
TEL NO: 807-3546
CELLPHONE NO: 0922-7584917
CONTACT PERSON: MS. EVELYN DENISING
6. **TRONIX PARANAQUE BRANCH**
#51 PRESIDENT AVE., BF HOMES PARANAQUE
TEL NO: 828-2915
CELLPHONE NO: 0932-4060806
CONTACT PERSON: MS. ELIZABETH PALIMA
7. **TRONIX CAVITE BRANCH**
GOV'DRIVE, BRGY LANGKAAN II (INFRONT OF FCIE
COMPOUND) CATHERINE SQUARE BLDG II, DASMARINAS
CAVITE
TEL NOS.: 475-6362 / (046) 852-2955
CELLPHONE NO: 0922-3377214
CONTACT PERSON: MR. ARSENIO ANGELES
8. **TRONIX MANDALUYONG BRANCH**
#412 SHAW BOULEVARD COR. TORRES ST.,
MANDALUYONG CITY
TEL NOS.: 725-7290
CONTACT PERSON: MS. JENY



BREAD TOASTER

MODEL # KW-2509

Voltage: 220V a.c. 60Hz Power: 600 WATTS



INSTRUCTION MANUAL


CONGRATULATIONS

You are now a proud new owner of a KYOWA Bread Toaster model no. KW-2509.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Bread Toaster to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

1. Supply Cord
2. Cancel Button
3. Time Control Knob
4. Start Knob
5. Bread Slot

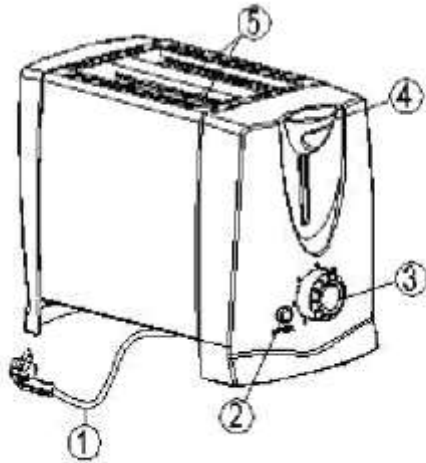

IMPORTANT SAFEGUARDS

When using KYOWA Bread Toaster, basic safety precautions should always be followed.

- Always operate your KYOWA Bread Toaster from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not place any part of this toaster in water or any other liquid.
- Prior to first use, the toaster should be used for a few minutes without bread in it. There will be some smoke at first; this is entirely normal.
- Avoid touching hot surfaces of the toaster during use.
- Use only pre-sliced bread.
- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electric shock.
- Do not use the toaster near curtains, upholstery or other decorative fabrics and other combustible materials, as they can easily catch fire and cause a safety hazard.
- Do not remove food from the toaster while the plunger is down.
- This KYOWA Bread Toaster is not intended to be operated by means of an external timer or separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate or place any part of your KYOWA Bread Toaster on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- This KYOWA Bread Toaster is intended for normal/domestic household use only and is not suitable for commercial use.

HOW TO USE

When using for the first time, remove all packaging materials from your new KYOWA Bread Toaster. Unwind and completely untangle the power cable.

1. Place your toaster on a flat, dry, stable surface.
2. Plug the toaster in, and adjust it to your required toasting time using the Time Control Knob (3).
3. Place bread for toasting into the slot, then press down the Start Control Knob (4). It will remain down until the bread is toasted.
4. If you wish to stop the toasting process, press the Cancel Button (2). This will automatically eject the toast, and cancel the heating elements.
5. If you used bread sticks, unplug toaster, wait for it to cool, and then remove the bread. NEVER USE METAL UTENSILS TO REMOVE THE BREAD.
6. After use, wipe away crumbs using a dry cloth.
7. Always allow at least 1 minute cooling time between cycles if toaster is being used more than once at a time.
8. Always put bread into toaster slots when using the toaster. Toaster will not function with empty slots.

CLEAN AND CARE

- Unplug power cord from electric outlet.
- Allow the toaster to cool down completely before cleaning.
- Turn over the toaster to remove crumbs. Wipe clean and replace.
- DO NOT use coarse or abrasive sponge, cloth or steel wool to clean the toaster.
- Never spray or apply cleaner directly onto or into the toaster – cleaner should be applied to a soft cloth.
- The outside surface of the toaster should be wiped with a soft, damp cloth, and polished with a soft, dry cloth.
- After cleaning, store toaster in a cool, dry place.

SERVICE

- Do not operate your KYOWA Bread Toaster if the Bread Toaster malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble the Bread Toaster by yourself. No user serviceable parts inside. Refer all service to an authorized KYOWA service facility ONLY.