

KYOWA SERVICE CENTER (MAIN)

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA
TEL: 242-1731 - 35

METRO MANILA

TRONIX QUEZON CITY (MAIN) #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE, Q.C.
TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489 CONTACT PERSON: MS. JENIELYN MANZANO

TRONIX MANILA #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN MIGUEL, MANILA (NEAR MALACAÑANG)
TEL: 743-4088 MOBILE: 0922-7909555 CONTACT PERSON: MS. ANALEN FIADACAN

TRONIX STA. CRUZ #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA. CRUZ, MANILA
TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971 CONTACT PERSON: MS. SHEILA PIRANTE

TRONIX SAN JUAN #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG BATO, SAN JUAN CITY
TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653 CONTACT PERSON: MS. MICHELLE CASAÑA

TRONIX ALABANG TOWN CENTER LA-7 SERVICE TOWN, ALABANG TOWN CENTER, MUNTINLUPA CITY
TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059 CONTACT PERSON: MR. FRANCIS ACOSTA

TRONIX PARAÑAQUE #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF HOME, PARAÑAQUE
TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806 CONTACT PERSON: MS. ELIZABETH PALIMA

TRONIX MAKATI #103 MJM BLDG, 650 JP RIZAL ST, BRGY. VALENZUELA MAKATI CITY
TEL: 710-1980 / 949-3684 MOBILE: 0932-1999085

TRONIX MARIKINA #572 J.P. RIZAL AVE, CONCEPCION 1, MARIKINA (IN FRONT OF KSERVICO)
TEL: 696-6411 MOBILE: 0942-0940088

TRONIX PASIG LOWER GROUND SERVICE LANE, SM CENTER, PASIG
TEL: 703-5599 / 234-9020 MOBILE: 0932-1999372 CONTACT PERSON: MS. NORA CRESENCIO

TRONIX SHAW - MANDALUYONG #412 SHAW BLVD, COR. TORRES & CALDERON ST, MANDALUYONG CITY
TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350 CONTACT PERSON: MS. SHERLY DELA CRUZ

TRONIX COMMONWEALTH LAGMANLAG COMMONWEALTH AVE, HOLY SPIRIT, DILIMAN, Q.C. (BESIDE SHELL)
TEL: 623-7266 MOBILE: 0933-6584465 / 09175810546 CONTACT PERSON: MR. MANNY SAGAYAP

CAVITE

TRONIX CAVITE KM 16, AGUINALDO HI-WAY, NIOG 1-A, PANAPAAN 1, BACOR, CAVITE
TEL: (046) 519-0755 / (046) 475-6362 MOBILE: 0932-1991811 CONTACT PERSON: MS. MEANN DIONISIO

CEBU

MARKWELL ENTERPRISES #85 SIKATUNA ST, CEBU CITY
TEL: (032) 253-0752 MOBILE: 0917-6256934 CONTACT PERSON: MR. BOY SOUICO

BIO PLUS ELEC. REPAIR CENTER C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY
TEL: (032) 262-1339 MOBILE: 0922-4744991 CONTACT PERSON: MS. ZYSELDA MABUTE

DAVAO

KOOL EXPRESS DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY
TEL: (082) 227-6369 MOBILE: 0908-420-6303 CONTACT PERSON: MS. DORIS ASIRIT

ILOILO

NACES APPLIANCE CORPORATION NACES BLDG, #10 DELGADO ST, ILOILO
TEL: (033) 337-7696 MOBILE: (033) 508-2205 CONTACT PERSON: MS. LORELIE LIM

TARLAC

TARLAC MAC ENTERPRISES INC. BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC
TEL: (045) 982-3178 MOBILE: 0922-8597136



BREAD TOASTER

MODEL # KW-2510

Voltage: 230va.c. 60Hz Power: 700 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Bread Toaster model no. KW-2510.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Bread Toaster to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

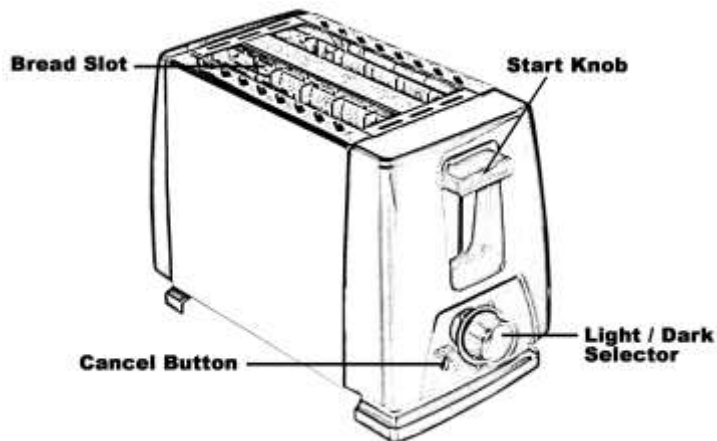

IMPORTANT SAFEGUARDS

When using your KYOWA Bread Toaster, basic safety precautions should always be followed.

- Always operate your KYOWA Bread Toaster from a power source of the same voltage and frequency rating as indicated on the rating label.
- Connect the Bread Toaster unit only to properly wired wall outlets.
- Do not use toaster in damp or wet area. Keep dry the exterior and the base of the unit.
- Do not operate or place any part of your KYOWA Bread Toaster on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not operate the toaster if it malfunctions or any part of it including the supply cord has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Use only pre-sliced bread.
- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster.
- Do not use the toaster near curtains, upholstery or other decorative fabrics and other combustible materials, as they can easily catch fire and cause a safety hazard.
- Do not remove food from the toaster while the plunger is down.
- Do not remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool, and then remove the crumb tray.
- Avoid touching hot surfaces of the toaster during use.
- This KYOWA Bread Toaster is not intended to be operated by means of an external timer or separate remote control system.
- Hold plug when unplugging from the socket. Do not unplug by pulling the supply cord.
- Switch OFF and unplug the Bread Toaster from outlet after every use and before cleaning.
- To reduce the risk of electric shock, do not immerse or expose the Bread Toaster to rain, moisture or any other liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This KYOWA Bread Toaster is intended for normal/domestic household use only and is not suitable for commercial use.



Marked with this symbol on the appliance can be hot and should not be touched without taking care.

HOW TO USE

- Remove all packaging materials from the Bread Toaster. Completely untangle or unwind the power cable of the toaster.
- Plug the Bread Toaster into the power outlet and adjust toaster setting using the Light/Dark Selector.
- For initial use, the toaster must be used without bread in it. Some parts of the toaster have been slightly greased and as a result, the unit might slightly emit smoke when connected for the first time.
- Place the bread for toasting into the bread slots and then push down Start Control Knob. Toaster unit will not function with empty slots.
- If you wish to stop toasting process, press the Cancel Button. This will automatically eject the bread and shut OFF the heating elements.
- Wait until the bread from the Bread Toaster pops up indicating that the bread is already toasted.
- If you used bread sticks, unplug toaster, wait for it to cool down then remove bread sticks. Never use any metal utensil when removing bread from the toaster.
- Allow unit to rest for about one minute before toasting new bread into the toaster again.

CLEAN AND CARE

- Allow Bread Toaster to cool down completely before cleaning.
- Remove Crumb Tray from the Bread Toaster.
- Wipe off bread crumbs using a dry cloth.
- Wipe external parts of the Bread Toaster using a soft and damp cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Put back parts and accessories of the Bread Toaster to their proper places before operating again.
- After cleaning, store toaster in a cool, dry place.

SERVICE

- Do not operate your KYOWA Bread Toaster with a damaged cord or plug, or if the Bread Toaster malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- CAUTION: To reduce the risk of electric shock, do not disassemble the Bread Toaster by yourself. No user serviceable parts inside. Refer all service to an authorized KYOWA service facility ONLY.