

KYOWA SERVICE CENTER (MAIN)

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA
TEL: 242-1731 - 35

METRO MANILA

TRONIX QUEZON CITY (MAIN) #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE, Q.C.
TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489 CONTACT PERSON: MS. JENIELYN MANZANO

TRONIX MANILA #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN MIGUEL, MANILA (NEAR MALACANANG)
TEL: 743-4088 MOBILE: 0922-7909555 CONTACT PERSON: MS. ANALEN FIADACAN

TRONIX STA. CRUZ #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA. CRUZ, MANILA
TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971 CONTACT PERSON: MS. SHEILA PIRANTE

TRONIX SAN JUAN #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG BATO, SAN JUAN CITY
TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653 CONTACT PERSON: MS. MICHELLE CASAÑA

TRONIX ALABANG TOWN CENTER LA-7 SERVICE TOWN, ALABANG TOWN CENTER, MUNTINLUPA CITY
TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059 CONTACT PERSON: MR. FRANCIS ACOSTA

TRONIX PARAÑAQUE #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF HOME, PARAÑAQUE
TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806 CONTACT PERSON: MS. ELIZABETH PALIMA

TRONIX MAKATI #103 MJM BLDG, 650 JP RIZAL ST, BRGY. VALENZUELA MAKATI CITY
TEL: 710-1980 / 949-3684 MOBILE: 0932-1999085

TRONIX MARIKINA #572 J.P. RIZAL AVE, CONCEPCION 1, MARIKINA (IN FRONT OF KSERVICO)
TEL: 696-6411 MOBILE: 0942-0940088

TRONIX PASIG LOWER GROUND SERVICE LANE, SM CENTER, PASIG
TEL: 703-5599 / 234-9020 MOBILE: 0932-1999372 CONTACT PERSON: MS. NORA CRESENCIO

TRONIX SHAW - MANDALUYONG #412 SHAW BLVD, COR. TORRES & CALDERON ST, MANDALUYONG CITY
TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350 CONTACT PERSON: MS. SHERLY DELA CRUZ

TRONIX COMMONWEALTH LAGMANLAG COMMONWEALTH AVE, HOLY SPIRIT, DILIMAN, Q.C. (BESIDE SHELL)
TEL: 623-7266 MOBILE: 0933-6584465 / 09175810546 CONTACT PERSON: MR. MANNY SAGAYAP

CAVITE

TRONIX CAVITE KM 16, AGUINALDO HI-WAY, NIOG 1-A, PANAPAAN 1, BACOR, CAVITE
TEL: (046) 519-0755 / (046) 475-6362 MOBILE: 0932-1991811 CONTACT PERSON: MS. MEANN DIONISIO

CEBU

MARKWELL ENTERPRISES #85 SIKATUNA ST, CEBU CITY
TEL: (032) 253-0752 MOBILE: 0917-6256934 CONTACT PERSON: MR. BOY SOUICO

BIO PLUS ELEC. REPAIR CENTER C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY
TEL: (032) 262-1339 MOBILE: 0922-4744991 CONTACT PERSON: MS. ZYSELDA MABUTE

DAVAO

KOOL EXPRESS DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY
TEL: (082) 227-6369 MOBILE: 0908-420-6303 CONTACT PERSON: MS. DORIS ASIRIT

ILOILO

NACES APPLIANCE CORPORATION NACES BLDG, #10 DELGADO ST, ILOILO
TEL: (033) 337-7696 MOBILE: (033) 508-2205 CONTACT PERSON: MS. LORELIE LIM

TARLAC

TARLAC MAC ENTERPRISES INC. BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC
TEL: (045) 982-3178 MOBILE: 0922-8597136



BREAD TOASTER

MODEL NO. KW-2526

Voltage: 230V a.c. 60Hz Power: 850 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Bread Toaster model no. KW-2526.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Bread Toaster to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

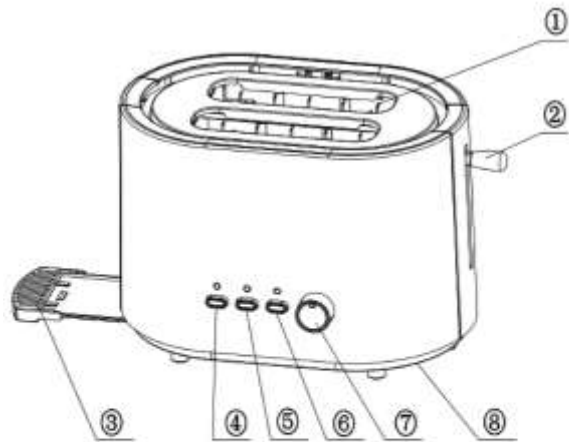

1. BREAD SLOT
2. START KNOB
3. CRUMB TRAY
4. CANCEL BUTTON

5. DEFROST BUTTON
6. REHEAT BUTTON
7. TOASTING CONTROL
8. CORD STORAGE

IMPORTANT SAFEGUARDS

When using KYOWA Bread Toaster, basic safety precautions should always be followed.

- Always operate your KYOWA Bread Toaster from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not place any part of this toaster in water or any other liquid.
- Prior to first use, the toaster should be used for a few minutes without bread in it. There will be some smoke at first; this is entirely normal.
- Avoid touching hot surfaces of the toaster during use.
- Use only pre-sliced bread.
- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electric shock.
- Do not use the toaster near curtains, upholstery or other decorative fabrics and other combustible materials, as they can easily catch fire and cause a safety hazard.
- Do not remove food from the toaster while the plunger is down.
- This KYOWA Bread Toaster is not intended to be operated by means of an external timer or separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate or place any part of your KYOWA Bread Toaster on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- This KYOWA Bread Toaster is intended for normal/domestic household use only and is not suitable for commercial use.

HOW TO USE

- Remove all packaging materials from your Kyowa Bread Toaster.
- Wipe all parts with a soft dry cloth.
- Place your toaster on a flat, dry, and stable surface.
- For initial use, operate bread toaster without any bread on it for about a minute.
- Some parts of the bread toaster have been slightly greased and as a result, the unit may slightly emit smoke when connected for the first time – this however will cease after you have used the bread toaster for some time.
- Plug bread toaster into the power supply.
- Rotate browning control knob – rotating knob to a higher number will result to more brown toasted bread.
- Put in bread into the bread slots. When toasting only a single slice of bread, set time control knob to lower setting – toaster is designed to heat the whole toasting chamber for 2 slices of bread and thus operates at higher temperature level.
- Press down start knob.
- Breads shall automatically pop-up once the toasting time has elapsed; you may press cancel button anytime if you wish to stop toasting process before the set time – doing so will automatically eject the toast.
- For frozen breads, press defrost button after you have set browning level. Your Kyowa bread toaster will first defrost and then toast the bread.
- When reheating bread, put bread into bread slots, press start knob downward, then press reheat button – no need to set browning level.
- If you are going to toast bread sticks, unplug toaster, allow it to cool and then remove the bread. Never use metal utensils to remove the bread.
- Always allow 1 minute cooling of the toaster time in-between toasting cycles.

CLEAN AND CARE

- Allow Bread Toaster to cool down completely before cleaning.
- Remove Crumb Tray from the Bread Toaster.
- Wipe off bread crumbs using a dry cloth.
- Wipe external parts of the Bread Toaster using a soft and damp cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Put back parts and accessories of the Bread Toaster to their proper places before operating again.
- After cleaning, store toaster in a cool, dry place.

SERVICE

- Do not operate your KYOWA Bread Toaster if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble the Bread Toaster by yourself. No user serviceable parts inside. Refer all service to an authorized KYOWA service facility ONLY.