

KYOWA SERVICE CENTER

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines



WAFFLE HOTDOG MAKER

MODEL NO.: KW-2607

Voltage: 230V a.c. 60Hz Power: 750 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Waffle Hotdog Maker model no. KW-2607.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Waffle Hotdog Maker to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

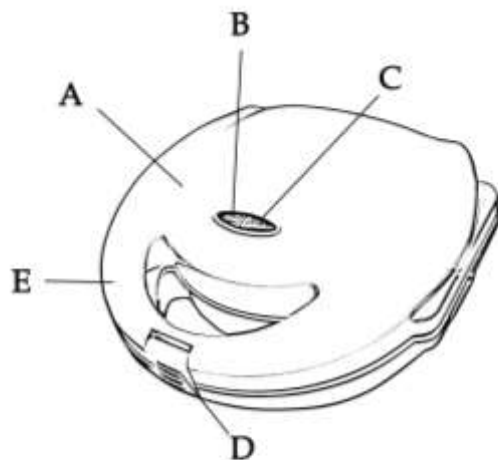

- | | |
|-------------------|----------------|
| A. Body | D. Handle Clip |
| B. Power ON Light | E. Handle |
| C. Ready Light | |

IMPORTANT SAFEGUARDS

When using your Waffle Hotdog Maker, basic safety precautions should always be followed:

- Always operate your KYOWA Waffle Hotdog Maker from a power source of the same voltage and frequency rating as indicated on the rating label.
- Connect the Waffle Hotdog Maker unit only to properly wired wall outlets.
- Do not use waffle maker in damp or wet area. Keep dry the exterior and the base of the unit.
- Do not place the waffle maker on uneven surfaces. Place upon a flat area surface.
- Do not operate or place any part of your KYOWA Waffle Hotdog Maker on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not operate the waffle maker if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not use or replace accessories other than the ones originally provided.
- Never leave the Waffle Hotdog Maker unattended when in use.
- Avoid touching hot surfaces of the Waffle Hotdog Maker during use. Use the cover or handle only.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- Switch OFF and unplug the Waffle Hotdog Maker from outlet before filling, emptying, when not in use or before cleaning.
- To reduce the risk of electric shock, do not immerse or expose the waffle maker to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Waffle Hotdog Maker is intended for normal domestic/household use only. This unit is not suitable for commercial use.

HOW TO USE

- Insert plug into the power supply. The Power ON Light indicates that the unit is turned ON.
- Wait for about five minutes or until the Ready Lamp lights up indicating that the unit is ready to use.
- Fill Baking Plates with the prepared mixture for the waffle.
- Close waffle maker by pushing down the handle. Make sure that the Handle Clip is properly locked in place.
- While cooking, you may check if the waffle is already cooked by opening the cover of the unit. If you need to extend cooking time, just push down the handle of the unit to cover the waffle.
- Remove waffle from the waffle maker using a wooden spatula. Do not use any kind of sharp or metallic objects.

CLEAN AND CARE

- Allow Waffle Hotdog Maker to cool down completely before cleaning.
- Clean housing of the waffle maker by wiping with a soft, damp cloth.
- Wash Toasting Plates using warm soapy water.
- Do not use harsh cleaning agents or abrasive objects (e.g. scrubbing pads or metal brushes) for cleaning.
- Wipe dry the waffle maker with a soft, dry cloth.
- Put back parts and accessories of the Hotdog Maker to their proper places before operating again.
- Store unit in a cool and dry place.

SERVICE

- Do not operate your KYOWA Waffle Hotdog Maker if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Waffle Hotdog Maker by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.