

## **KYOWA SERVICE CENTER**

Rm. 1203 State Center Building  
#333 Juan Luna St., Binondo  
Manila, Philippines



## **PANCAKE MAKER**

**MODEL # KW-2625**

Voltage: 230V a.c. 60Hz    Power: 750 WATTS




## **INSTRUCTION MANUAL**

## CONGRATULATIONS

You are now a proud new owner of a KYOWA Pancake Maker model no. KW-2625.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Pancake Maker to a third party, please hand over this instruction manual as well.

## PARTS DESCRIPTION

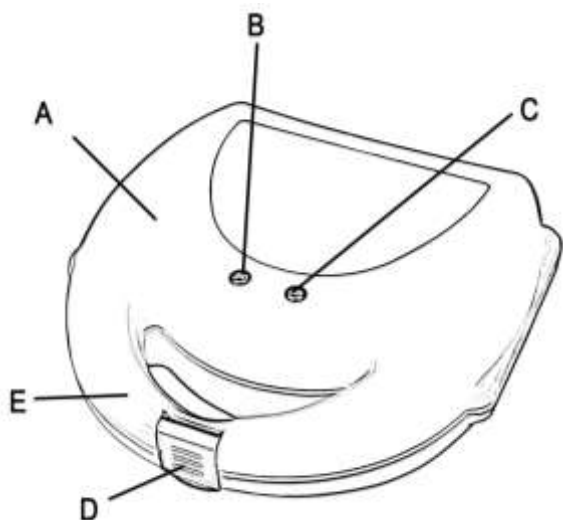

- |                   |                |
|-------------------|----------------|
| A. Body           | D. Handle Clip |
| B. Power On Light | E. Handle      |
| C. Ready Light    |                |

## IMPORTANT SAFEGUARDS

When using your Pancake Maker, basic safety precautions should always be followed:

- Always operate your KYOWA Pancake Maker from a power source of the same voltage and frequency rating as indicated on the rating label.
- Connect the unit only to properly wired wall outlets.
- Do not use pancake maker in damp or wet area. Keep dry the exterior and the base of the unit.
- Do not place the pancake maker on uneven surfaces. Place upon a flat area surface.
- Do not operate or place any part of your pancake maker on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not operate the pancake maker if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not use or replace accessories other than the ones originally provided.
- Never leave the Pancake Maker unattended when in use.
- Avoid touching hot surfaces of the Pancake Maker during use. Use the cover or handle only.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- Switch OFF and unplug the Pancake Maker from outlet before filling, emptying, when not in use or before cleaning.
- To reduce the risk of electric shock, do not immerse or expose the pancake maker to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Pancake Maker is intended for normal domestic/household use only. This unit is not suitable for commercial use.

## HOW TO USE

- For initial use, put some oil in the toasting plates of the pancake maker. Allow unit to heat up for several minutes without putting any food inside.
- Insert plug into the power supply. The Power ON Light indicates that the unit is turned ON.
- Wait for about five minutes or until the Ready Lamp lights up indicating that the unit is ready to use.
- Put prepared pancake mixture into the plates.
- Close Pancake Maker by pushing down the handle. Make sure that the Handle Clip is properly locked in place.
- Power ON light will blink to ON and OFF while the thermostat keeps the pancake maker at the right temperature. This is entirely normal.
- While cooking, you may check if the pancake is already cooked by opening the cover of the unit. If you need to extend cooking time, just push down the handle of the unit to cover the pancake.
- Remove pancake from the unit using a wooden spatula. Do not use any kind of sharp or metallic objects.

## CLEAN AND CARE

- Allow Pancake Maker to cool down completely before cleaning.
- Clean housing of the pancake maker by wiping with a soft, damp cloth.
- Wash Baking Plates using warm soapy water.
- Do not use harsh cleaning agents or abrasive objects (e.g. scrubbing pads or metal brushes) for cleaning.
- Wipe dry the pancake maker with a soft, dry cloth.
- Put back parts and accessories of the Pancake Maker to their proper places before operating again.
- Store unit in a cool and dry place.

## SERVICE

- Do not operate your KYOWA Pancake Maker if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Pancake Maker by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.