

KYOWA SERVICE CENTER (MAIN)

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA
TEL: 242-1731 - 35

METRO MANILA

TRONIX QUEZON CITY (MAIN) #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE, Q.C.
TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489 CONTACT PERSON: MS. JENIELYN MANZANO

TRONIX MANILA #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN MIGUEL, MANILA (NEAR MALACAÑANG)
TEL: 743-4088 MOBILE: 0922-7909555 CONTACT PERSON: MS. ANALEN FIADACAN

TRONIX STA. CRUZ #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA. CRUZ, MANILA
TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971 CONTACT PERSON: MS. SHEILA PIRANTE

TRONIX SAN JUAN #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG BATO, SAN JUAN CITY
TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653 CONTACT PERSON: MS. MICHELLE CASAÑA

TRONIX ALABANG TOWN CENTER LA-7 SERVICE TOWN, ALABANG TOWN CENTER, MUNTINLUPA CITY
TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059 CONTACT PERSON: MR. FRANCIS ACOSTA

TRONIX PARAÑAQUE #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF HOME, PARAÑAQUE
TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806 CONTACT PERSON: MS. ELIZABETH PALIMA

TRONIX MAKATI #103 MJM BLDG, 650 JP RIZAL ST, BRGY. VALENZUELA MAKATI CITY
TEL: 710-1980 / 949-3684 MOBILE: 0932-1999085

TRONIX MARIKINA #572 J.P. RIZAL AVE, CONCEPCION 1, MARIKINA (IN FRONT OF KSERVICO)
TEL: 696-6411 MOBILE: 0942-0940088

TRONIX PASIG LOWER GROUND SERVICE LANE, SM CENTER, PASIG
TEL: 703-5599 / 234-9020 MOBILE: 0932-1999372 CONTACT PERSON: MS. NORA CRESENCIO

TRONIX SHAW - MANDALUYONG #412 SHAW BLVD, COR. TORRES & CALDERON ST, MANDALUYONG CITY
TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350 CONTACT PERSON: MS. SHERLY DELA CRUZ

TRONIX COMMONWEALTH LAGMANLAG COMMONWEALTH AVE, HOLY SPIRIT, DILIMAN, Q.C. (BESIDE SHELL)
TEL: 623-7266 MOBILE: 0933-6584465 / 09175810546 CONTACT PERSON: MR. MANNY SAGAYAP

CAVITE

TRONIX CAVITE KM 16, AGUINALDO HI-WAY, NIOG 1-A, PANAPAAN 1, BACOR, CAVITE
TEL: (046) 519-0755 / (046) 475-6362 MOBILE: 0932-1991811 CONTACT PERSON: MS. MEANN DIONISIO

CEBU

MARKWELL ENTERPRISES #85 SIKATUNA ST, CEBU CITY
TEL: (032) 253-0752 MOBILE: 0917-6256934 CONTACT PERSON: MR. BOY SOUICO

BIO PLUS ELEC. REPAIR CENTER C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY
TEL: (032) 262-1339 MOBILE: 0922-4744991 CONTACT PERSON: MS. ZYSELDA MABUTE

DAVAO

KOOL EXPRESS DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY
TEL: (082) 227-6369 MOBILE: 0908-420-6303 CONTACT PERSON: MS. DORIS ASIRIT

ILOILO

NACES APPLIANCE CORPORATION NACES BLDG, #10 DELGADO ST, ILOILO
TEL: (033) 337-7696 MOBILE: (033) 508-2205 CONTACT PERSON: MS. LORELIE LIM

TARLAC

TARLAC MAC ENTERPRISES INC. BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC
TEL: (045) 982-3178 MOBILE: 0922-8597136



BURGER AND PANCAKE MAKER

MODEL # KW-2628

Voltage: 230V a.c. 60Hz Power: 750 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Burger and Pancake Maker model no. KW-2628.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Burger and Pancake Maker to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

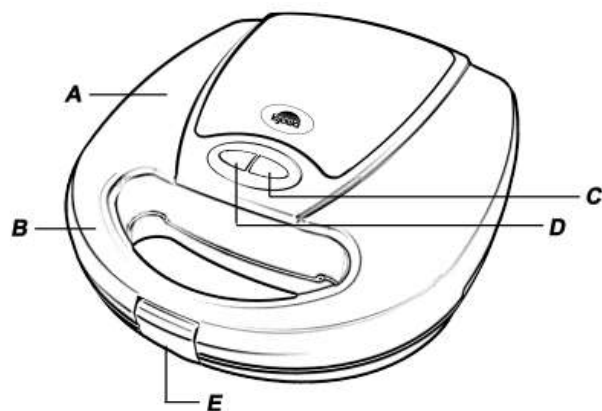

- | | |
|--------------------------|------------------------|
| A. Body | D. Red indicator Light |
| B. Handle | E. Clip Lock |
| C. Green Indicator Light | |

IMPORTANT SAFEGUARDS

When using your Burger and Pancake Maker, basic safety precautions should always be followed:

- Always operate your KYOWA Burger and Pancake Maker from a power source of the same voltage and frequency rating as indicated on the rating label.
- Connect the Burger and Pancake Maker unit only to properly wired wall outlets.
- Do not use pancake maker in damp or wet area. Keep dry the exterior and the base of the unit.
- Do not place the pancake maker on uneven surfaces. Place upon a flat area surface.
- Do not operate or place any part of your KYOWA Burger and Pancake Maker on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not operate the pancake maker if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not use or replace accessories other than the ones originally provided.
- Never leave the Burger and Pancake Maker unattended when in use.
- Avoid touching hot surfaces of the Burger and Pancake Maker during use. Use the cover or handle only.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- Switch OFF and unplug the Burger and Pancake Maker from outlet before filling, emptying, when not in use or before cleaning.
- To reduce the risk of electric shock, do not immerse or expose the pancake maker to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Burger and Pancake Maker is intended for normal domestic/household use only. This unit is not suitable for commercial use.

HOW TO USE

- Insert plug into the power supply. The green and red lights will illuminate to indicate that the unit is working.
- Wait for about five minutes or until the green indicator light turns OFF indicating that the unit is ready to use.
- For initial use, put some oil in the toasting plates of the unit. Allow unit to heat up for several minutes without putting any food inside.
- Fill Baking Plates with the prepared mixture for the pancake.
- For making burger, place burger buns on the plate, insert burger patty filling into the bread.
- Close unit by pushing down the handle. Make sure that the Handle Clip is properly locked in place.
- While cooking, you may check if the pancake or burger is already cooked by opening the cover of the unit. If you need to extend cooking time, just push down the handle of the unit to cover the pancake.
- Remove food from the unit using a wooden spatula. Do not use any kind of sharp or metallic objects to avoid scouring the non-stick baking plates.

CLEAN AND CARE

- Allow Burger and Pancake Maker to cool down completely before cleaning.
- Clean housing of the pancake maker by wiping with a soft, damp cloth.
- Wash Toasting Plates using warm soapy water.
- Do not use harsh cleaning agents or abrasive objects (e.g. scrubbing pads or metal brushes) for cleaning.
- Wipe dry the pancake maker with a soft, dry cloth.
- Store unit in a cool and dry place.

SERVICE

- Do not operate your KYOWA Burger and Pancake Maker if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Burger and Pancake Maker by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.