

KYOWA SERVICE CENTER (MAIN)

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA
TEL: 242-1731 - 35

METRO MANILA

TRONIX QUEZON CITY (MAIN) #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE, Q.C.
TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489 CONTACT PERSON: MS. JENIELYN MANZANC

TRONIX MANILA #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN MIGUEL, MANILA (NEAR MALACANANG)
TEL: 743-4088 MOBILE: 0922-7909555 CONTACT PERSON: MS. ANALEN FIADACAN

TRONIX STA. CRUZ #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA. CRUZ, MANILA
TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971 CONTACT PERSON: MS. SHEILA PIRANTE

TRONIX SAN JUAN #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG BATO, SAN JUAN CITY
TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653 CONTACT PERSON: MS. MICHELLE CASAÑA

TRONIX ALABANG TOWN CENTER LA-7 SERVICE TOWN, ALABANG TOWN CENTER, MUNTINLUPA CITY
TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059 CONTACT PERSON: MR. FRANCIS ACOSTA

TRONIX PARAÑAQUE #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF HOME, PARAÑAQUE
TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806 CONTACT PERSON: MS. ELIZABETH PALIMA

TRONIX MAKATI #103 MJM BLDG, 650 JP RIZAL ST, BRGY. VALENZUELA MAKATI CITY
TEL: 710-1980 / 949-3684 MOBILE: 0932-1999085

TRONIX MARIKINA #572 J.P. RIZAL AVE, CONCEPCION 1, MARIKINA (IN FRONT OF KSERVICO)
TEL: 696-6411 MOBILE: 0942-0940088

TRONIX PASIG LOWER GROUND SERVICE LANE, SM CENTER, PASIG
TEL: 703-5599 / 234-9020 MOBILE: 0932-1999372 CONTACT PERSON: MS. NORA CRESENCIO

TRONIX SHAW - MANDALUYONG #412 SHAW BLVD, COR. TORRES & CALDERON ST, MANDALUYONG CITY
TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350 CONTACT PERSON: MS. SHERLY DELA CRUZ

TRONIX COMMONWEALTH LAGMANLAG COMMONWEALTH AVE, HOLY SPIRIT, DILIMAN, Q.C. (BESIDE SHELL)
TEL: 623-7266 MOBILE: 0933-6584465 / 09175810546 CONTACT PERSON: MR. MANNY SAGAYAP

CAVITE

TRONIX CAVITE KM 16, AGUINALDO HI-WAY, NIOG 1-A, PANAPAAN 1, BACOR, CAVITE
TEL: (046) 519-0755 / (046) 475-6362 MOBILE: 0932-1991811 CONTACT PERSON: MS. MEANN DIONISIO

CEBU

MARKWELL ENTERPRISES #85 SIKATUNA ST, CEBU CITY
TEL: (032) 253-0752 MOBILE: 0917-6256934 CONTACT PERSON: MR. BOY SOUICO

BIO PLUS ELEC. REPAIR CENTER C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY
TEL: (032) 262-1339 MOBILE: 0922-4744991 CONTACT PERSON: MS. ZYSELDA MABUTE

DAVAO

KOOL EXPRESS DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY
TEL: (082) 227-6369 MOBILE: 0908-420-6303 CONTACT PERSON: MS. DORIS ASIRIT

ILOILO

NACES APPLIANCE CORPORATION NACES BLDG, #10 DELGADO ST, ILOILO
TEL: (033) 337-7696 MOBILE: (033) 508-2205 CONTACT PERSON: MS. LORELIE LIM

TARLAC

TARLAC MAC ENTERPRISES INC. BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC
TEL: (045) 982-3178 MOBILE: 0922-8597136



INDUCTION COOKER

MODEL NO: KW-3633

Voltage: 230Va.c. 60Hz Power: 1300 WATTS



 
INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Induction Cooker model no. KW-3633.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. If you pass this appliance to a third party, this instruction manual must also be handed over.

PARTS DESCRIPTION

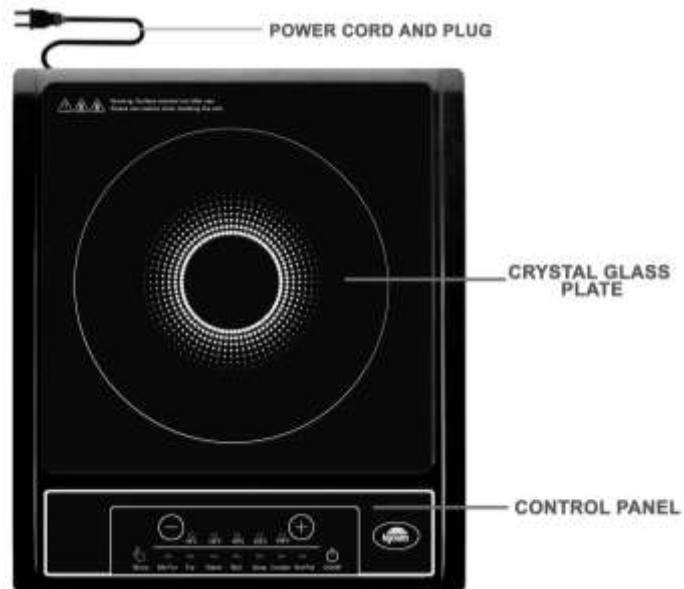


IMPORTANT SAFEGUARDS

When using the Induction Cooker, basic safety precautions should always be followed:

- Always operate your KYOWA Induction Cooker from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not plug the Induction Cooker in extension wire outlet with multiple loads (with other appliance plugged in it) to prevent overloading and overheating of electrical wires.
- Maintain at least 10-centimeter distance between unit and wall for proper ventilation.
- To reduce the risk of electric shock, do not immerse or expose the Induction Cooker to rain, moisture or any liquid.
- Keep the Induction Cooker away from magnetic materials. It will cause damage in its electronic parts and functions.
- Do not operate the Induction Cooker if the unit including its supply cord malfunctions or appears damaged in any way.
- Do not operate or place any part of your Induction Cooker on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not leave the Induction Cooker unattended while in use.
- Do not put cooking pot into the induction cooker empty or allow cooking pot to become empty when cooking. Doing so may damage the pot due to high temperature and might affect the performance of the cooker later on.
- Do not put dish cloth, paper, cushion, etc. on the panel of the Induction Cooker when in use to avoid any risk of fire.
- Do not put wires or any metallic materials in the air vent / air entry of the Induction Cooker to avoid danger of electric shock.
- Do not touch the top plate of Induction Cooker after use to avoid from getting scalded.
- Switch OFF the Induction Cooker and unplug from outlet when not in use or before cleaning.
- Hold plug when unplugging from the socket. Do not unplug by pulling the supply cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Induction Cooker is intended for normal/domestic household use only and is not suitable for commercial use.

HOW TO USE

 - Remove all packaging materials from the Induction Cooker. Completely untangle or unwind the power cable of unit.
- Plug Induction Cooker into the power outlet (230V / at least 10 Ampere capacity). All indicator light will flash and the unit shall beep one time.

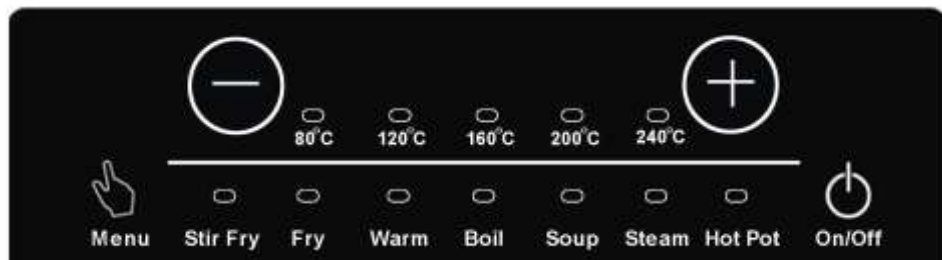


- Put the appropriate cooking pot or pan with food into the Induction Cooker plate – the unit is still not functioning at this point.
- Press ON/OFF Button to turn the unit ON. After pressing the power key, the induction cooker will operate by default HOTPOT function.
- Press MENU key to select function as follows:

- ❑ **STIR FRY** – Press function key until the indicator light points into the stir fry key. Default temperature for this function is 240°C and may be adjusted down to 80°C by pressing “-” key and up to 240°C by pressing the “+” key.
- ❑ **FRY** – Press function key until the indicator light points into the fry key. Default temperature for this function is 200°C and may be adjusted down to 80°C by pressing “-” key and up to 240°C by pressing the “+” key.
- ❑ **WARM** – Press function key until the indicator light points into the warm key. Default temperature for this function is 80°C; “+” and “-” keys are locked and temperature may not be adjusted. Power cycles ON/OFF at this stage and automatically cuts off its function after 30 minutes.
- ❑ **BOIL** – Press function key until the indicator light points into the boil key. Default temperature for this function is 240°C; “+” and “-” keys are locked and temperature may not be adjusted. Power starts to cycle ON/OFF after 15 minutes at this stage, and automatically cuts off its function after 20 minutes.

- ❑ **SOUP** – Press function key until the indicator light points into the soup key. Default temperature for this function is 240°C; “+” and “-” keys are locked and temperature may not be adjusted. Power starts to cycle ON/OFF after 20 minutes and automatically cuts off its function after 2 hours.
- ❑ **STEAM** – Press function key until the indicator light points into the steam key. Default temperature for this function is 200°C; “+” and “-” keys are locked and temperature may not be adjusted. Power is automatically cut off after 1 hour.
- ❑ **HOTPOT** – Press function key until the indicator light points into the hotpot key. Default temperature for this function is 160°C and may be adjusted down to 80°C by pressing “-” key and up to 240°C by pressing the “+” key.

INDUCTION COOKWARE GUIDE

 ACCEPTABLE POTS AND PANS TO USE

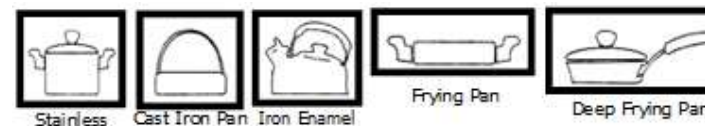

- PAN MATERIAL – made of iron metal / stainless steel containing magnetic inducing material
- PAN APPEARANCE AND SIZE – with smooth and even-finished bottom, bottom diameter is 16 to 24 cm.

NOT ACCEPTABLE POTS AND PANS TO USE



- PAN MATERIAL – non-iron metal, ceramic pot, glass, pans with copper and aluminum material
- PAN APPEARANCE AND SIZE – rough bottom pans; bottom diameter is less than 16 cm

TROUBLESHOOTING

- ❏ HOTPOT KEY BLINKS WITH BEEPING SOUND – means no pan is detected on the surface of the induction cooker, or the pan being used is not induction compatible; see “Induction Cookware Guide”.
- ❏ 200°C LIGHT BLINKS WITH BEEPING SOUND – means the surface sensor of the induction cooker is short circuited or has open circuit; please contact authorized service center.
- ❏ 240 LIGHT BLINKS WITH BEEPING SOUND – means power voltage exceeds 265V, or voltage is lower than 100V; turn the unit to OFF, then wait until the power supply stabilized.

CLEAN AND CARE

- Allow Induction Cooker to cool down completely before cleaning.
- Make sure that Induction Cooker is unplugged from power outlet when cleaning.
- Do not wash the Induction Cooker with water or any liquid.
- Conduct regular cleaning of body and panel to prevent accumulation of dirt and stains.
- Clean the body and panel from oil residue using mild detergent and damp cloth. Clean the air inlet and outlet with soft brush.
- Keep the Induction Cooker clean to prevent attraction from bugs and other insects. Trapped bugs and insects inside the appliance may cause the Induction Cooker to malfunction.

SERVICE

- Do not operate your KYOWA Induction Cooker if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble the Induction Cooker by yourself. No user serviceable parts inside. Refer all service to an authorized KYOWA service facility ONLY.