

KYOWA SERVICE CENTER

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines



ELECTRIC GRILL

MODEL # KW-3753

Voltage: 220V a.c. - 60Hz Power: 1350 WATTS



INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Electric Grill model no. KW-3753.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Kyowa Electric Grill to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

INSERT PARTS DESCRIPTION SKETCH HERE

IMPORTANT SAFEGUARDS

When using your Electric Grill, basic safety precautions should always be followed:

- Always operate your KYOWA Electric Grill from a power source of the same voltage and frequency rating as indicated on the rating label.
- Place the Electric Grill on a flat surface and far from the edge of counter top.
- Do not operate the Electric Grill if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your Electric Grill on or near any hot surface such as gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories of the Electric Grill, other than the ones originally provided.
- Never use any hard utensil when putting in or taking out food from the grill, use only utensils designed for non-stick cookware.
- Never leave the Electric Grill unattended when in use.
- Avoid touching hot surfaces of the griller when in operation. Use the cover handle only.
- Switch OFF and unplug the Electric Grill from outlet when not in use or before cleaning.
- Always turn setting controls to OFF before disconnecting the cord from the power supply. Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- To reduce the risk of electric shock, do not immerse or expose the Electric Grill to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Electric Grill is intended for normal domestic/household use only. This model is not suitable for commercial use.

HOW TO USE

- Remove all packaging materials from the Electric Grill. Completely untangle or unwind the power cable of the grill.
- For initial use, wipe plate and cover with a soft damp cloth to ensure that the unit is free from any kind of dirt.
- Plug in Temperature Control into the griller. Plug in cord into the power supply.
- Heat Electric Griller at MAX (225°C) temperature for about 5 minutes. Some parts of the griller have been slightly greased and as a result, the grill might slightly emit smoke when connected for the first time. This however, will cease after you have used the griller for some time.
- Put food to be grilled on the bottom pan. Cover grill then set temperature according to the thickness and weight of the food to be cooked; indicator light turns ON.
- Check grill regularly to see how food is being cooked. For best results, turn food occasionally to ensure that the food is cooked according to your preference.
- While grilling, Kyowa Electric Grill indicator light will cycle ON and OFF – this is to ensure that internal components of the griller will not overheat for guaranteed safe cooking.
- Turn Temperature Control Dial to OFF shortly before the food is about to get cooked. The heat in the griller would be sufficient enough for the last few minutes cooking; this will also reduce electric energy consumption.
- Unplug Electric Grill from the power supply.

CLEAN AND CARE

- Allow unit to cool down before cleaning.
- Clean housing and outer surfaces of the Electric Grill with a soft and damp cloth.
- Carefully wash plate with water and mild detergent, avoid any kind of liquid to seep into the heating element of the griller.
- Wash movable parts such as glass cover and drip pocket with soapy water; rinse thoroughly.
- Avoid using harsh or abrasive cleaning materials when cleaning the Electric Grill.
- Wipe dry Electric Grill with a soft and dry cloth.
- Put back parts and accessories of the Electric Grill to their proper position before operating again.
- Store in a cool and dry place.

SERVICE

- Do not operate your KYOWA Electric Grill if the unit malfunctions or appears damaged in any manner. Bring the complete unit to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Electric Grill by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.