

KYOWA SERVICE CENTER

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines



HAND MIXER

MODEL # KW-4405

Voltage: 230V a.c. 60Hz Power: 150 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Hand Mixer model no. KW-4405.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Hand Mixer to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

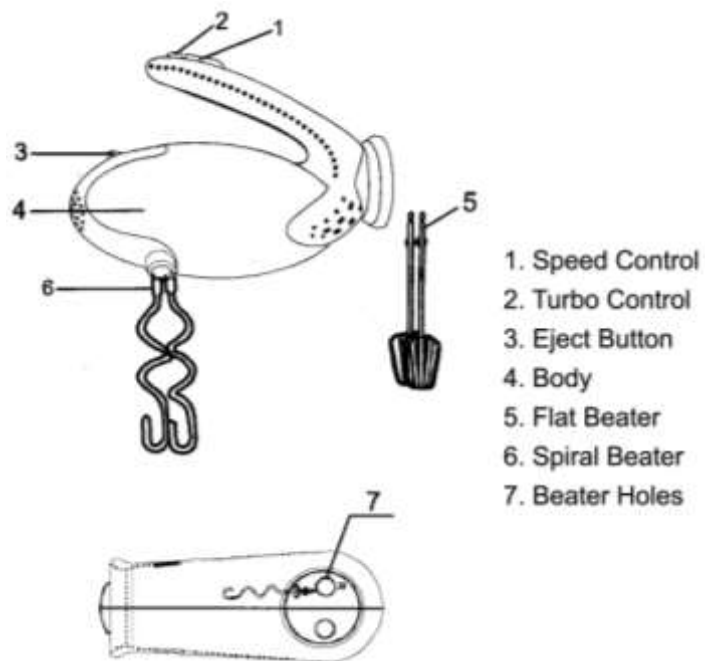

1

IMPORTANT SAFEGUARDS

When using your Hand Mixer, basic safety precautions should always be followed:

- Always operate your KYOWA Hand Mixer from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not operate or place any part of your Hand Mixer on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not operate the Hand Mixer if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Make sure that the switch of the Hand Mixer is turned to OFF before plugging and unplugging cord from the outlet.
- Do not use or replace accessories of the Hand Mixer other than the ones originally provided.
- Never leave the Hand Mixer unattended when in use.
- Never touch the beaters with your hand, spatula or any other object during operation.
- Do not use beaters for mixing hard ingredients.



- Avoid touching hot surfaces of the mixer during use. Use the handle only.
- Do not operate Hand Mixer for 5 minutes at stretch when using 1-5 mixer controls. Do not exceed 1 minute operating time while mixing at Turbo speed. Turn OFF and allow unit to rest for a minute before turning ON again.
- Switch OFF and unplug the Hand Mixer from outlet when not in use or before cleaning.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.



2

- To reduce the risk of electric shock, do not immerse or expose the Hand Mixer to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Hand Mixer is intended for normal domestic/household use only. This model is not suitable for commercial use.

HOW TO USE

- Fit the Beater into the Beater Holes of the mixer.
- Plug in Hand Mixer to the power outlet.
- Hold the mixer handle. Lower Beaters into the ingredients.
- Turn ON and select speed of mixing by adjusting the Speed Control switch.
- While mixing, you may press Turbo button to accelerate speed.
- Wait until the Beaters have stopped spinning.
- Switch OFF and unplug mixer before placing and replacing Beaters.
- Eject Beaters by pressing the Eject button.

MIXING GUIDE

SPEED	DESCRIPTION
1 (Fold)	starting speed for bulk and dry ingredients such as flour, butter, and potatoes
2 (Blend)	used for mixing liquid ingredients such as salad dressings
3 (Mix)	for mixing cakes, cookies and quick breads
4 (Cream)	for creaming butter and sugar, beating uncooked candies, desserts and etc.
5 (Whip)	for beating eggs, cooked icings, whipping cream, potatoes and etc.
Turbo	used to accelerate speed during mixing

CLEAN AND CARE

- Remove Beaters from the mixer.
- Never allow mixer motor to get penetrated by water.



- Wash Beaters with hot and soapy water.
- Wipe motor housing of the Hand mixer using a soft and damp cloth.
- Wipe dry all parts using a soft and dry cloth.



- Do not use harsh cleaning agents or abrasive objects (e.g. scrubbing pads or metal brushes) for cleaning.
- Put back parts and accessories of the Hand Mixer to their proper places before operating again.
- Store mixer in a cool and dry place.

SERVICE

- Do not operate your KYOWA Hand Mixer if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Hand Mixer by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.