

KYOWA SERVICE CENTER (MAIN)

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA
TEL: 242-1731 - 35

METRO MANILA

TRONIX QUEZON CITY (MAIN) #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE, Q.C.
TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489 CONTACT PERSON: MS. JENIELYN MANZANO

TRONIX MANILA #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN MIGUEL, MANILA (NEAR MALACAÑANG)
TEL: 743-4088 MOBILE: 0922-7909555 CONTACT PERSON: MS. ANALEN FIADACAN

TRONIX STA. CRUZ #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA. CRUZ, MANILA
TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971 CONTACT PERSON: MS. SHEILA PIRANTE

TRONIX SAN JUAN #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG BATO, SAN JUAN CITY
TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653 CONTACT PERSON: MS. MICHELLE CASAÑA

TRONIX ALABANG TOWN CENTER LA-7 SERVICE TOWN, ALABANG TOWN CENTER, MUNTINLUPA CITY
TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059 CONTACT PERSON: MR. FRANCIS ACOSTA

TRONIX PARAÑAQUE #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF HOME, PARAÑAQUE
TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806 CONTACT PERSON: MS. ELIZABETH PALIMA

TRONIX MAKATI #103 MJM BLDG, 650 JP RIZAL ST, BRGY. VALENZUELA MAKATI CITY
TEL: 710-1980 / 949-3684 MOBILE: 0932-1999085

TRONIX MARIKINA #572 J.P. RIZAL AVE, CONCEPCION 1, MARIKINA (IN FRONT OF KSERVICO)
TEL: 696-6411 MOBILE: 0942-0940088

TRONIX PASIG LOWER GROUND SERVICE LANE, SM CENTER, PASIG
TEL: 703-5599 / 234-9020 MOBILE: 0932-1999372 CONTACT PERSON: MS. NORA CRESENCIO

TRONIX SHAW - MANDALUYONG #412 SHAW BLVD, COR. TORRES & CALDERON ST, MANDALUYONG CITY
TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350 CONTACT PERSON: MS. SHERLY DELA CRUZ

TRONIX COMMONWEALTH LAGMANLAG COMMONWEALTH AVE, HOLY SPIRIT, DILIMAN, Q.C. (BESIDE SHELL)
TEL: 623-7266 MOBILE: 0933-6584465 / 09175810546 CONTACT PERSON: MR. MANNY SAGAYAP

CAVITE

TRONIX CAVITE KM 16, AGUINALDO HI-WAY, NIOG 1-A, PANAPAAN 1, BACOR, CAVITE
TEL: (046) 519-0755 / (046) 475-6362 MOBILE: 0932-1991811 CONTACT PERSON: MS. MEANN DIONISIO

CEBU

MARKWELL ENTERPRISES #85 SIKATUNA ST, CEBU CITY
TEL: (032) 253-0752 MOBILE: 0917-6256934 CONTACT PERSON: MR. BOY SOUICO

BIO PLUS ELEC. REPAIR CENTER C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY
TEL: (032) 262-1339 MOBILE: 0922-4744991 CONTACT PERSON: MS. ZYSELDA MABUTE

DAVAO

KOOL EXPRESS DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY
TEL: (082) 227-6369 MOBILE: 0908-420-6303 CONTACT PERSON: MS. DORIS ASIRIT

ILOILO

NACES APPLIANCE CORPORATION NACES BLDG, #10 DELGADO ST, ILOILO
TEL: (033) 337-7696 MOBILE: (033) 508-2205 CONTACT PERSON: MS. LORELIE LIM

TARLAC

TARLAC MAC ENTERPRISES INC. BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC
TEL: (045) 982-3178 MOBILE: 0922-8597136



FOOD PROCESSOR

MODEL # KW-4650

Voltage: 230Va.c. 60Hz Power: 500 WATTS



INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Food Processor model no. KW-4650.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Food Processor to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION



1 FRENCH FRY BLADE
2 COARSE SHREDDING BLADE
3 FINE SHREDDING BLADE
4 THICK SLICING BLADE
5 THIN SLICING BLADE
6 PLUNGER
7 FOOD CHUTE
8 COVER

9 SPEED CONTROL KNOB
10 MOTOR BODY
11 BLADE HOLDER
12 BOWL
13 DRIVER
14 BLADE ADAPTOR
15 CHOPPING BLADE
16 BLENDER PITCHER

IMPORTANT SAFEGUARDS

When using the Food Processor, basic safety precautions should always be followed:

- Always operate your KYOWA Food Processor from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not place the unit on uneven surfaces. Place upon a flat area surface and far from the edge of counter top.
- Do not use Food Processor in damp or wet area. Keep dry the motor unit of the Food Processor.
- Do not operate the Food Processor if any part of it including its supply cord has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your KYOWA Food Processor on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories other than the ones originally provided.
- Always secure Food Processor container and motor into place before operating the unit.
- Always ensure that the cover is tightly closed while the Food Processor is in operation.
- While operating, hold to support Food Processor body to avoid any untoward incidents.
- Use a spatula to push or mix foods to be processed inside the Food Processor. Never use your finger to remove food from the Food Processor.
- Always remove blade from the Food Processor before scooping out food from the container.
- Do not overload Food Processor by putting too much food on the container exceeding the line indicated on the Food Processor container.
- Food Processor must not be used exceeding 1 minute at stretch. Allow Food Processor to rest for about a minute before operating again.
- Wait until the Food Processor has completely stopped processing before removing cover from the Bowl.
- Switch OFF and unplug the Food Processor outlet before emptying, when not in use or before cleaning.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- To reduce the risk of electric shock, do not immerse or expose the Food Processor to rain, moisture or any liquid.
- Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Be careful if hot liquid is poured into the food processor as it can be ejected out of the appliance due to a sudden steaming.
- Keep out of reach from children or from persons with mental or physical disabilities.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This KYOWA Food Processor is intended for normal domestic/household use only. This unit is not suitable for commercial use.

HOW TO USE

CHOPPING BLADE

1. Position Driver on the Motor Base.
2. Put Bowl over the Driver; turn clockwise until the bowl is firmly locked in place.
3. Place Blade Adaptor on the Driver.
4. Place Chopping Blade on the Blade Adaptor.
5. Put the required food to be chopped on the bowl. (refer to table below for loading capacity)
6. Pre-slice onions and other rounded hard fruits and vegetables into quarters before loading into the bowl.
7. Place Cover into the bowl; rotate clockwise until the cover is firmly locked in place otherwise, the unit will not operate.
8. Select the required speed for the food that you are processing or turn and hold to Pulse setting for controlled cycle operation.
9. Chopping size and texture depends on how long you process food. If you want coarse texture, process for at least 5 seconds; 10 seconds and up if you want finer food texture.

Processed Food	Measurement per batch
Chocolate	≤100g
Cheese	≤200g
Meat	≤500g
Tea or Spice	50~100g
Fruit & Vegetable	100~300g
Onion	≤500g

SLICING AND SHREDDING BLADES

1. Position Driver on the Motor Base.
2. Put Food Bowl over the Driver; turn clockwise until the bowl is firmly locked in place.
3. Attach required blade into the Blade Holder.

4. Fix blade and blade holder assembly into the Driver.
5. Place Cover into the bowl; rotate clockwise until the cover is firmly locked in place otherwise, the unit will not operate.
6. Select the required speed for the food that you are processing or turn and hold to Pulse setting for controlled cycle operation.
7. Insert food to be sliced or shred into the food chute.
8. Push food into the blades by using the plunger.

BLENDER

1. Fix blender pitcher into the Motor Base by rotating clockwise until it locks in place.
2. Wash food to be processed in the blender then cut into small pieces not larger than 1 inch.
3. Secure blender pitcher with the cover.
4. Select the required speed for the food that you are processing or turn and hold to Pulse setting for controlled cycle operation. Pulse and Level 2 Speed Setting may be used for solid food ingredients, while Speed Level 1 may be used for liquid ingredients only.

CLEAN AND CARE

- After every use, wash movable parts of the Food Processor including the container, blade and lid with warm, soapy water.
- Never immerse Food Processor motor in water. Clean motor housing by wiping with a soft and damp cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Wipe dry all parts of the Food Processor using a soft and dry cloth.
- Put back parts and accessories of the Food Processor to their proper places before operating again.
- Store Food Processor in a cool and dry place.

SERVICE

- Do not operate your KYOWA Food Processor if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Food Processor by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.