

**KYOWA SERVICE CENTER (MAIN)**

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA  
TEL: 242-1731 – 35

**METRO MANILA**

**TRONIX - QUEZON CITY (MAIN)** #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE,  
Q.C.

TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489

**TRONIX - MANILA** #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN  
MIGUEL, MANILA (NEAR  
MALACAÑANG)

TEL: 743-4088 MOBILE: 0922-7909555

**TRONIX - STA. CRUZ** #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA.  
CRUZ, MANILA

TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971

**TRONIX SAN JUAN** #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG  
BATO, SAN JUAN CITY

TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653

**TRONIX - ALABANG TOWN CENTER** LA-7 SERVICE TOWN, ALABANG TOWN CENTER,  
MUNTINLUPA CITY

TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059

**TRONIX - PARAÑAQUE** #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF  
HOME, PARAÑAQUE

TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806

**TRONIX - MARIKINA** #37 BAYAN-BAYANAN AVE, CONCEPCION, MARIKINA

TEL: 621-4663 MOBILE: 0942-0940088

**TRONIX SHAW - MANDALUYONG** #412 SHAW BLVD, COR. TORRES & CALDERON ST,  
MANDALUYONG CITY

TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350

**PRECISION ELECTRONICS - VALENZUELA** #95 STALL #2 MAC ARTHUR HIGH WAY  
MARULAS, VALENZUELA

TEL: 239-2261 MOBILE: 0943-060-5057

**TARLAC**

**TARLAC MAC ENTERPRISES INC.** BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC

TEL: (045) 982-3178 MOBILE: 0922-8597136

**OLONGAPO**

**OBP TRADING.** 13 GORDON AVENUE PAG-ASA OLONGAPO CITY

TEL: (047) 222-8461 MOBILE: 0999-972-0250

TEL: (074) 422-2862 / (074) 423-2044 MOBILE: 0922-8597136

**BAGUIO**

**JCF ELECTRONICS REPAIR SHOP.** 322-A LOWER MAGSAYSAY BAGUIO CITY

TEL: (074) 422-2862 / (074) 423-2044 MOBILE: 0922-8597136

**CATANDUANES**

**TARLAC MAC ENTERPRISES INC.** SAN ROQUE SAN ANDRES, CATANDUANES

TEL: (045) 982-3178 MOBILE: 0922-8597136

**TACLOBAN**

**ELECTRONICS CITY AND SERVICE CENTER, INC.** RIZAL AVE., EXTN., BRGY. 42, TACLOBAN  
CITY

TEL: (053) 888-0689 MOBILE: 0922-8597136

**ALBAY**

**JO-ADEL ELECTRONICS REPAIR SHOP** PI-02 SAINT ANTHONY ST., SAN JUAN, TABACO  
CITY ALBAY

MOBILE: 0928-602-7736

**CALBAYOG**

**JOVAN APPLIANCE SERVICE CENTER** BRGY. OBRERO, CALBAYOG CITY

MOBILE: 0917-627-4802 / 0906-474-6426

**BACOLOD**

**WESTERN ELECTRONICS** Western Electronics door 9-12 Migant Center Cor. Burgos Locsin St.,  
Bacolod City

TEL: (034) 434-9408 MOBILE: 0933-864-1976

**CEBU**

**MARKWELL ENTERPRISES** #85 SIKATUNA ST, CEBU CITY

TEL: (032) 253-0752 MOBILE: 0917-6256934

**BIO PLUS ELEC. REPAIR CENTER** C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY

TEL: (032) 262-1339 MOBILE: 0922-4744991

**DAVAO**

**KOOL EXPRESS** DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY

TEL: (082) 227-6369 MOBILE: 0908-420-6303

**ILOILO**

**NACES APPLIANCE CORPORATION** NACES BLDG, #10 DELGADO ST, ILOILO

TEL: (033) 337-7696 MOBILE: (033) 508-2205



# FOOD PROCESSOR

**MODEL # KW-4655**

Voltage: 230Va.c. 60Hz Power: 500 WATTS



## INSTRUCTION MANUAL

## CONGRATULATIONS

You are now a proud new owner of a KYOWA Food Processor model no. KW-4655.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Food Processor to a third party, please hand over this instruction manual as well.

## PARTS DESCRIPTION



- 1 FRENCH FRY BLADE
- 2 COARSE SHREDDING BLADE
- 3 FINE SHREDDING BLADE
- 4 THICK SLICING BLADE
- 5 THIN SLICING BLADE
- 6 PLUNGER
- 7 FOOD CHUTE
- 8 COVER

- 9 SPEED CONTROL KNOB
- 10 MOTOR BODY
- 11 BLADE HOLDER
- 12 BOWL
- 13 DRIVER
- 14 BLADE ADAPTOR
- 15 CHOPPING BLADE
- 16 BLENDER PITCHER

## **IMPORTANT SAFEGUARDS**

When using the Food Processor, basic safety precautions should always be followed:

- Always operate your KYOWA Food Processor from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not place the unit on uneven surfaces. Place upon a flat area surface and far from the edge of counter top.
- Do not use Food Processor in damp or wet area. Keep dry the motor unit of the Food Processor.
- Do not operate the Food Processor if any part of it including its power supply cord has been damaged. Return the appliance to the nearest authorized service facility for repair.
- Do not operate or place any part of your KYOWA Food Processor on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories other than the ones originally provided.
- Always secure Food Processor container and motor into place before operating the unit.
- Always ensure that the cover is tightly closed while the Food Processor is in operation.
- While operating, hold to support Food Processor body to avoid any untoward incidents.
- Use a spatula to push or mix foods to be processed inside the Food Processor. Never use your finger to remove food from the Food Processor.
- Always remove blade from the Food Processor before scooping out food from the container.
- Do not overload Food Processor by putting too much food on the container exceeding the line indicated on the Food Processor container.
- Food Processor must not be used exceeding 1 minute at stretch. Allow Food Processor to rest for about a minute before operating again.
- Wait until the Food Processor has completely stopped processing before removing cover from the Bowl.
- Switch OFF and unplug the Food Processor outlet before emptying, when not in use or before cleaning.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- To reduce the risk of electric shock, do not immerse or expose the Food Processor to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This KYOWA Food Processor is intended for normal domestic/household use only. This unit is not suitable for commercial use.

## **HOW TO USE**

### **CHOPPING BLADE**

1. Position Driver on the Motor Base.
2. Put Bowl over the Driver; turn clockwise until the bowl is firmly locked in place.
3. Place Blade Adaptor on the Driver.
4. Place Chopping Blade on the Blade Adaptor.
5. Put the food to be processed on the bowl.
6. Pre-slice onions and other rounded hard fruits and vegetables into quarters before loading into the bowl.
7. Place Cover into the bowl; rotate clockwise until the cover is firmly locked in place otherwise, the unit will not operate.
8. Select the required speed for the food that you are processing or turn and hold to Pulse setting for controlled cycle operation.
9. Chopping size and texture depends on how long you process food. If you want coarse texture, process for at least 5 seconds; 10 seconds and up if you want finer food texture.

### **SLICING AND SHREDDING BLADES**

1. Position Driver on the Motor Base.
2. Put Food Bowl over the Driver; turn clockwise until the bowl is firmly locked in place.
3. Attach required blade into the Blade Holder.
4. Fix blade and blade holder assembly into the Driver.
5. Place Cover into the bowl; rotate clockwise until the cover is firmly locked in place otherwise, the unit will not operate.
6. Select the required speed for the food that you are processing or turn and hold to Pulse setting for controlled cycle operation.
7. Insert food to be sliced or shred into the food chute.
8. Push food into the blades by using the plunger.

### **DRY MILL**

- Put ingredients to be processed in the dry mill cup.
- Attach dry mill blade assembly into the cup then turn clockwise until it is locked in place.
- Place dry mill assembly on the motor base.
- Select required speed for the food you are going to process.

- Allow dry mill to process for about 10 seconds then turn OFF. Allow to rest for a couple of seconds then turn ON again.
- Repeat process until food is well milled.

## **BLENDER**

1. Fix blender pitcher into the Motor Base by rotating clockwise until it locks in place.
2. Wash food to be processed in the blender then cut into small pieces not larger than 1 inch.
3. Secure blender pitcher with the cover.
4. Select the required speed for the food that you are processing or turn and hold to Pulse setting for controlled cycle operation. Pulse and Level 2 Speed Setting may be used for solid food ingredients, while Speed Level 1 may be used for liquid ingredients only.

## **CLEAN AND CARE**

- After every use, wash movable parts of the Food Processor including the container, blade and lid with warm, soapy water.
- Never immerse Food Processor motor in water. Clean motor housing by wiping with a soft and damp cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Wipe dry all parts of the Food Processor using a soft and dry cloth.
- Put back parts and accessories of the Food Processor to their proper places before operating again.
- Store Food Processor in a cool and dry place.

## **SERVICE**

- Do not operate your KYOWA Food Processor if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA service centers for inspection, repair or replacement.
- Do not disassemble your KYOWA Food Processor by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.