

KYOWA SERVICE CENTER (MAIN)

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines
242-1731 to 35



BLENDER

MODEL NO. KW-4724

Voltage: 230V a.c. 60Hz Power: 500 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Blender model no. KW-4724.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Blender to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

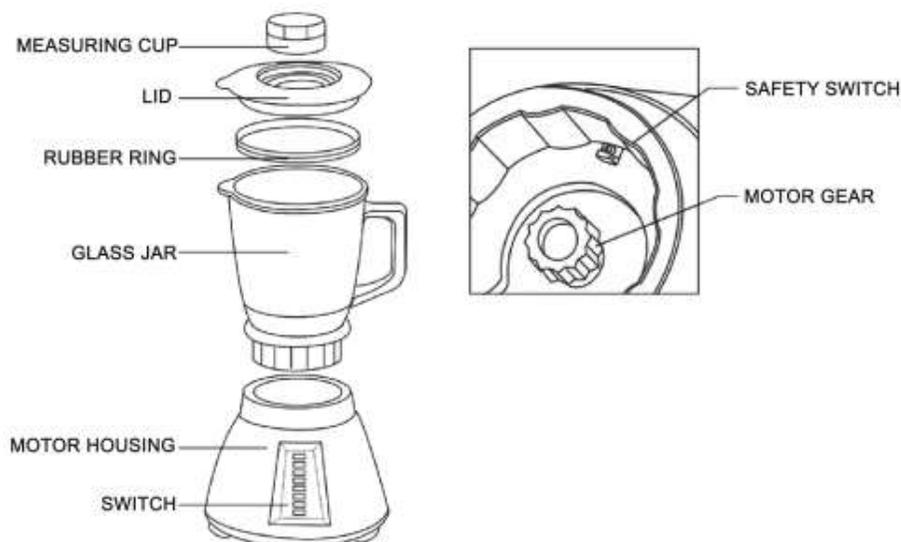

IMPORTANT SAFEGUARDS

When using your Blender, basic safety precautions should always be followed:

- Always operate your KYOWA Blender from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not place the unit on uneven surfaces. Place Blender upon a flat area surface and far from the edge of counter top.
- Do not use Blender in damp or wet area. Keep dry the exterior and the base of the Blender.
- Do not operate the Blender if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your KYOWA Blender on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories other than the ones originally provided.
- Always ensure that the Blender container is firmly attached to the base before operating.
- Always put in Blender container cover before turning ON the unit.
- Foods to be processed in the Blender should not be larger than 1 inch.
- Always ensure that the cover is tightly closed while the Blender is in operation.
- While operating, hold to support Blender container cover to avoid any untoward incidents.
- Always choose the lowest setting first when using the Blender. Set higher speed level if you notice that Blender is taking much time processing food.
- Remove feeder cap from the Blender container cover when processing hot liquids.
- Use a rubber spatula to push or mix foods to be processed inside the Blender. Make sure that the unit is turned OFF when mixing foods inside the container.
- Do not overload Blender by putting too much food on the container exceeding the MAX line indicated on the Blender container.
- Never leave the Blender unattended when in use.
- Wait until the Blender has completely stopped processing before removing container from the base.
- Switch OFF and unplug the Blender outlet before emptying, when not in use or before cleaning.

- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- To reduce the risk of electric shock, do not immerse or expose the Blender to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Blender is intended for normal domestic/household use only. This unit is not suitable for commercial use.

HOW TO USE

- Remove all packaging materials from the Blender. Completely untangle or unwind the power cable of the unit.
- Wash food to be processed in the blender then cut into small pieces not larger than 1 inch.
- Put sliced fruits or vegetables inside the Blender Container then secure with the cover – aligning the lock drawing into the handle of the jar.
- Place Blender Jug on the Motor Base.
- Place Refill Cup on top of the Lid.
- Rest hand on the container cover to support the unit while in operation.
- Select the required speed for the food that you are processing by pressing down 1 to 5 buttons. Press down Switch button then press down 6 to 10 buttons for higher speed setting requirement.
- Press down Pulse button for a controlled blender cycle operation.
- Allow blender to run for about 1 minute then turn OFF. Allow unit to rest for about 1 minute then repeat process until the food that you are processing is already well blended.
- To add ingredients while blending, remove refill cup and gradually add ingredients into the small opening on the cover.
- Press down OFF button or release Pulse button to turn unit to OFF.

CLEAN AND CARE

- After every use, wash movable parts of the blender with warm, soapy water. You may also use the dishwasher to clean the glass jar, lid and refill cup of the Blender unit.
- The blender container may be washed by putting water and a few drops of liquid detergent on it. Place blender container in the motor base then allow to operate for about 10 seconds. Discard liquid then rinse blender container thoroughly.
- Never immerse blender motor in water. Clean motor housing by wiping with a soft and damp cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Wipe dry all parts of the blender using a soft and dry cloth.
- Store blender in a cool and dry place.
- Put back parts and accessories of the blender to their proper places before operating again.

SERVICE

- Do not operate your KYOWA Blender if the Blender malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Blender by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.