

## **KYOWA SERVICE CENTER**

Rm. 1203 State Center Building  
#333 Juan Luna St., Binondo  
Manila, Philippines



## **BLENDER**

**MODEL NO.: KW-4729**

Voltage: 230V a.c. 60Hz Power: 700 WATTS




**INSTRUCTION MANUAL**

## CONGRATULATIONS

You are now a proud new owner of a KYOWA Blender model no. KW-4729.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Blender to a third party, please hand over this instruction manual as well.

## PARTS DESCRIPTION

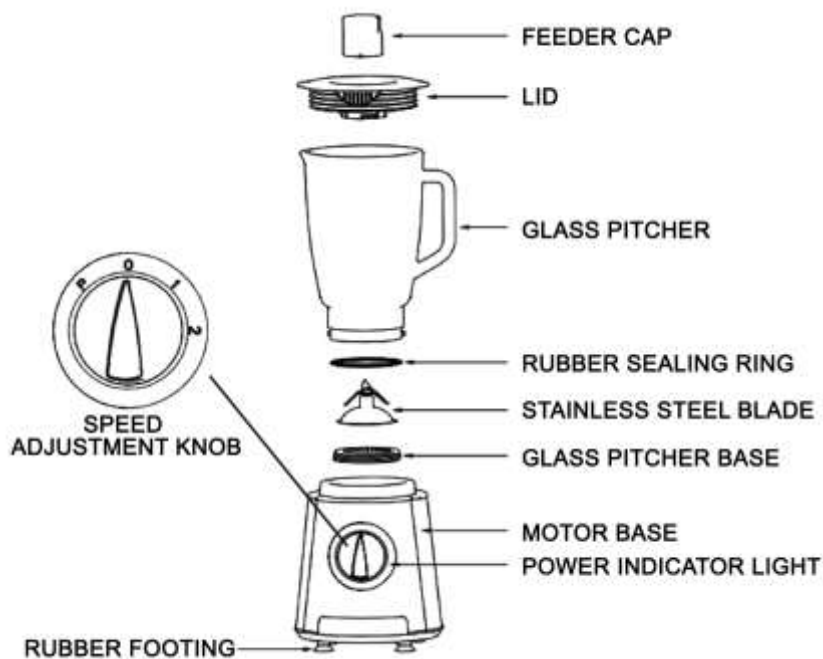

## IMPORTANT SAFEGUARDS

When using your Blender, basic safety precautions should always be followed:

- Always operate your KYOWA Blender from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not place the unit on uneven surfaces. Place Blender upon a flat area surface and far from the edge of counter top.
- Do not use Blender in damp or wet area. Keep dry the exterior and the base of the Blender.
- Do not operate the Blender if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your KYOWA Blender on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories other than the ones originally provided.
- Always ensure that the Blender pitcher is firmly attached to the motor base before operating.
- Always put in Blender pitcher lid before turning ON the unit.
- Food to be processed in the Blender should not be larger than 1 inch.
- Always ensure that the cover is tightly closed while the Blender is in operation.
- While operating, hold to support Blender pitcher cover to avoid any untoward incidents.
- Always choose the lowest setting first when using the Blender. Set higher speed level if you notice that Blender is taking much time processing food.
- Use a rubber spatula to push or mix foods to be processed inside the Blender. Make sure that the unit is turned OFF when mixing foods inside the pitcher.
- Do not overload Blender by putting too much food on the pitcher exceeding the highest line indicated on the Blender pitcher.
- Never leave the Blender unattended when in use.
- Wait until the Blender has completely stopped processing before removing pitcher from the base.
- Switch OFF and unplug the Blender outlet before emptying, when not in use or before cleaning.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.

- To reduce the risk of electric shock, do not immerse or expose the Blender to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Blender is intended for normal domestic/household use only. This unit is not suitable for commercial use.

## HOW TO USE

- Remove all packaging materials from the Blender. Completely untangle or unwind the power cable of the unit.
- Wash food to be processed in the blender then cut into small pieces not larger than 1 inch.
- Put sliced fruits or vegetables inside the Glass Pitcher then secure with the Lid.
- Place Glass Pitcher on the Motor Base.
- Place feeder cap on top of the Lid.
- Rest hand on the pitcher lid to support the unit while in operation.
- Select the required speed for the food that you are processing by rotating speed adjustment knob clockwise to speed level 1 or 2. Rotate knob counter clockwise and hold to Pulse switch for controlled cycle operation.
- Allow blender to run for about 1 minute then turn OFF. Allow unit to rest for about 1 minute then repeat process until the food that you are processing is already well blended.
- To add ingredients while blending, remove feeder cap and gradually add ingredients into the small opening on the lid.
- Rotate knob to 0 or release Pulse switch when you are done using the blender to turn the unit OFF.

## CLEAN AND CARE

- After every use, wash movable parts of the blender with warm, soapy water. You may also use the dishwasher to clean the pitcher, lid and refill cup of the Blender unit.
- The blender pitcher may be washed by putting water and a few drops of liquid detergent on it. Place blender pitcher in the motor base then allow to operate for about 10 seconds. Discard liquid then rinse blender pitcher thoroughly.
- Never immerse blender motor in water. Clean motor housing by wiping with a soft and damp cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Wipe dry all parts of the blender using a soft and dry cloth.
- Store blender in a cool and dry place.
- Put back parts and accessories of the blender to their proper places before operating again.

## SERVICE

- Do not operate your KYOWA Blender if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Blender by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.