

KYOWA SERVICE CENTER

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines



ELECTRIC ICE SHAVER

MODEL # KW-5100

Voltage: 230V a.c. 60Hz Power: 40 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Electric Ice Shaver model no. KW-5100.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Electric Ice Shaver to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

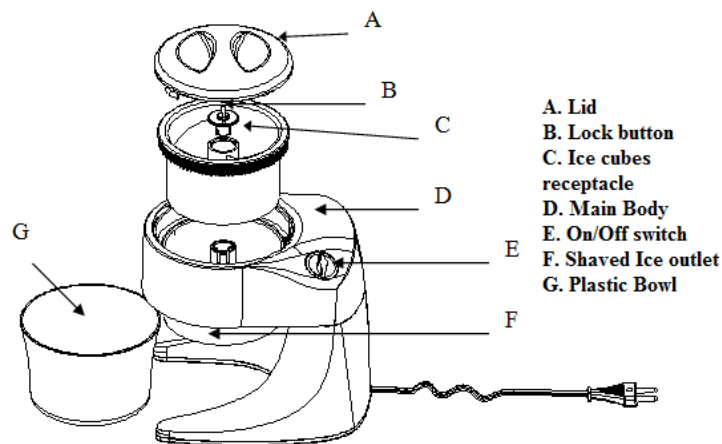

IMPORTANT SAFEGUARDS

When using the Electric Ice Shaver, basic safety precautions should always be followed:

- Always operate your KYOWA Electric Ice Shaver from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not place the ice shaver on uneven surfaces. Place upon a flat, non-slip area surface and far from the edge.
- Do not operate the Electric Ice Shaver if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your KYOWA Electric Ice Shaver on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories other than the ones originally provided.
- Never put your fingers or any utensil into the processing chamber to free any stuck ice.
- Do not operate Electric Ice Shaver for more than 3 minutes at stretch. Allow unit to rest for 1 minute before turning ON again.
- Do not use ice shaver for crushing frozen fruit juices or any other frozen liquids other than water ice cubes to avoid damaging or corroding internal components.
- Never leave the ice shaver unattended when in use.
- Switch OFF and unplug the Electric Ice Shaver from outlet before filling, emptying, when not in use or before cleaning.
- Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- To reduce the risk of electric shock, do not immerse or expose the ice shaver to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Electric Ice Shaver is intended for normal domestic/household use only. This unit is not suitable for commercial use.

HOW TO USE

- Place Ice Cubes Receptacle inside the Main Body of the ice shaver. Be extra careful when assembling ice shaver to avoid getting cut from the blade inside.
- Put ice cubes inside the Ice Receptacle. The size of ice cubes to be used should not be larger than 25 x 25 x 25 mm (1' x 1' x 1') and not more than 400 grams.
- Put Lid on top of the Ice Receptacle by turning it clockwise. A click sound indicates that the Lid is secured in place.
- Place the Ice Receptacle Bowl below the Shaved Ice Outlet.
- Turn ON the unit.
- Repeat operation until you have crushed desired amount of ice or the bowl is already full.

CLEAN AND CARE

- Clean Electric Ice Shaver after every use.
- Use a soft, damp cloth when cleaning the external parts of the ice shaver.
- Wash Lid and Ice Receptacle with warm soapy water.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Do not use dishwasher for cleaning movable parts of the ice shaver.
- After washing, wipe dry all parts with a soft, dry cloth.
- Put back parts and accessories of the ice shaver to their proper places before operating again.
- Store in a cool and dry place.

SERVICE

- Do not operate your KYOWA Electric Ice Shaver if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Electric Ice Shaver by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.