

KYOWA SERVICE CENTER

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines



HAIR DRYER

MODEL # KW-5819

Voltage: 230V a.c. 60Hz Power: 1200 WATTS




INSTRUCTION MANUAL

CONGRATULATIONS!

You are now a proud new owner of a KYOWA Hair Dryer model no. KW-5819.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Hair Dryer to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

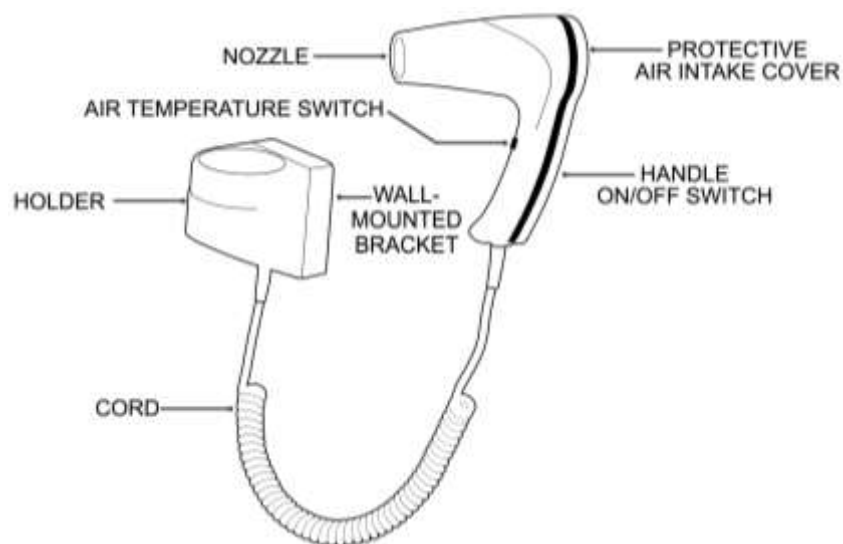

IMPORTANT SAFEGUARDS

When using the Hair Dryer, basic safety precautions should always be followed:

- Always operate your KYOWA Hair Dryer from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not operate the Hair Dryer if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your Hair Dryer on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories of the Hair Dryer, other than the ones originally provided.
- Do not touch Hair Dryer with wet hands.
- Do not attach the air diffuser nozzle on the Hair Dryer while it is turned ON.
- Avoid touching hot surfaces of the Hair Dryer during use. Use the handle only.
- Never leave the Hair Dryer unattended when turned ON.
- Always turn setting controls to OFF before disconnecting the cord from the power supply. Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- Do not tie power plug around the Hair Dryer.
- Switch OFF and unplug the Hair Dryer from outlet when not in use or before cleaning.
- To reduce the risk of electric shock, do not immerse or expose the Hair Dryer to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Hair Dryer is intended for normal domestic/household use only. This model is not suitable for commercial use.

HOW TO USE

WALL BRACKET INSTALLATION

- Make sure the hair dryer is unplugged from the power supply.
- Remove screws to detach hair dryer holder from the bracket.
- Place the bracket on the wall where you are intending to install holder.
- Mark holes on the wall where the screws will be fixed.
- Drill 35mm deep into the wall.
- Screw in bracket into the wall firmly.
- Screw in hair dryer holder into the bracket.

PROPER USAGE

- Plug hair dryer in the power outlet.
- Hold Hair Dryer in the handle then turn it around, facing upward.
- Turn ON Hair Dryer by pressing handle.
- Adjust switch from I, II or COLD air temperature setting.
- While drying your hair, avoid any direct contact of the Hair Dryer into your eyes.
- Turn OFF, rest hair dryer into the holder and unplug unit after use.

CLEAN AND CARE

- Always unplug Hair Dryer from outlet after every use.
- Wipe dryer thoroughly with a soft and dry cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Avoid any kind of moisture in your Hair Dryer.
- Store Hair Dryer in a cool and dry place after cleaning.

SERVICE

- Do not operate your KYOWA Hair Dryer if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Hair Dryer by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.