

KYOWA SERVICE CENTER (MAIN)

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines
242-1731 to 35

AFFILIATED TRONIX SERVICE CENTERS:

- 1. TRONIX MAIN Q.C.**
777 N.S. AMORANTO ST., COR. STO. DOMINGO AVE., Q.C.
TEL NOS. 749-8477 / 743-9094 / 4132775 / 743-0354
CELLPHONE NO: 0922-8534797
CONTACT PERSON: MS. SHARENE TAN
- 2. TRONIX SAN JUAN BRANCH**
135 N. DOMINGO ST., COR. PINAGLABANAN, SAN JUAN
TEL NO: 721-9147
CELLPHONE NO: 0922-9218653
CONTACT PERSON: MS. MAY BONZON
- 3. TRONIX MANILA BRANCH**
1793 CONCEPCION AGUILA ST., NEAR J.P. LAUREL,
SAN MIGUEL MANILA
TEL NO: 734-4088
CELLPHONE NO: 0922-7909555
CONTACT PERSON: MS. ANGEL BARBASTRO
- 4. TRONIX STA. CRUZ BRANCH**
#910 LUZON ST., (BET MASANGKAY & BENAVIDEZ ST)
STA CRUZ MANILA
TEL NO: 310-3353
CELLPHONE NO: 0922-2389971
CONTACT PERSON: MS. SHIRLEY DELA CRUZ
- 5. TRONIX ALABANG TOWN CENTER BRANCH**
LA-7 SERVICE TOWN, ALABANG TOWN CENTER,
MUNTINLUPA CITY
TEL NO: 807-3546
CELLPHONE NO: 0922-7584917
CONTACT PERSON: MS. EVELYN DENING
- 6. TRONIX PARANAQUE BRANCH**
#51 PRESIDENT AVE., BF HOMES PARANAQUE
TEL NO: 828-2915
CELLPHONE NO: 0932-4060806
CONTACT PERSON: MS. ELIZABETH PALIMA
- 7. TRONIX CAVITE BRANCH**
GOV DRIVE, BRGY LANGKAAN II (INFRONT OF FCIE
COMPOUND) CATHERINE SQUARE BLDG II, DASMARINAS
CAVITE
TEL NOS.: 475-6362 / (046) 852-2955
CELLPHONE NO: 0922-3377214
CONTACT PERSON: MR. ARSENIO ANGELES
- 8. TRONIX MANDALUYONG BRANCH**
#412 SHAW BOULEVARD COR TORRES ST.,
MANDALUYONG CITY
TEL NOS.: 725-7290
CONTACT PERSON: MS. JENY



BOX FAN

MODEL # KW-6910

Voltage: 230V a.c. 60Hz Power: 35 WATTS



INSTRUCTION MANUAL


CONGRATULATIONS

You are now a proud new owner of a KYOWA Box Fan model no. KW-6910.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Box Fan to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

A	Speed Selector Knob
B	Timer Knob
C	Fan Blade
D	Grille Lock
E	Grille
F	Stand

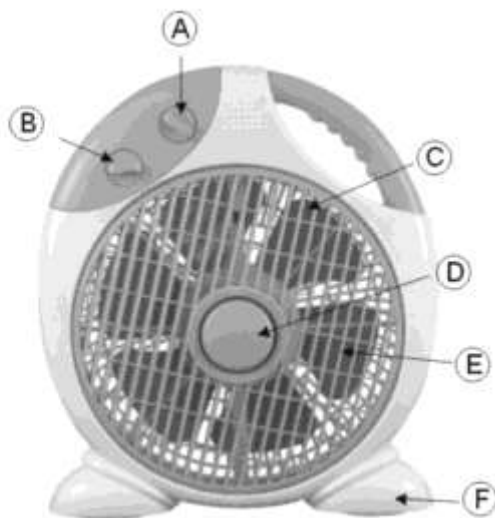

IMPORTANT SAFEGUARDS

When using your Box Fan, basic safety precautions should always be followed:

- Always operate your KYOWA Box Fan from a power source of the same voltage and frequency rating as indicated on the rating label.
- Place the Box Fan on a flat surface and far from the edge of counter top.
- Do not operate the Box Fan if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your Box Fan on or near any hot surface such as gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories of the Box Fan, other than the ones originally provided.
- Switch OFF and unplug the Box Fan from outlet when not in use or before cleaning.
- Always turn setting controls to OFF before disconnecting the cord from the power supply. Hold plug when unplugging from socket. Do not unplug by pulling the supply cord.
- To reduce the risk of electric shock, do not immerse or expose the Box Fan to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- This KYOWA Box Fan is intended for normal domestic/household use only. This model is not suitable for commercial use.

HOW TO USE

- Plug fan into the power outlet.
- Turn Box Fan to the desired speed level from 0 to 3 by turning Speed Selector Knob clockwise or counter clockwise
 - 0 – Stop/OFF
 - 1 – Low
 - 2 – Medium
 - 3 – High
- If you wish your Box Fan to automatically turn OFF after a certain period of time, adjust Time Knob clockwise from 10-60 minutes.
- Remove plug from the power outlet after use.

CLEAN AND CARE

- To clean Box Fan, wipe movable parts of the unit using a soft damp cloth and mild liquid detergent.
- Avoid using harsh or abrasive cleaning materials when cleaning the Box Fan.
- To maintain good performance of the Box Fan, put machine oil in the front and back bearings of the motor once a year.
- Wipe dry Box Fan with a soft and dry cloth.

SERVICE

- Do not operate your KYOWA Box Fan if the unit malfunctions or appears damaged in any manner. Bring the complete unit to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Box Fan by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.