

KYOWA SERVICE CENTER (MAIN)

RM. 1203, STATE CENTER BLDG, #333 JUAN LUNA ST, BINONDO MANILA
TEL: 242-1731 - 35

METRO MANILA

TRONIX QUEZON CITY (MAIN) #777 N.S. AMORANTO ST, COR. STO. DOMINGO AVE, Q.C.
TEL: 743-9094 / 749-8477 MOBILE: 0922-8534797/0917-5231489 CONTACT PERSON: MS. JENIELYN MANZANO

TRONIX MANILA #1793 CONCEPCION AGUILA ST, NEAR J.P. LAUREL ST, SAN MIGUEL, MANILA (NEAR MALACAÑANG)
TEL: 743-4088 MOBILE: 0922-7909555 CONTACT PERSON: MS. ANALEN FIADACAN

TRONIX STA. CRUZ #910 LUZON ST. (BET. MASANGKAY & BENAVIDEZ ST.) STA. CRUZ, MANILA
TEL: 542-8345 / 310-3553 MOBILE: 0922-2389971 CONTACT PERSON: MS. SHEILA PIRANTE

TRONIX SAN JUAN #135 N.DOMINGO ST, CORNER PINAGLABANAN, BRGY. BALONG BATO, SAN JUAN CITY
TEL: 949-3608 / 984-6395 MOBILE: 0922-9218653 CONTACT PERSON: MS. MICHELLE CASAÑA

TRONIX ALABANG TOWN CENTER LA-7 SERVICE TOWN, ALABANG TOWN CENTER, MUNTINLUPA CITY
TEL: 807-3546 / 624-6880 MOBILE: 0922-7584917 / 0917-5899059 CONTACT PERSON: MR. FRANCIS ACOSTA

TRONIX PARAÑAQUE #103 CMSR BLDG, PHASE 1, 88 PRESIDENT AVENUE, BF HOME, PARAÑAQUE
TEL: 622-4540 / 861-0092 / 828-2915 MOBILE: 0917-5978342 / 0932-4060806 CONTACT PERSON: MS. ELIZABETH PALIMA

TRONIX MAKATI #103 MJM BLDG, 650 JP RIZAL ST, BRGY. VALENZUELA MAKATI CITY
TEL: 710-1980 / 949-3684 MOBILE: 0932-1999085

TRONIX MARIKINA #572 J.P. RIZAL AVE, CONCEPCION 1, MARIKINA (IN FRONT OF KSERVICO)
TEL: 696-6411 MOBILE: 0942-0940088

TRONIX PASIG LOWER GROUND SERVICE LANE, SM CENTER, PASIG
TEL: 703-5599 / 234-9020 MOBILE: 0932-1999372 CONTACT PERSON: MS. NORA CRESENCIO

TRONIX SHAW - MANDALUYONG #412 SHAW BLVD, COR. TORRES & CALDERON ST, MANDALUYONG CITY
TEL: 542-8360 / 725-7290 MOBILE: 0923-1646350 CONTACT PERSON: MS. SHERLY DELA CRUZ

TRONIX COMMONWEALTH LAGMANLAG COMMONWEALTH AVE, HOLY SPIRIT, DILIMAN, Q.C. (BESIDE SHELL)
TEL: 623-7266 MOBILE: 0933-6584465 / 09175810546 CONTACT PERSON: MR. MANNY SAGAYAP

CAVITE

TRONIX CAVITE KM 16, AGUINALDO HI-WAY, NIOG 1-A, PANAPAAN 1, BACOR, CAVITE
TEL: (046) 519-0755 / (046) 475-6362 MOBILE: 0932-1991811 CONTACT PERSON: MS. MEANN DIONISIO

CEBU

MARKWELL ENTERPRISES #85 SIKATUNA ST, CEBU CITY
TEL: (032) 253-0752 MOBILE: 0917-6256934 CONTACT PERSON: MR. BOY SOUICO

BIO PLUS ELEC. REPAIR CENTER C. PADILLA ST, SAN ROQUE, MAMBALING, CEBU CITY
TEL: (032) 262-1339 MOBILE: 0922-4744991 CONTACT PERSON: MS. ZYSELDA MABUTE

DAVAO

KOOL EXPRESS DOOR 5, LUA BLDG, QUIRINO AVE, DAVAO CITY
TEL: (082) 227-6369 MOBILE: 0908-420-6303 CONTACT PERSON: MS. DORIS ASIRIT

ILOILO

NACES APPLIANCE CORPORATION NACES BLDG, #10 DELGADO ST, ILOILO
TEL: (033) 337-7696 MOBILE: (033) 508-2205 CONTACT PERSON: MS. LORELIE LIM

TARLAC

TARLAC MAC ENTERPRISES INC. BLK. 9, MCARTHUR HIGHWAY, SAN NICOLAS, TARLAC
TEL: (045) 982-3178 MOBILE: 0922-8597136



ELECTRIC DRY IRON

MODEL NO.: KW-7022

Voltage: 230Va.c. 60Hz Power: 1200 WATTS



INSTRUCTION MANUAL


CONGRATULATIONS

You are now a proud new owner of a KYOWA Electric Dry Iron model no. KW-7022.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Electric Dry Iron to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

1. SPRAY NOZZLE
2. WATER INLET
3. SPRAY BUTTON
4. TEMPERATURE CONTROL
5. CORD
6. POWER INDICATOR LIGHT
7. SOLEPLATE

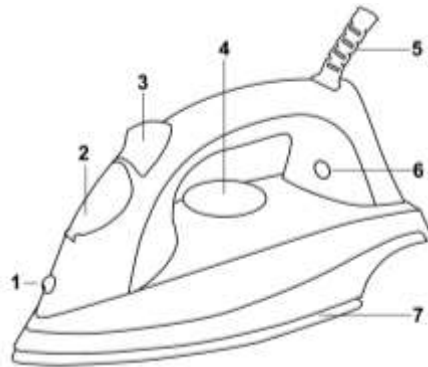

IMPORTANT SAFEGUARDS

When using your KYOWA Electric Dry Iron, basic safety precautions should always be followed:

- Always operate your KYOWA Electric Dry Iron from a power source of the same voltage and frequency rating as indicated on the rating label.
- Do not let the power cord hang over the edge of counter or table.
- Do not operate or place any part of your KYOWA Electric Dry Iron on or near any hot surface such as gas or electric burner, hotplate or heated oven.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect reassembly may cause a risk of electric shock when the iron is in use.
- The iron should always be turned to the lowest setting before plugging or unplugging from outlet.
- Do not allow cord to touch hot surface. Let iron cool down completely before putting away. Loop cord loosely around iron when storing.
- Do not leave iron unattended while connected or in an ironing board. Burns may occur from touching hot metal parts, hot water or steam.
- Avoid touching hot surfaces of the iron during use. Use the handle only.
- Switch off and unplug the iron when not in use.
- The iron must be used and rested on a stable surface
- When placing the iron on the stand, ensure that the surface on which the stand is placed is stable
- To reduce the risk of electric shock, do not immerse or expose the Electric Dry Iron to rain, moisture or any liquid.
- Keep out of reach from children or from persons with mental or physical disabilities.
- Children should be supervised to ensure that they do not play with the appliance.


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This KYOWA Electric Dry Iron is intended for normal domestic/household use only. This unit is not suitable for commercial use.

HOW TO USE

- Before using for the first time, check if the voltage rating on the base plate corresponds to the power outlet in your home.
- Some parts of the iron have been slightly greased and as a result, the iron might slightly emit smoke when connected for the first time. This however, will cease after you have used the iron for some time.
- Classify clothing material according to labels indicated on the dial before use.
- The iron heats up faster than it cools down so it is recommended to begin ironing the clothes which require lower ironing temperature (synthetic fibre, fabric and silk), than clothes of other materials requiring higher temperature (wool, cotton, jute, and etc.).
- Rest the iron vertically and set the Temperature Control Dial at "MIN" setting.
- Insert the plug into the socket, turn the Temperature Control Dial to the temperature point required by the clothing material and aim the material identity mark at the Heating Indicator. You may start ironing when the Indicator Light turns off.
- While ironing, spray water on clothes by pressing the Spray Button.
- Use spray function as often as needed depending on the type and thickness of the cloth you are ironing.
- When using Water Spray function for the first time, you may have to pump Spray Button several times until the iron releases water.
- Try to iron an old piece of cloth first to check the heating level of the iron.

SETTING THE TEMPERATURE

- Turn the Temperature Control Dial to the position according to the following markings:

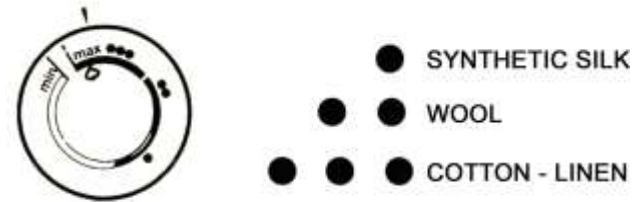

CLEAN AND CARE

- Turn the Temperature Control Dial to "MIN" setting and then unplug from the outlet. Allow the iron to cool completely before putting away.
- When removing the cord from the outlet, grasp the plug rather than pulling the cord.
- Avoid ironing over zippers or rivets on jeans for this may scratch the soleplate.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.

SERVICE

- Do not operate your KYOWA Electric Dry Iron if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Electric Dry Iron by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.