

KYOWA SERVICE CENTER

Rm. 1203 State Center Building
#333 Juan Luna St., Binondo
Manila, Philippines



RECHARGEABLE LANTERN

MODEL # KW-9125

Input Voltage: 230V a.c. 60Hz

Output Voltage: _____


INSTRUCTION MANUAL

CONGRATULATIONS

You are now a proud new owner of a KYOWA Rechargeable Lantern model no. KW-9125.

Before using for the first time, kindly take time to carefully read your instruction manual. Please observe all safety precautions and follow operating procedures. After reading, kindly store your instruction manual in a safe place for your future reference. Should you pass on this Rechargeable Lantern to a third party, please hand over this instruction manual as well.

PARTS DESCRIPTION

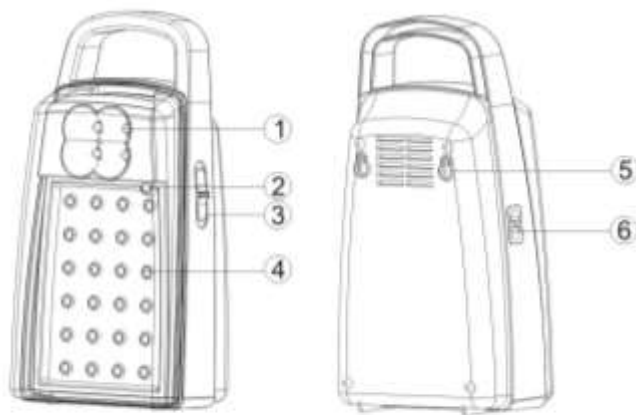

- | | |
|-----------------------------|---------------|
| 1. TORCH LIGHT | 4. LED BULBS |
| 2. CHARGING INDICATOR LIGHT | 5. WALL MOUNT |
| 3. ON/OFF SWITCH | 6. AC SOCKET |

IMPORTANT SAFEGUARDS

When using your Rechargeable Lantern, basic safety precautions should always be followed:

- Always operate your KYOWA Rechargeable Lantern from a power source of the same voltage and frequency rating as indicated on the rating label.
- Connect the lantern only to properly wired wall outlets.
- Place the Rechargeable Lantern on a flat surface and far from the edge of the counter top.
- Do not operate the lantern if any part of it has been damaged. Return the appliance to the nearest authorized dealer or service facility for repair.
- Do not operate or place any part of your Rechargeable Lantern on or near any hot surface such as a gas or electric burner, hotplate or heated oven.
- Do not use or replace accessories of the Rechargeable Lantern, other than the ones originally provided.
- Switch OFF and unplug the lantern when not in use or before cleaning.
- Always hold plug of the Rechargeable Lantern when unplugging from socket. Do not unplug by pulling the supply cord.
- Do not tie power plug around the Rechargeable Lantern.
- Recharge lantern unit at least every three months to prolong battery life.
- To reduce the risk of electric shock, do not immerse or expose the Rechargeable Lantern to rain, moisture or any liquid.

HOW TO USE

HOW TO OPERATE THE LAMP AS EMERGENCY LIGHT

- Plug Rechargeable Lantern into the power outlet.
- Slide power switch to ON position.
- The Rechargeable Lantern will then light ON automatically when there is a power failure.
- Turn unit to OFF when not in use or if the lantern is not intended to be used as emergency light.

HOW TO RECHARGE THE LAMP

- Plug Rechargeable Lantern into the power outlet, red indicator lamp will light up to indicate that the unit is charging.
- For initial use, recharge lantern for 24 hours.
- For subsequent charging, recharge lantern for 18 to 20 hours or until battery is fully charged.

CLEAN AND CARE

- Wipe Rechargeable Lantern thoroughly with a soft and damp cloth.
- Pat dry using a soft and dry cloth.
- Never use abrasive cleaning agents or any metallic and sharp objects (e.g. scrubbing brush or knife) for cleaning.
- Avoid any kind of moisture to seep into your Rechargeable Lantern.
- Store lantern in a cool and dry place after cleaning.

SERVICE

- Do not operate your KYOWA Rechargeable Lantern if the unit malfunctions or appears damaged in any manner. Bring the complete product to the place of purchase or to any authorized KYOWA dealers for inspection, repair or replacement.
- Do not disassemble your KYOWA Rechargeable Lantern by yourself. No user serviceable parts inside. Refer all needed repair to an authorized KYOWA service facility ONLY.