



## **Cleaning & Maintenance Guidelines for Rubber Flooring**

### Initial Cleaning

After installation, the flooring may benefit from a rubber floor degreaser to remove any excess film from the surface before use.

Recommendations - [www.flooringsupplies.co.uk](http://www.flooringsupplies.co.uk)

### Daily Maintenance

To ensure the maximum lifecycle for your rubber floor we recommend a daily routine of cleaning the floor using a light vacuum then mopping the surface with a PH neutral cleaner diluted in warm water solution. We advise using a microfibre mop.

### Deep Cleaning

The flooring should be deep cleaned at least twice a year using a stronger solution of suitable cleaner and a stiff brush with medium bristles. A scrubber drier, rotary cleaner can be used with variable pads to remove surface dirt and body fats.

### Protection

Avoid dragging heavy equipment with wheels over flooring to avoid scratching or permanent damage. Use trolleys with inflatable wheels or manually move heavy equipment.

Use protective matting at entrances and protective pads on furniture, equipment etc.

Avoid steam cleaners, polished wheels, sand and metallic brushes

Avoid stiletto heels

Protect against direct sunlight exposure as this can cause thermal expansion and shrinkage

New flooring will initially have a slight odour which will dissipate within 1-2 weeks