



WOCA WOODCARE

☎ 877-962-2645 ✉ info@wocawoodcare.com

WOCA EXTERIOR CLEANER - APPLICATION INSTRUCTIONS

WOCA Exterior Cleaner is for cleaning of wood decking, garden furniture, wood siding, fences, doors etc. The product removes green growth, dirt and oxidation. Exterior Cleaner is also for cleaning of brickwork and concrete floors.

Work Instructions:

1. Soak the wood with plenty of water, preferably with a garden hose.
2. Mix Exterior Cleaner with water in ratio 1:2 and apply it with a nylon brush or by spraying. For extreme dirt, the Exterior Cleaner may be used undiluted.
3. Scrub the soaked wood thoroughly along the grain until the wood appears clean. Repeat if necessary.
4. Immediately after cleaning, hose down the surface with water.
5. Clean tools in water.
6. Leave the wood to dry for approx. 24 hours. The wood must be completely dry before an oil treatment. Remove any raised fibers with sandpaper.

Tip: For the most effective and fastest cleaning, use WOCA Cleaning Brush under a floor machine.